
Addendum Sheet - I5PF5 I20/28, 20PF5 I20/28

Please refer to the following update reference information in connection to the use and operation of your TV's POWER button (as located on the side of the TV cabinet).

This TV can be in three modes of operation:

OFF - No LED lit on front of TV. Remote transmitter will not operate the TV.


STANDBY - Red LED lit on front of TV. Remote transmitter will operate the TV.

ON - Green LED lit on front of TV. Remote transmitter will operate the TV.

When POWER is pressed on the side of the TV to turn the TV OFF, the TV remembers the state it is in (either STANDBY or ON), then the TV powers OFF.

When POWER is pressed on the side of the TV again to turn the TV ON, the TV returns to either STANDBY or ON.

There must be either a red LED or a green LED displayed on the front of the TV before the remote transmitter will operate the TV.

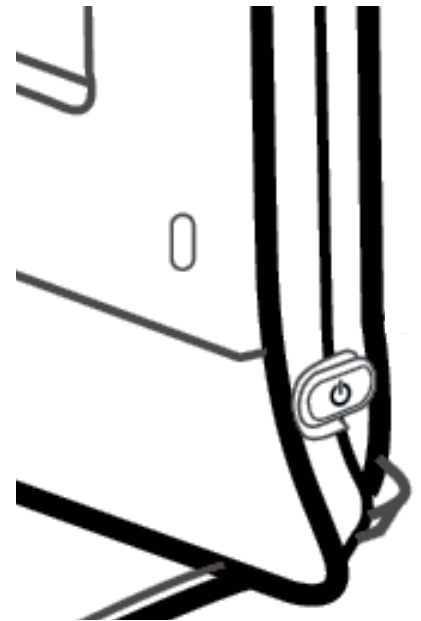

TROUBLE SHOOTING TIPS



As additional information to the Power button tips and notes included on page 31 of the User Manual.

Remote does not work:

- Television will not power on using the remote control.

- The remote transmitter will not operate the TV when the TV is in the OFF mode (No LED lit on front control panel).
- To change the mode from OFF to STANDBY or ON, Press POWER on the side of the TV. Once the POWER is pressed on the TV, the LED will change to either red to indicate STANDBY or green to indicate ON, whichever mode the TV was in prior to being turned off with the TV power button.

No Power:

- Television will not power on after pressing the power button on the side of the unit.

- By pressing POWER on the side of the TV, the mode will toggle from OFF to either STANDBY or ON.
- If POWER is pressed and the LED on the front control panel is red, the TV is in STANDBY mode and will need to be turned on using the remote transmitter.
- If POWER is pressed and the LED on the front control panel is green, the TV is ON.