

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)



201T1  
221T1  
231T1

---

EN User Manual

---

**PHILIPS**



Country	Code	Telephone number	Tariff
Austria	+43	0810 000206	€ 0.07
Belgium	+32	078 250851	€ 0.06
Denmark	+45	3525 8761	Local call tariff
Finland	+358	09 2290 1908	Local call tariff
France	+33	082161 1658	€ 0.09
Germany	+49	01803 386 853	€ 0.09
Greece	+30	00800 3122 1223	Free of charge
Ireland	+353	01 601 1161	Local call tariff
Italy	+39	840 320 041	€ 0.08
Luxembourg	+352	26 84 30 00	Local call tariff
The Netherlands	+31	0900 0400 063	€ 0.10
Norway	+47	2270 8250	Local call tariff
Poland	+48	0223491505	Local call tariff
Portugal	+351	2 1359 1440	Local call tariff
Spain	+34	902 888 785	€ 0.10
Sweden	+46	08 632 0016	Local call tariff
Switzerland	+41	02 2310 2116	Local call tariff
United Kingdom	+44	0207 949 0069	Local call tariff

# Contents

---

<b>1</b>	<b>Notice</b>	2
<b>2</b>	<b>Important</b>	4
	The most updated user manual on line	5
<b>3</b>	<b>Your LCD Monitor with HD TV</b>	6
	Front and side controls	6
	Remote control	6
<b>4</b>	<b>Use your LCD Monitor with HD TV</b>	9
	Switch your TV on/off or to standby	9
	Switch channels	9
	Watch connected devices	10
	Adjust TV volume	10
<b>5</b>	<b>Connect devices</b>	11
	Back connector	11
	Side connector	13
<b>6</b>	<b>Product information</b>	14
	Supported display resolutions	14
	Tuner/Reception/Transmission	14
	Remote control	14
	Power	14
	Supported TV mounts	14
<b>7</b>	<b>Troubleshooting</b>	15
	General TV issues	15
	TV channel issues	15
	Picture issues	15
	Sound issues	16
	HDMI connection issues	16
	Computer connection issues	16
	Contact us	16

# 1 Notice

2009 © Koninklijke Philips Electronics N.V. All rights reserved. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V. and are used under license from Koninklijke Philips Electronics N.V." www.philips.com.

Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly. The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Philips warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

## Warranty

- Risk of injury, damage to TV or void of warranty! Never attempt to repair the TV yourself.
- Use the TV and accessories only as intended by the manufacturer.
- The caution sign printed on the back of the TV indicates risk of electric shock. Never remove the TV cover. Always contact Philips Customer Support for service or repairs.



- Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorised in this manual shall void the warranty.

## Pixel characteristics

This LCD product has a high number of colour pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

## Mains fuse (UK only)

This TV is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

- 1 Remove fuse cover and fuse.
- 2 The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
- 3 Refit the fuse cover.  
In order to maintain conformity to the EMC directive, the mains plug on this product must not be detached from the mains cord cable.

## Copyright



VESA, FDMI and the VESA Mounting Compliant logo are trademarks of the Video Electronics Standards Association.

® Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.



Manufactured under licence from Dolby Laboratories. 'Dolby' and the double D symbol are trademarks of Dolby Laboratories. (Only applicable to TVs supporting MPEG4-HD standard).

All other registered and unregistered trademarks are the property of their respective owners.

# 2 Important

Read and understand all instructions before you use your TV. If damage is caused by failure to follow instructions, the warranty does not apply.

## Safety

- Risk of electric shock or fire!
  - Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
  - Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight.  
To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.



- Never insert objects into the ventilation slots or other openings on the TV.
- When the TV is swivelled ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
- Risk of short circuit or fire!
  - Never expose the remote control or batteries to rain, water or excessive heat.
  - Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.
- Risk of injury or damage to the TV!
  - Two people are required to lift and carry a TV that weights more than 25 kg.

- When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.
- When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that result in accident, injury or damage.
- Risk of injury to children! Follow these precautions to prevent the TV from toppling over and causing injury to children:
  - Never place the TV on a surface covered by a cloth or other material that can be pulled away.
  - Ensure that no part of the TV hangs over the edge of the surface.
  - Never place the TV on tall furniture (such as a bookcase) without anchoring both the furniture and TV to the wall or a suitable support.
  - Educate children about the dangers of climbing on furniture to reach the TV.
- Risk of overheating! Never install the TV in a confined space. Always leave a space of at least 4 inches around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.
- Risk of damage to the TV! Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.
- Risk of injury, fire or power cord damage! Never place the TV or any objects on the power cord.
- To easily disconnect the TV power cord from the power outlet, ensure that you have full access to the power cord at all times.
- When you disconnect the power cord, always pull the plug, never the cable.

- Disconnect the TV from the power outlet and aerial before lightning storms. During lightning storms, never touch any part of the TV, power cord or aerial cable.
- Risk of hearing damage! Avoid using earphones or headphones at high volumes or for prolonged periods of time.
- If the TV is transported in temperatures below 5°C, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

## Screen care

- Avoid stationary images as much as possible. Stationary images are images that remain on-screen for extended periods of time. Examples include: on-screen menus, black bars and time displays. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.

## Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheeled bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on the separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences for the environment and human health.


## The most updated user manual online

The contents of the user manual are subject to change. Please refer to [www.philips.com/support](http://www.philips.com/support) for the most updated user manual info reference.

# 3 Your LCD Monitor with HD TV


Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## Front and side controls

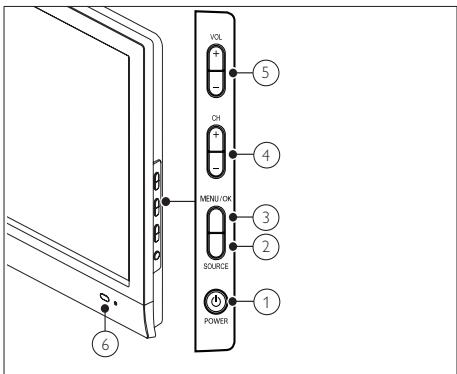

- ① ⚡ **POWER:** Switches the TV on or off. The TV is not powered off completely unless it is physically unplugged.
- ② **SOURCE:** Selects connected devices.
- ③ **MENU/OK :** Displays the on-screen menu and confirms a selection in menus.
- ④ **CH +/-:** Switches to the next or previous channel.
- ⑤ **VOL+/-:** Increases or decreases volume.
- ⑥ **Power indicator :**  
Red LED: In standby mode or off.  
Green LED: Power on.

## Remote control

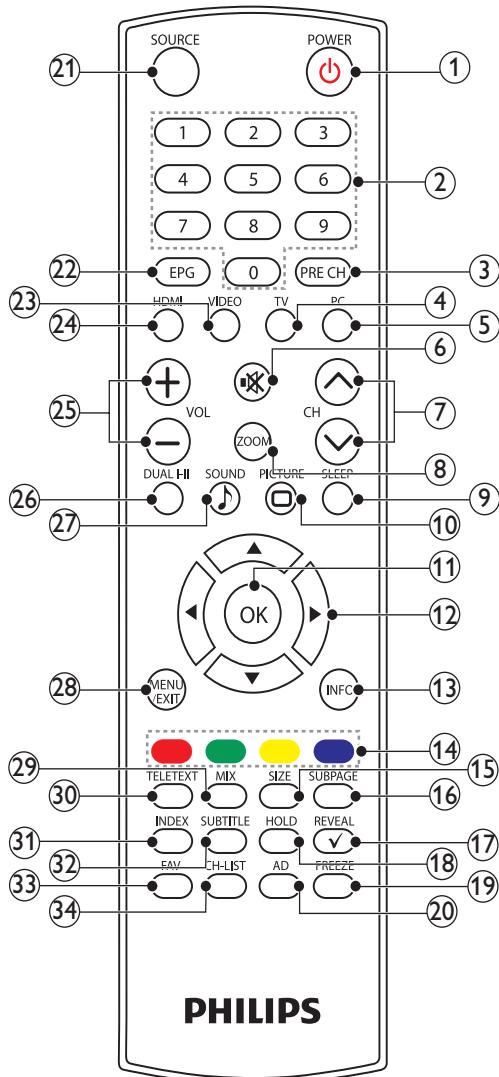

**PHILIPS**

- ① Ⓛ (**Standby-On**)
  - Switch the TV to standby if the TV is on.
  - Switch the TV on if the TV is in standby.
- ② **0-9 ( Numeric buttons )**  
Select a channel or setting.
- ③ **PRE CH**  
Return to the previously viewed channel.
- ④ **TV**  
Press to choose TV mode.
- ⑤ **PC**  
Press to choose PC mode.
- ⑥ **🔇 (Mute)**  
Switch the sound On or Off.
- ⑦ **CH ▲ / V (Channel ▲ / V )**  
Switch to the next or previous channel.
- ⑧ **ZOOM**  
Toggle among screen formats.
- ⑨ **SLEEP**  
Toggle to select the preset time to switch the TV to standby mode automatically.
- ⑩ **▢ PICTURE**  
Toggle to select the Smart Picture setting.
- ⑪ **OK**  
Confirm an entry or selection and display the channel grid, when watching TV.
- ⑫ **▲ ▼ ◀ ► (Navigation buttons )**  
Navigate through the menus.
- ⑬ **INFO**  
Display or hide the information screen about the selected channel.
- ⑭ **Colour buttons**  
Select tasks or options.
- ⑮ **SIZE**  
Toggle to change the font size in Teletext mode. (Full screen / Top half / Bottom half)
- ⑯ **SUBPAGE**  
Display the sub page when the Teletext information has more than one page.
- ⑰ **REVEAL**  
Reveal hidden information of Teletext.
- ⑱ **HOLD**  
Toggle to stop the scrolling of pages to stop the text decoder receiving data.
- ⑲ **FREEZE**  
Press to freeze the TV picture.
- ⑳ **AD (Audio Description) (For RF Digital TV only)**  
UK only: Enables audio commentary for the visually handicapped.
- ㉑ **SOURCE**  
Select connected devices.
- ㉒ **EPG**  
Switch the Electronic Programme Guide On or Off.
- ㉓ **VIDEO**  
Press to switch to VIDEO YPbPr / Composite /SCART mode.
- ㉔ **HDMI**  
Press to switch to HDMI mode.
- ㉕ **VOL +/-**  
Increase or decrease the volume.
- ㉖ **DUAL I-II**  
Toggle to select mono / stereo / dual I / dual II from TV RF input.
- ㉗ **♪ SOUND**  
Toggle to select the Smartsound Mode.
- ㉘ **MENU/EXIT**  
Press to open or close the on-screen menu.
- ㉙ **MIX**  
Press to overlay the Teletext page on the TV picture.

**(30) TELETEXT**

Press to open or close the Teletext.

**(31) INDEX**

Press to display the index page of Teletext.

**(32) SUBTITLE**

- In TV mode: Press to turn the subtitle on or off.
- In Text mode: Press to open the subtitle page.

**(33) FAV**

Press to display the Favourite List.


 
**(34) CH-LIST**

Press to display the Channel List.

# 4 Use your LCD Monitor with HD TV

This section helps you perform basic TV operations.

## Switch your TV on/off or to standby

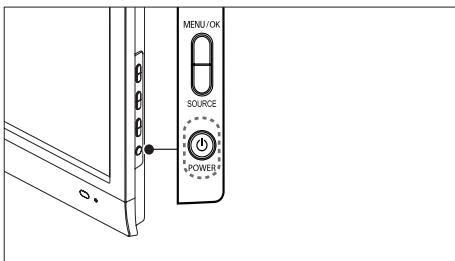

### To switch on

- If the standby indicator is off, press **POWER** at the side of the TV.
- If the standby indicator is red, press **(Standby-On)** on the remote control.

### To switch to standby

- Press **(Standby-On)** on the remote control.  
↳ The standby indicator switches to red.

### To switch off

- Press **POWER** at the side of the TV.  
↳ The standby indicator switches off.



#### Tip

- Though your TV consumes very little power when in standby, energy continues to be consumed. When not in use for an extended period of time, disconnect the TV power cable from the power outlet.

#### Note

- If you cannot locate your remote control and want to switch on the TV from standby, press **CH +/-** at the side of the TV.

## Switch channels

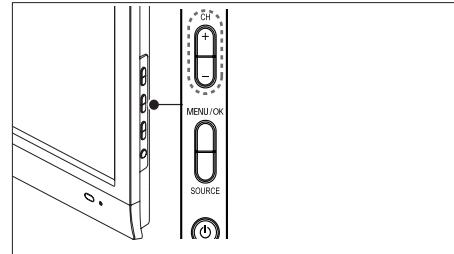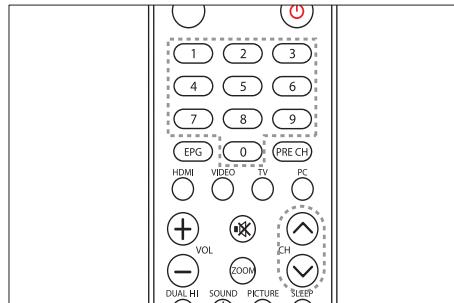

- Press **CH ^/v** on the remote control or **CH +/-** on the side of the TV.
- Enter a channel number using the **Numeric buttons**.
- Use the channel grid.

#### Note

- When you use a favourite list, you can only select those channels in the list.


## Watch connected devices



### Note

- Switch on the device before selecting it as a source on the TV.



### Use the source button

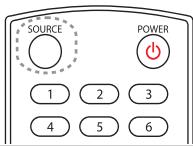

- 1 Press **SOURCE**.  
↳ The source list appears.
- 2 Press the **SOURCE**, **▲** or **▼** buttons to select a device.
- 3 Press **OK** to confirm your choice.  
↳ The sTV switches to the selected device.

↳ The TV switches to the selected device.

## Adjust TV volume

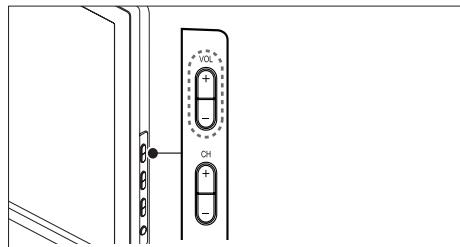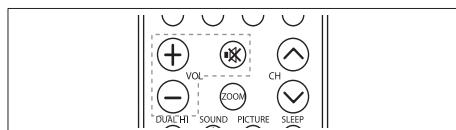

### To increase or decrease volume

- Press **VOL +/-** on the remote control.
- Press **VOL +/-** on the side of the TV.

### To mute or unmute sound

- Press **🔇** to mute the sound.
- Press **🔇** again to restore the sound.

# 5 Connect devices


English

This section describes how to connect various devices with different connectors and supplements examples provided in the Quick Start.

## Note


- Different types of connectors may be used to connect a device to your TV, depending on availability and your needs.

## Back connector

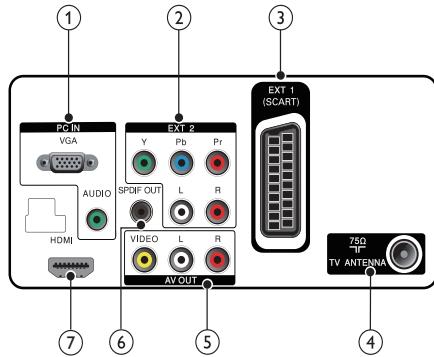


### ① PC IN (VGA and AUDIO IN)

Audio and video input from a computer.

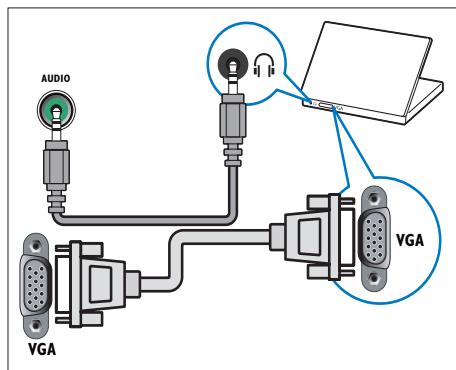


### ② EXT 2 (Y Pb Pr and AUDIO L/R)

Analogue audio and video input from analogue or digital devices such as DVD players or game consoles.

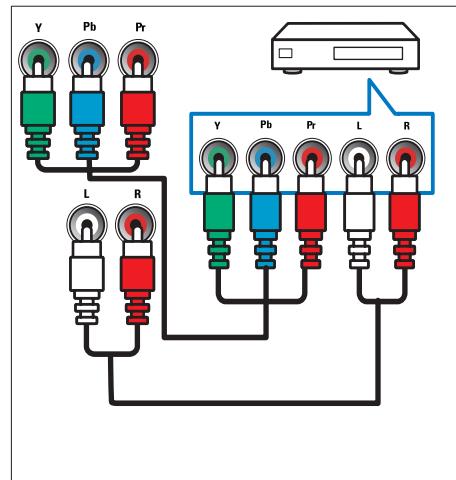


### ③ EXT 1 (SCART)

Analogue audio and video input from analogue or digital devices such as DVD players or game consoles.

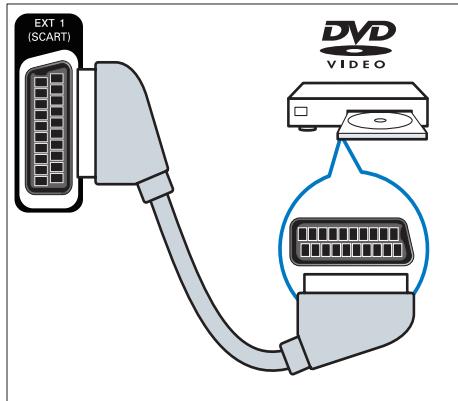


### ⑤ AV OUT (VIDEO OUT and AUDIO OUT L/R)

Audio and video output to analogue devices such as another TV or a recording device.

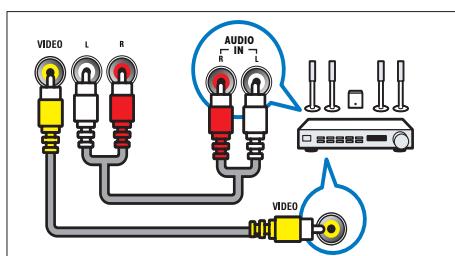


### ⑥ SPDIF OUT

Digital audio output to home theatres and other digital audio systems.

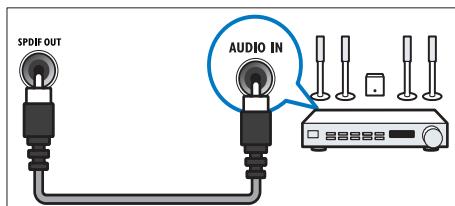


### ⑦ HDMI

Digital audio and video input from high-definition digital devices such as Blu-ray players.

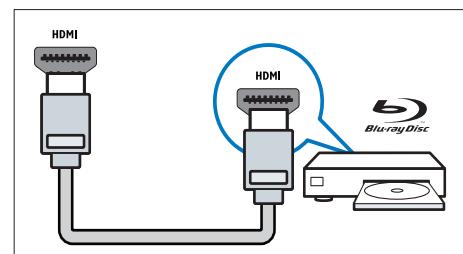


Connections via DVI or VGA require an additional audio cable.

## Side connector

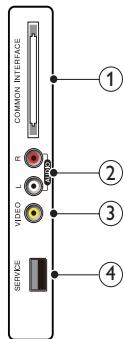


### ① COMMON INTERFACE

Slot for a Conditional Access Module (CAM).

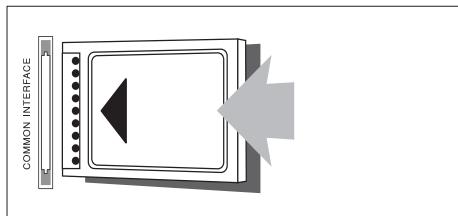


### ② AUDIO L/R

Audio input from analogue devices connected to **VIDEO**.

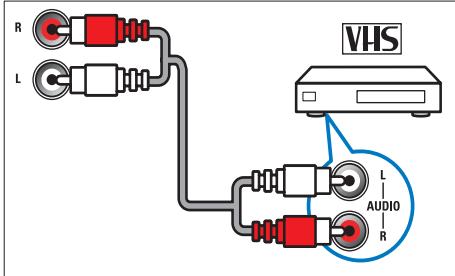


### ③ VIDEO

Composite video input from analogue devices such as VCRs.

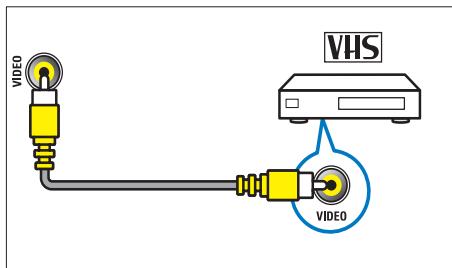

### ④ SERVICE

USB port, for upgrade firmware purpose only.

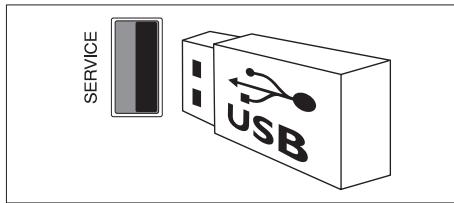

# 6 Product information

Product information is subject to change without notice. For detailed product information, go to [www.philips.com/support](http://www.philips.com/support).

## Supported display resolutions

### Computer formats

- Resolution - refresh rate:
  - 640 x 480 - 60Hz
  - 640 x 480 - 75Hz
  - 800 x 600 - 60Hz
  - 800 x 600 - 75Hz
  - 1024 x 768 - 60Hz
  - 1024 x 768 - 75Hz
  - 1280 x 1024 - 60Hz
  - 1440 x 900 - 60Hz
  - 1600 x 900 - 60Hz (the best for 201T1)
  - 1680 x 1050 - 60Hz
  - 1920 x 1080 - 60Hz\_RB (the best for 221T1 and 231T1)

### Video formats

- Resolution - refresh rate:
  - 480i - 60Hz
  - 480p - 60Hz
  - 576i - 50Hz
  - 576p - 50Hz
  - 720p - 50Hz, 60Hz
  - 1080i - 50Hz, 60Hz
  - 1080p - 50Hz, 60Hz

## Remote control

- Type: 201T1, 221T1, 231T1 RC
- Batteries: 2 x AAA (LR03 type)

## Power

- Mains power: 100-240V, 50Hz
- Off mode power: < 0.5W
- Ambient temperature: 5 to 40 degrees Celsius

## Supported TV mounts

To mount the TV, purchase a Philips TV mount or a VESA-compatible TV mount. To prevent damage to cables and connectors, be sure to leave a clearance of at least 5.5 cm from the back of the TV.



### Warning

- Follow all instructions provided with the TV mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper TV mounting that results in accident, injury or damage.

TV screen size (inches)	Required pitch (mm)	Required mounting bolts
20	100 x 100	4 x M4
22	100 x 100	4 x M4
23	100 x 100	4 x M4

## Tuner/Reception/Transmission

- Antenna input: 75ohm coaxial (IEC75)
- DVB: DVB Terrestrial, DVB-T MPEG4
- TV system: DVB COFDM 2K/8K; PAL I, B/G, D/K; SECAM B/G, D/K, L/L'
- Video playback: NTSC, SECAM, PAL
- Tuner Bands: Hyperband, S-channel, UHF, VHF

# 7 Troubleshooting

This section describes commonly encountered issues and accompanying solutions.

## General TV issues

### The TV does not switch on:

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Check that the power cable is securely connected.

### The remote control is not working properly:

- Check that the remote control batteries are correctly inserted according to the +/- orientation.
- Replace the remote control batteries if they are flat or weak.
- Clean the remote control and TV sensor lens.

### The standby light on the TV blinks red:

- Disconnect the power cable from the power outlet. Wait until the TV cools down before reconnecting the power cable. If the blinking reoccurs, contact Philips Consumer Care.

### You forgot the code to unlock the TV lock feature

- Enter '5351'.

### The TV menu is in the wrong language

- Change the TV menu to your preferred language.

### When turning the TV on/off/to standby, you hear a creaking sound from the TV chassis:

- No action is required. The creaking sound is normal expansion and contraction of the TV as it cools and warms up. This does not impact performance.

## TV channel issues

Previously installed channels do not appear in the channel list:

- Check that the correct channel list is selected.

### No digital channels were found during the installation:

- Check that the TV supports DVB-T or DVB-C in your country. See the listed countries on the back of the TV.

## Picture issues

### The TV is on, but there is no picture:

- Check that the antenna is properly connected to the TV.
- Check that the correct device is selected as the TV source.

### There is sound but no picture:

- Check that the picture settings are correctly set.

### There is poor TV reception from an antenna connection:

- Check that the antenna is properly connected to the TV.
- Loud speakers, unearthing audio devices, neon lights, high buildings and other large objects can influence reception quality. If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine tune this channel.

### There is poor picture quality from connected devices:

- Check that the devices are connected properly.
- Check that the picture settings are correctly set.

### The TV did not save your picture settings:

- Check that the TV location is set to the home setting. This mode offers you the flexibility to change and save settings.

**The picture does not fit the screen; it is too big or too small:**

- Try using a different picture format.

**The picture position is incorrect:**

- Picture signals from some devices may not fit the screen correctly. Check the signal output of the device.

## Sound issues

**There is a picture but no sound from the TV:**



### Note

- If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.

- Check that all cables are properly connected.
- Check that the volume is not set to 0.
- Check that the sound is not muted.

**There is a picture but the sound quality is poor:**

- Check that the sound settings are correctly set.

**There is a picture but sound comes from one speaker only:**

- Verify that sound balance is set to the centre.

## HDMI connection issues

**There are problems with HDMI devices:**

- Note that HDCP support can delay the time taken for a TV to display content from a HDMI device.
- If the TV does not recognise the HDMI device and no picture is displayed, try switching the source from one device to another and back again.
- If there are intermittent sound disruptions, check that output settings from the HDMI device are correct.
- If a HDMI-to-DVI adaptor or HDMI to DVI cable is used, check that an additional

audio cable is connected to **AUDIO L/R** or **AUDIO IN** (mini-jack only).

## Computer connection issues

**The computer display on the TV is not stable:**

- Check that a supported resolution and refresh rate is selected on the computer.
- Set the TV picture format to unscaled.

## Contact us

If you cannot resolve your problem, refer to the FAQs for this TV at [www.philips.com/support](http://www.philips.com/support).

If the problem remains unresolved, contact Philips Consumer Care in your country as listed in this User Manual.



### Warning

- Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.



### Note

- Make a note of your TV model and serial number before you contact Philips. These numbers are printed on the back of the TV and on the packaging.







2009 © Koninklijke Philips Electronics N.V. All rights reserved. Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V. and are used under license from Koninklijke Philips Electronics N.V."

[www.philips.com](http://www.philips.com)

Document order number: Q41G22TM813 4A



Q41G22TM813 4 A