

Register your product and get support at

[www.philips.com/welcome](http://www.philips.com/welcome)

22PFL3557H/12

---

EN User Manual

**PHILIPS**

# Contents

<b>1</b>	<b>Get started</b>	<b>3</b>	<b>6</b>	<b>Troubleshooting</b>	<b>48</b>
	TV tour	3		General issues	48
	TV controls	4		Channel issues	48
	Important information	6		Picture issues	49
	Sustainability	10		Sound issues	49
	Help and support	11		Disc player issues	50
<b>2</b>	<b>Use your TV</b>	<b>12</b>		Connection issues	50
	Watch TV	12		Network issues	51
	Play discs	15		Contact Philips	51
	View programme guide	19	<b>7</b>	<b>Product specifications</b>	<b>52</b>
	View media	20		Power and reception	52
	Browse Smart TV	22		Display and sound	52
<b>3</b>	<b>Use more of your TV</b>	<b>23</b>		Display resolutions	52
	Play games	23		Multimedia	53
	View Text	23		Disc player	54
	Set locks and timers	24		Connectivity	54
	Use EasyLink	25		Supported TV mounts	55
	View Scenea	28		Help version	55
<b>4</b>	<b>Set up your TV</b>	<b>29</b>	<b>8</b>	<b>Index</b>	<b>56</b>
	Picture and sound	29			
	Channel settings	30			
	Satellite settings	32			
	Language settings	33			
	Universal access settings	34			
	Other settings	35			
	Update software	36			
	Restore default settings	36			
<b>5</b>	<b>Connect your TV</b>	<b>37</b>			
	About cables	37			
	Connect devices	38			
	Connect more devices	42			
	Watch a connected device	44			
	Network and the Internet	44			
	Common interface	47			

# 1 Get started

---

## TV tour

---

### High Definition TV

Your TV is equipped with a High-Definition (HD) display so you can watch HD video in these ways and more:

- a Blu-ray disc player, connected with an HDMI cable, playing a Blu-ray disc
- an upscaling DVD player, connected with an HDMI cable, playing a DVD disc
- an over-the-air HD broadcaster (DVB-T or DVB-T2 MPEG4)
- a digital HD receiver, connected with an HDMI cable, playing HD content from a cable or satellite operator
- an HD game console, connected with an HDMI cable, playing HD games

### Smart TV

---

You can make your TV the centre of your digital life with the Smart TV\* suite of applications:

- If you connect your TV to the home network, you can share movies, pictures, and music from a computer or media server on your home network.\*
- If you connect your TV to the Internet, you can enjoy a wealth of streaming movies, pictures, music and much more with Youtube Leanback\* and other Smart TV\* applications.
- Add a new dimension to your calls and contact your friends and relatives on the big screen. You can make video calls on your TV with a Philips HD Media box and a Philips TV video camera (both sold separately). Enjoy HD video and excellent sound quality from the comfort of your sofa and start calling now!\*

\*Available on certain models only.

### Media playback

If you connect your TV to a USB storage device, you can enjoy your movies, music and pictures on a wide screen TV with excellent sound.

### Programme guides

You can find out what's on and what's coming up with the now and next EPG (Electronic Programme guide) or eight day EPG.

### EasyLink


If you connect your TV to HDMI-CEC (Consumer Electronic Control) enabled devices, such as a Blu-ray player or home theatre, you can control them at the same time with one remote control. Simply switch on EasyLink after connection.

### Intuitive menus

With the TV's intuitive menus, you can easily access the channel or media file that you want or tweak the TV settings to suit your needs.

## TV controls


### Rear controls

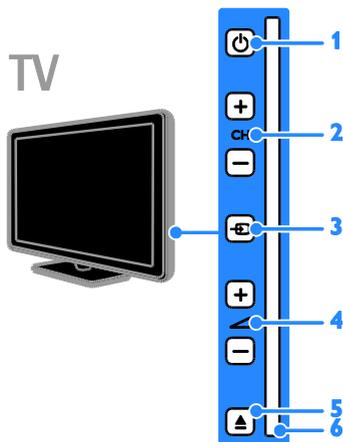

1. **⏻ (Standby):** Switch the TV on or off.
2. **CH +/- (Channel +/-):** Switch to the next or previous channel.
3. **[-] (Source):** Access a connected device.
4. **[<] +/- (Volume +/-):** Increase or decrease volume.
5. **▲ EJECT:** Eject the disc from the disc compartment.
6. **Disc compartment**

### Sensors


#### TV

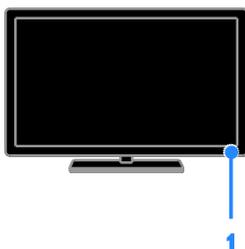

#### 1. Remote control sensor

Point the remote control at the sensor.  
Make sure that the line-of-sight between the remote control and the TV is not blocked by furniture or other objects.

## Remote control

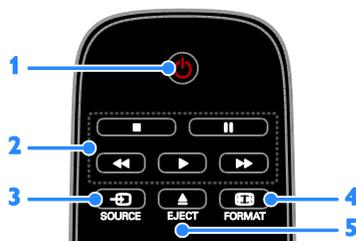


1. **⏻ (Standby):** Switch the TV on or to standby.
2. **Play buttons:** Control playback of media files.
3. **[-] SOURCE:** Access a connected device.
4. **[+] FORMAT:** Change picture format.
5. **▲ EJECT:** Eject the disc from the disc compartment.




6. **🏠 (Home):** Access the Home menu.
7. **OK:** Confirm an entry or selection.
8. **▲▼◀▶ (Navigation buttons):** Navigate through menus and select items.




9. **≡ LIST**: In TV mode, access the TV channel list. In DVD mode, access the DVD setup menu.
10. **i INFO**: Display information about current activity.
11. **||| ADJUST**: Adjust TV settings.
12. **▢ OPTIONS**: Access currently available options.

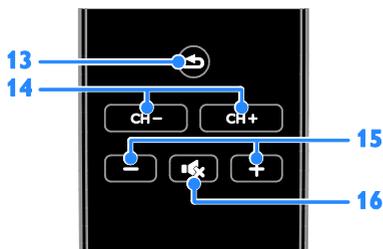

13. **← (Back)**: Return to the previous menu page or exit from a TV function.
14. **CH - / CH +**: Switch channels.
15. **+/- (Volume)**: Adjust volume.
16. **🔇 (Mute)**: Mute or restore audio.

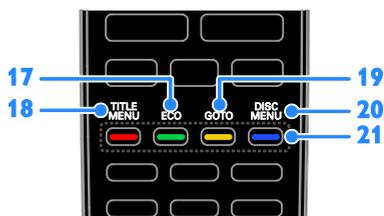

17. **ECO**: Access energy saving options.
18. **TITLE MENU**: In disc mode, access the title menu of a DVD.
19. **GOTO**: In disc mode, access additional disc options.
20. **DISC MENU**: In disc mode, access the disc playback options.
21. **Colour buttons**: Select tasks or options. The buttons function according to the services offered by the service provider.

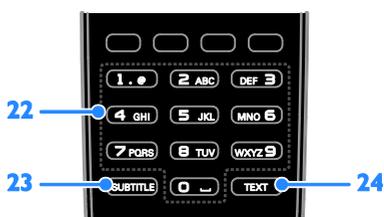

22. **0-9 (Numeric buttons)**: Select TV channels or enter text.
23. **SUBTITLE**: Switch on or off subtitles.
24. **TEXT**: Enable or disable text.

## EasyLink controls

**Note:** EasyLink controls are available when the connected device is HDMI-CEC compliant.

With EasyLink controls, you can control your TV and other HDMI-CEC devices with one remote control.

### Access EasyLink controls

- While you view content from a connected HDMI-CEC device, press **▢ OPTIONS**.
- Select **[Show remote control]**, then press **OK**.
- Select the EasyLink control button, then press **OK**.

Read more about EasyLink in **Use more of your TV > Use EasyLink** (Page 25).

---

## Important information

---

### Safety

Read and understand all instructions before you use your TV. If damage is caused by failure to follow the instructions, the warranty does not apply.

#### Risk of electric shock or fire!

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
- Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.



- Never insert objects into the ventilation slots or other openings on the TV.
- Never expose the remote control or batteries to rain, water or excessive heat.
- Avoid force coming onto power plugs. Ensure that the power plug is fully inserted into the power socket. Loose power plugs can cause arcing or fire.
- When the TV is swivelled, ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
- To disconnect the TV from the mains power, the power plug of the TV must be disconnected. When disconnecting the power, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

#### Risk of damage to the TV!

- Two people are required to lift and carry a TV that weighs more than 25kg or 55lbs.
- When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.
- When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. TP Vision Netherlands B.V. bears no responsibility for improper wall mounting that result in accident, injury or damage.
- If you need to store the TV, disassemble the stand from the TV. Never lay the TV on its back with the stand installed.
- Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.
- Parts of this product may be made of glass. Handle with care to avoid injury and damage.

#### Risk of injury to children!

Follow these precautions to prevent the TV from toppling over and causing injury to children:

- Never place the TV on a surface covered by a cloth or other material that can be pulled away.
- Ensure that no part of the TV hangs over the edge of the surface.
- Never place the TV on tall furniture, such as a bookcase, without anchoring both the furniture and TV to the wall or a suitable support.
- Educate children about the dangers of climbing on furniture to reach the TV.

**Risk of swallowing batteries!**

- The product/remote control may contain a coin-type battery, which can be swallowed. Keep the battery out of reach of children at all times!

**Risk of overheating!**

- Never install the TV in a confined space. Always leave a space of at least 4 inches or 10 cm around the TV for ventilation. Ensure that curtains or other objects never cover the ventilation slots on the TV.

**Risk of injury, fire or power cord damage!**

- Never place the TV or any objects on the power cord.
- Disconnect the TV from the socket and aerial before lightning storms. During lightning storms, never touch any part of the TV, power cord or aerial cable.

**Risk of hearing damage!**

- Avoid using earphones or headphones at high volumes or for prolonged periods of time.

**Low temperatures**

- If the TV is transported in temperatures below 5°C or 41°F, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

---

**Screen care**

- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.
- Avoid stationary images as much as possible. Stationary images are images that remain onscreen for extended periods of time. Stationary images include onscreen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

---


**Disc player care**

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.

---

**Lock the TV**

Your TV is equipped with a Kensington security slot at the base of the TV. To secure the TV, purchase a Kensington anti-theft lock (sold separately).

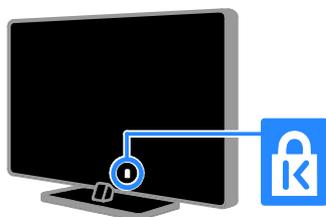

---

## Notice

2012 © TP Vision Netherlands B.V. All rights reserved. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. TP Vision Netherlands B.V. reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. TP Vision Netherlands B.V. warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

TP Vision Netherlands B.V. cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

### Terms of warranty

- Risk of injury, damage to TV or void of warranty! Never attempt to repair the TV yourself.
- Use the TV and accessories only as intended by the manufacturer.
- The caution sign printed on the back of the TV indicates risk of electric shock. Never remove the TV cover. Always contact Philips Customer Care for service or repairs.



- Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorised in this manual shall void the warranty.

## Pixel characteristics

This LCD/LED product has a high number of colour pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

## CE compliance



This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage) and 2004/108/EC (EMC).

### Compliance with EMF

TP Vision Netherlands B.V. manufactures and sells many products targeted at consumers which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the Electro Magnetic Field (EMF) standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. TP Vision confirms that, as long as its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

## Trademarks and copyrights

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

For TV:



Manufactured under licence from Dolby Laboratories. Dolby and the double D symbol are trademarks of Dolby Laboratories.

For disc player:



Manufactured under licence from Dolby Laboratories. Dolby and the double D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Kensington and Micro Saver are registered US trademarks of ACCO World corporation with issued registrations and pending applications in other countries throughout the world.



DLNA®, the DLNA Logo and DLNA CERTIFIED® are trademarks, service marks or certification marks of the Digital Living Network Alliance.



Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence.

**ABOUT DIVX VIDEO:** DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.

**ABOUT DIVX VIDEO-ON-DEMAND:** This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

 


'DVD Video' is a trademark of DVD Format/Logo Licensing Corporation.



All other registered and unregistered trademarks are the property of their respective owners.

### Copyright



This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorised by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Rovi Corporation. Reverse engineering or disassembly is prohibited.

### Copyright in the UK

Recording and playback of material may require consent. See Copyright Act 1956 and The Performers' Protection Acts 1958 to 1972.

---

# Sustainability

---

## Energy efficiency

This TV is designed with energy-efficient features. To access these features, press the green button on the remote control.

- **Energy saving picture settings:** You can apply a combination of energy-saving picture settings. While you watch TV, press the **Green button**, then select **[Energy saving]**.
- **Screen off:** If you only want to listen to audio from the TV, you can switch off the TV display. Other functions continue to operate normally.
- **Low standby power:** The advanced power circuitry reduces the power consumption of the TV to an extremely low level, without losing out on the constant standby functionality.
- **Power management:** The advanced power management helps save the energy consumed by this TV. To view how your personalised TV settings affect the TV's relative power consumption, press **⬆**, then select **[Setup] > [Watch demos] > [Active Control]**.

---

## End of use

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.



Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environment and human health.



---

## EU energy label

The European Energy Label informs you on the energy efficiency class of the product. The greener the energy efficiency class of this product is, the lower the energy it consumes.

On the label, you can find the energy efficiency class, the average power consumption of the product in use and the average energy consumption for 1 year. You can also find the power consumption values for the product on the Philips website for your country at [www.philips.com/TV](http://www.philips.com/TV).

---

## Help and support

---

### Use Help

To access the onscreen Help menu, press the **Yellow button**.

To switch between the Help menu and the TV menu, press the **Yellow button**.

---

### Visit the Philips website

If you can't find what you need in the onscreen **[Help]**, visit the Philips support website at [www.philips.com/support](http://www.philips.com/support).

On the Philips support website, you can also:

- Find answers to Frequently Asked Questions (FAQ)
  - Download a printable PDF version of this user manual
  - Email us a specific question
  - Chat online with Philips Consumer Care (available in certain countries only)
- 

### Search the TV forum

Your question may have already been answered by the Philips TV community of users. Visit [www.supportforum.philips.com](http://www.supportforum.philips.com).

---

### Contact Philips

You can contact Philips Consumer Care in your country for support. The number is available in the leaflet accompanying this product or online at [www.philips.com/support](http://www.philips.com/support).

Before you contact Philips, write down the model and serial number of your TV. You can find this information on the back of your TV or on the TV packaging.



## 2 Use your TV

---

### Watch TV

---

#### Switch TV on or off

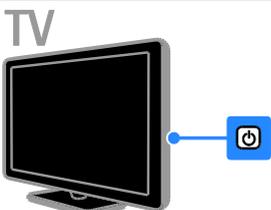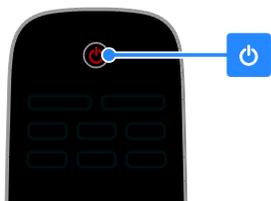

#### Switch the TV on

- Press the power switch on the TV.
- If the TV is in standby, press  $\phi$  on the remote control.

**Note:** There is a short delay before the TV responds.

**Tip:** If you cannot find your remote control and want to switch on the TV from standby, press **CH +/-** on the TV.

#### Switch TV to standby

Press  $\phi$  on the remote control.

The remote control sensor on the TV switches to red.

#### Switch off the TV

Press  $\phi$  on the TV.

The TV switches off.

**Note:** Though your TV consumes very little energy when it is in standby or switched off, it does use some energy. If you are not going to use the TV for an extended period of time, disconnect the TV from the mains plug.

#### Automatic switch off

You can save energy with this TV's energy efficiency settings. The settings are enabled by default, so that if there is no user interaction (such as pressing a remote control button or a control on the rear panel) for four hours, the TV will automatically switch to standby.

#### To disable automatic switch off



1. While you watch TV, press the **Green button** on the remote control.
2. Select [**Auto switch off**], then press **OK**.
3. Use the **Navigation buttons** to make a selection, then press **OK**.

---

### Adjust TV volume

#### Increase or decrease the TV volume

- Press **+/-** on the remote control.
- Press  $\triangle$  **+/-** on the side of the TV.

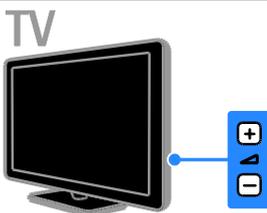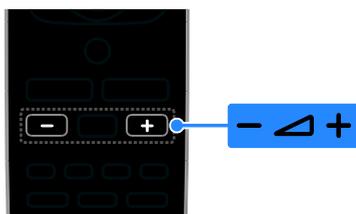

#### Mute or unmute the TV volume



- Press  $\text{m}$  on the remote control to mute the volume.
- Press  $\text{m}$  again to restore the volume.

#### Adjust headphone volume

1. Press **Home** > [**Setup**] > [**TV settings**] > [**Sound**].
2. Select [**Headphone volume**], then press **OK**.

## Switch TV channels

- Press **CH +/-** on the remote control or TV.
- Press the **Numeric buttons** to enter a channel number.

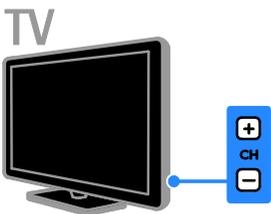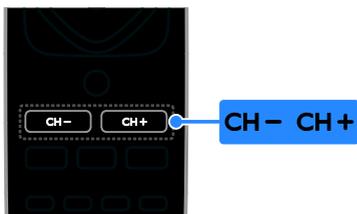

## Manage favourites

You can view all channels or only a list of your favourite channels so that you can find them easily.

Press **≡ LIST** to access the channel list.

### Create a list of your favourite channels

1. Press **≡ LIST**.
2. Select the channel to mark as a favourite, then press **☐ OPTIONS**.
3. Select **[Mark as favourite]**, then press **OK**. The selected channel is marked.

To deselect a channel, select **[Unmark as favourite]**, and then press **OK**.

### Select a channel list

1. Press **≡ LIST**, then press **☐ OPTIONS**.
2. Select **[Select list] > [Favourite]** to display channels in the favourite list or **[All]** to display all channels.
3. Press **OK** to confirm.

## Manage channel lists

After the channels have been installed, you can manage them:

- Rename channels
- Reorder channels
- Listen to digital radio

### Rename channels

You can rename channels. The name appears when the channels are selected.

1. While you watch TV, press **≡ LIST**. The channel list is displayed.
2. Select the channel to rename, then press **☐ OPTIONS**.
3. Select **[Rename]**, then press **OK**.
4. Press the **Navigation buttons** to select each character, then press **OK**.
  - Press **OK** in the entry screen to enable the **Onscreen Keyboard**, or
  - Press **[ABC]** or **[abc]** to select an uppercase or lowercase letter.
5. Once complete, select **[Done]**, then press **OK** to confirm when prompted.
6. Press **↵** to exit.

### Reorder channels

After the channels have been installed, you can reorder the channel list.

1. While you watch TV, press **≡ LIST**. The channel list is displayed.
2. Press **☐ OPTIONS**.
3. Select **[Reorder]**, then press **OK**.
4. Select the channel to reorder, then press **OK**.
5. Press the **Navigation buttons** to move the highlighted channel to another location, then press **OK**.
6. Press **☐ OPTIONS**.
7. Select **[Done reordering]**, then press **OK**.

### Listen to digital radio

If digital radio channels are available, you can listen to them. They are installed automatically when you install the TV channels.

1. While you watch TV, press **≡ LIST**. The channel list is displayed.
2. Press **☐ OPTIONS**.
3. Select **[Select list] > [Radio]**, then press **OK**.
4. Select a radio channel, then press **OK**.

---

## Select a source

You can watch a connected device in one of the following ways:

- Add its icon to the Home menu for easy access, then select it from the Home menu.
- Select from the Source menu.

**Note:** If you connect an HDMI-CEC compliant device to the TV, it is automatically added to the Home menu.

### Add new device

1. Connect and switch on the device.
  2. Press .
  3. Select **[Add new device]**, then press **OK**.
  4. Follow the onscreen instructions.
- If you are prompted to select the TV connection, select the connector that this device uses.

### View from Home menu

After you have added the new device to the Home menu, you can select its icon to start using it.

1. Press .
2. Select the device icon from the Home menu.
3. Press **OK** to confirm.

### View from Source menu

You can also press  **SOURCE** to display a list of connector names. Select the connector that connects the device to the TV.

1. Press  **SOURCE**.
2. Press the **Navigation buttons** to select a connector in the list.
3. Press **OK** to confirm.

---

## Use smart settings

Your TV comes with smart picture and sound settings. You can apply these settings or customise them.

### Select your preferred picture setting

1. While you watch TV, press  **ADJUST**.
2. Select **[Smart picture]**.
3. Select an option, then press **OK**:
  - **[Personal]**: Apply your personalised picture settings.
  - **[Vivid]**: Rich and dynamic settings, ideal for daytime viewing.
  - **[Natural]**: Natural picture settings.
  - **[Cinema]**: Ideal settings for movies.
  - **[Game]**: Ideal settings for games.
  - **[Energy saving]**: Settings that conserve the most energy.
  - **[Standard]**: Default settings that suit most environments and types of video.
  - **[Photo]**: Ideal settings for photos.
  - **[Custom]**: Customise and store your own picture settings.

### Select your preferred sound setting

1. While you watch TV, press  **ADJUST**.
2. Select **[Smart sound]**.
3. Select an option, then press **OK**:
  - **[Personal]**: Apply your personalised sound setting.
  - **[Standard]**: Settings that suit most environments and types of audio.
  - **[NEWS]**: Ideal settings for spoken audio, such as the news.
  - **[Cinema]**: Ideal settings for movies.
  - **[Game]**: Ideal settings for games.
  - **[DRAMA]**: Ideal settings for drama programmes.
  - **[SPORTS]**: Ideal settings for sports.

## Change picture format

You can change the picture format to suit the video source.

1. Press **[FORMAT]**.
2. Select a picture format, then press **OK** to confirm.

The available picture formats depend on the video source:

- **[Auto fill]**: Adjust the picture to fill the screen (subtitles remain visible). Recommended for minimal screen distortion but not for HD or PC.
- **[Auto zoom]**: Enlarge the picture to fill the screen. Recommended for minimal screen distortion but not for HD or PC.
- **[Super zoom]**: Remove the black bars on the sides of 4:3 broadcasts. Not recommended for HD or PC.
- **[4:3]**: Display the classic 4:3 format.
- **[Movie expand 16:9]**: Scale 4:3 format to 16:9. Not recommended for HD or PC.
- **[Wide screen]**: Stretch 4:3 format to 16:9.
- **[Unscaled]**: Provide maximum detail for PC. Only available when PC mode is selected in the Picture menu.

## Play discs

### Watch a DVD

You can watch a DVD with the built-in DVD player on your TV. You can also play a wide variety of discs, including video, audio and mixed media (for example, a CD-R that contains JPEG pictures and MP3 music).

1. Press **▲** > **[Play disc]**, then press **OK**. The TV switches to the disc source.
2. Insert a disc into the disc compartment, with the disc label facing backwards.

Press these buttons to control DVD playback:

- **▶**: Start playback.
- **⏸**: Pause or resume playback.
- **■**: Stop playback.
- **◀◀** or **▶▶**: Search backward or forward. To change playback speed, press repeatedly.
- **CH - / CH +**: Skip to previous or next track, chapter or file.
- **Navigation buttons**: Navigate menus.
- **OK**: Confirm an entry or selection.
- **TITLE MENU**: Access title menu of the DVD.
- **DISC MENU**: Access DVD playback options.
- **[FORMAT]**: Press **[FORMAT]**, then select **[Zoom]** to zoom into a video scene or picture.

---

## Disc playback options

### Video options

**Note:** Available video options depend on the video source.

- Press the **Left / Right Navigation buttons** to slow search backwards or forwards. Press repeatedly to change the search speed. For VCD / SVCD, slow-backwards search is not available.
- Press **[INFO]** to view information about what is playing.
- Press **SUBTITLE** to select subtitle language for video.

Press **GOTO** to access additional options:

- **[Repeat]:** Repeat a chapter or title.
- **[Repeat AB]:** Mark two points within a chapter or track for repeat playback.
- **[Audio]:** Select an audio language or channel.
- **[Subtitle]:** Select the subtitle language for disc.
- **[Angle]:** Select an angle from which to view the video.

### Audio options

In file browser view, press the **Left / Right Navigation buttons** to go to the previous or next page.

### MP3 discs

Press **GOTO > [Repeat]** to access the following options:

- **[Single]:** Play a song once.
- **[Repeat one]:** Play a song repeatedly.
- **[Folder]:** Play all the songs in a folder once.
- **[Repeat folder]:** Play all the songs in a folder repeatedly.

### CDDA discs

Press **GOTO** to access the following options and use the **Numeric buttons** to enter track number or time.

- **[Select track]:** Select a track for playback.
- **[Disc go to]:** Skip play to a specific time within the disc.
- **[Track go to]:** Skip play to a specific time within the track.
- **[Repeat]:** Repeat a track repeatedly.
- **[Shuffle]:** Play tracks in random order.
- **[Repeat AB]:** Mark two points within a chapter or track for repeat playback.

### Picture options

- While you view pictures, press the **Up / Down Navigation buttons** to flip the photo vertically or horizontally.
- While you view pictures, press the **Left / Right Navigation buttons** to rotate the picture anti-clockwise or clockwise.
- Select a picture and press **OK** to start a picture slideshow.
- Press **[Stop]** to stop the picture slideshow.
- Press **DISC MENU** to exit the thumbnail browser and access the file browser.
- Press **GOTO > [Repeat]** to access the following options:
  - **[Single]:** Display a picture once.
  - **[Repeat one]:** Display a picture repeatedly.
  - **[Folder]:** Display all the pictures in a folder once.
  - **[Repeat folder]:** Display all the pictures in a folder repeatedly.

## More playback features

### Play a musical slideshow

Play music and pictures simultaneously to create a musical slideshow. The files must be stored on the same disc.

1. Press **▲** > **[Play disc]**.
2. Select a music track, then press **OK**.
3. Press **◀** to return to the previous page.
4. Select a picture from a picture folder, then press **OK** to start the slideshow.
5. Press **■** to stop the slideshow. The photo browser view appears.
6. Press **DISC MENU** to return to the file browser view.
7. Press **■** again to stop the music.

### Quick skip play to a specific time

You can skip to a specific part of a video by entering the time of a scene.

1. While you watch video, press **GOTO**.
2. Select one of the following settings, then press **OK**:

- **[TT time]**: Access the title time.
- **[CH time]**: Access the chapter time.

3. Press the **Numeric buttons** to enter the specific time.

Playback skips to the selected time.

4. Press **GOTO** to exit.

### Switch camera angles

While you watch a DVD, you can view the video from different angles.

**Note:** This feature is only available for DVDs recorded with multiple camera angles.

1. While you watch a DVD, press **GOTO**.
2. Select **[Angle]**, then press **OK**.
3. Press the **Numeric buttons** to select the available camera angles. Playback changes to the selected angle.
4. Press **GOTO** to exit.

## DivX® VOD

This TV is DivX Certified(R) to play DivX (R) video, including premium content. It also plays DivX Video-On-Demand content.

**Note:** The TV only supports DivX playback from its disc player. It does not support DivX playback from USB storage devices.

### Register the TV

To play DivX VOD content, you must first complete a one-off registration process for your TV. The registration is free of charge.

If the TV is not registered when you start the playback of a DivX video, the TV displays the DivX registration code.

To register, follow these steps.

1. While you watch a DVD, press **≡ LIST** and then select **[Video]**.
2. Select **[DivX VOD]** > **[OK]**, then press **OK**.
3. Select **[Register]**, then press **OK**.
4. When the TV displays an 8- or 10-digit registration code, write down the code.
5. On your computer, go to <http://vod.divx.com>. Download the DivX player software and install the software.
6. Start the DivX player software and create a DivX Account. (VOD > Create a DivX Account...)
7. In the DivX player, register the TV with the registration code of the TV. (VOD > Register a DivX Certified Device...)
8. When prompted, download and save the registration video to a disc.
9. Go to your TV and play the registration video disc on your TV. This completes the registration and activates DivX on your TV. Consult the DivX website for detailed support.

### To de-register this TV:

1. While you watch a DVD, press **≡ LIST**.
2. Select **[Video]** > **[DivX VOD]** > **[OK]**, then press **OK**.
3. Select **[Deregister]**, then press **OK**.
4. When the TV displays the 8 or 10-digit registration code, write down the code.
5. On your computer, start the DivX player and deregister the TV with the registration code of the TV. (VOD > Deregister a DivX Certified Device...)

---

## Change disc player settings

**CAUTION:** Most of the settings are already configured with the best value for the disc player. Unless you have a specific reason to change a setting, it is best to leave it at the default value.

1. While you watch a DVD, press **≡ LIST** to access the DVD settings menu.
2. Use the **Navigation buttons** to navigate the menu and **OK** to confirm your selection.
3. Press **≡ LIST** to exit.

### Note:

- You cannot change a setting that is greyed out.
- If you select a setting that is not available on the disc, the default setting is used.

### General settings

1. While you watch a DVD, press **≡ LIST** and then select **[General]**.
2. Select a setting to change, then press **OK**:
  - **[TV display]**: Select a picture display format to fit the TV screen (only available when the disc is not playing).
    - **[4:3 Panascan]**: For a TV with aspect ratio of 4:3. Full-height display with trimmed sides.
    - **[4:3 Letter Box]**: For a TV with aspect ratio of 4:3. Wide-screen display with black bars on the top and bottom of the screen.
    - **[16:9]**: For wide-screen TV. The aspect ratio is 16:9.
  - **[Menu language]**: Select the on-screen display menu language. The number of menu languages available on the disc player may be different from that on the TV.
  - **[Screen saver]**: Enable screen saver mode. If enabled, the screen enters idle mode after 5 minutes of inactivity (for example, in pause or stop mode).
  - **[Disc lock]**: Select **[On]** to lock the disc in the disc compartment. If locked, you need to enter the password to access the disc every time you play the locked disc. If you forget your password, enter '8888' to reset.

- **[Last memory]**: Enable last memory option. If enabled, the player automatically resumes play from the last stop point.

### Audio settings

1. While you watch a DVD, press **≡ LIST** and then select **[Audio]**.
2. Select **[SPDIF setup]**, then press **OK**.
3. Select a setting to adjust, then press **OK**:
  - **[SPDIF output]**: Set the type of digital audio output to disc player and other digital audio systems.
    - **[BITSTREAM]**: Output original or raw digital audio.
    - **[PCM]**: Output raw audio that is converted to PCM.
  - **[LPCM Out]**: Select the audio sampling rate. The higher the sampling rate, the better the sound quality.

### Preference settings

**Note:** You need to stop DVD playback before you can access the preference settings.

1. In DVD mode, press **≡ LIST** and then select **[Preference]**.
2. Select a setting to change, then press **OK**:
  - **[VCD PBC]**: Display or skip the content menu for VCD and SVCD discs.
  - **[Audio]**: Select audio language for disc.
  - **[Subtitle]**: Select subtitle language for disc.
  - **[Disc menu]**: Select language for disc menu.
  - **[Parental]**: Restrict access to discs that are recorded with parental ratings. To play all discs irrespective of the rating, select level '8'.
  - **[Password setup]**: Set or change the PIN code to play a restricted disc.
    - **[Password mode]**: Enable password settings.
    - **[Password]**: Set or change the password for locked discs and restricted disc playback. Enter '8888' to reset the password.
  - **[Default]**: Reset the disc player to the default factory settings.

- **[Version info.]:** Display the current software version of the disc player.

**Note:** You cannot reset the disc lock, password (PIN code) and parental control settings to their default values.

## Update the disc player software

To check for new updates, compare the current software version of your disc player with the latest software version (if available) on the Philips web site.

### Check software version

1. Press **≡ LIST**, then select **[Preference] > [Version info.]**.

The software version is displayed.

### Update software from a CD-R

1. Insert a blank CD-R into your PC and rename the CD-R as **PHILIPS**.
2. Check for the latest software version on [www.philips.com/support](http://www.philips.com/support).
3. Search for your model and click on 'software&drivers'.

Download the software (\*.bin file) onto the CD-R.

4. Insert the CD-R into the TV disc compartment with the disc label facing backwards
5. Follow the instructions on the TV to complete the update.

When complete, the disc player automatically switches off and on again.

If the disc player does not switch off, disconnect the power cord for a few seconds and then reconnect it.

**Caution:** Do not turn off the power or remove the CD-R when the software update is in progress because you might damage the disc player.

## View programme guide

You can view information about digital TV channels using programme guides provided by broadcasters. This information can include:

- Channel schedules for the day ('Now and next') or up to 8 days, if supported by your broadcaster
- Synopsis of programmes

**Note:** Programme guides are available in certain countries only.

### Set programme guide

Before you use the programme guide, check the following settings:

1. Press **🏠**.
2. Select **[Programme guide]**.

### Access the TV programme guide

1. Press **🏠**.
2. Select **[Programme guide]**, then press **OK**.

### Use TV programme guide options

You can customise the displayed information to:

- Remind you when programmes start
  - Display only preferred channels
1. In the programme guide, press **☰ OPTIONS**.
  2. Select an option, then press **OK**:
    - **[Set reminder]:** Set programme reminders.
    - **[Clear reminders]:** Clear programme reminders.
    - **[Change day]:** Select the day to display.
    - **[Show info]:** Display programme information.
    - **[Search by genre]:** Search TV programmes by genre.
    - **[Scheduled reminders]:** List programme reminders.
    - **[Acquire EPG data]:** Update the latest programme information.

---

## View media

---

### What you can do

You can play videos, photos and music on your TV from:

- Your computer connected through the home network (For models with network connector only)
- A USB device connected to the TV

---

### Play files from computer

#### What you need

Available on certain models only.

- A wired or wireless home network, connected with a Universal Plug and Play (uPnP) router.
- A Philips wireless USB adapter (PTA01) or a LAN cable that connects your TV to your home network.
- A media server program running on your computer
- Appropriate settings on your computer firewall to allow you to run the media server program

#### Set up the network

1. Connect your TV and the computer to the same home network. See **Connect your TV > Network and the Internet** (Page 44).
2. Switch on your computer and the router.

#### Note:

If the apparatus does not return to DLNA mode due to external electrical disturbances (e.g. electrostatic discharge), user intervention is required.

#### Set up media sharing

1. Install a media server program on your computer to share media files. Some of the media server programs available are as follows:

- **For PC:** Windows Media Player 11 (or higher) or TVersity
- **For Mac:** Twonky

2. Switch on media sharing on your computer using the media server. For more information on how to set up the media server, refer to the media server's website.

#### Play files

1. Press **⏠**.
2. Select **[Browse network]**, then press **OK**. If the network installation starts, follow the onscreen instructions.
3. Select a file from the content browser, then press **OK** to start play.
4. Press the **Play buttons** on the remote control to control play.

---

### Play files from USB

If you have photos, videos or music files on a USB storage device, you can play the files on TV.

#### Caution:

- TP Vision is not responsible if the USB hard drive is not supported, nor is it responsible for damage to or loss of data in the device.
- Do not overload the USB port. If you connect a USB storage device that consumes more than 500mA power, make sure that it is connected to its own external power supply.

#### View USB contents

1. Connect the USB device to the USB connector on the TV.
2. Press **⏠**, select **[Browse USB]**, then press **OK**.
3. Select a file from the content browser, then press **OK** to start play.
4. Press the **Play buttons** on the remote control to control play. See **Use your TV > View Media > Play options** (Page 21).

## Play options

### Watch video

Press the **Navigation buttons** to select a video file, then press **OK**.

- Press **||** to pause.
- Press **■** to stop.
- Press **◀ / ▶** to search backward or forward.
- Press **↶** to exit the content browser.

### Video playback options

While you play video, press **☰** **OPTIONS** to access the following video options:

- **[Subtitles]**: Select the available subtitles settings.
- **[Audio language]**: Select the available audio language.
- **[Repeat]**: Repeat a video, track or album.
- **[Show info]**: Display the file name.
- **[Eco settings]**: Select energy-saving modes.

### Listen to music

Press the **Navigation buttons** to select a music track, then press **OK**.

- Press **||** to pause.
- Press **■** to stop.
- Press **◀ / ▶** to search backward or forward within a music track.
- Press **↶** to exit content browser.

### Music playback options

Press **☰** **OPTIONS** to access or exit the following music options:

- **[Repeat]**: Repeat a track or an album.
- **[Play once]**: Play the track once.
- **[Shuffle on] / [Shuffle off]**: Enable or disable random play of tracks.
- **[Show info]**: Display the file name.
- **[Eco settings]**: Select energy-saving modes.

### View pictures

Press the **Navigation buttons** to select a picture, then press **▶** to start the slideshow.

- Press **||** to pause.
- Press **■** to stop.
- Press **Navigation buttons** to search for a picture.
- Press **↶** to exit content browser.

### Picture slideshow options

Press **☰** **OPTIONS** to access or exit the following picture options:

- **[Slideshow transitions]**: Select the transition from one picture to the next.
- **[Slideshow frequency]**: Select the display time for each picture in the slideshow.
- **[Repeat] / [Play once]**: View slideshow once or repeatedly.
- **[Shuffle off] / [Shuffle on]**: Enable or disable random display of pictures in the slideshow.
- **[Rotate image]**: Rotate the picture.
- **[Show info]**: Display the picture information.
- **[Set as Scenea]**: Load the selected picture as the TV wallpaper. See **Use more of your TV > View Scenea** (Page 28).

---

## Browse Smart TV

---

### What you can do

\*Available on certain models only.

With Internet Applications (Apps), which are specially adapted Internet websites for your TV, you can enjoy the following features:

- Watch videos online
- Catch up with TV programmes that you missed


#### Note:

- Smart TV services and apps vary from country to country.
- Smart TV displays one page at a time, in full screen.
- Certain websites may not display completely. Functions that require plug-ins may be unavailable.
- TP Vision Netherlands B.V. bears no responsibility regarding the content and the quality of the content provided by the content service providers.

---

### What you need

1. On your home network, connect the TV to the Internet.
2. On your home network, connect a router with a high-speed connection to the Internet.
3. Switch on the router.
4. Install the network. See **Connect your TV > Network and the Internet** (Page 44).

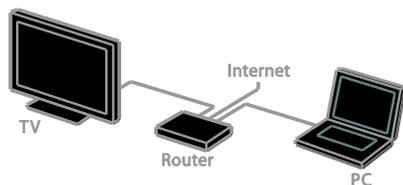

---

### Access Smart TV Applications (Apps)

If your TV is connected to the Internet through your home network, you can watch YouTube videos and view media files from your home network.

### YouTube Leanback

1. Press **⬆**.
2. Select **[YouTube]**, then press **OK**.
3. Follow the onscreen instructions to watch videos.
4. Press **⬆** to exit.

### Browse network

1. Press **⬆**.
2. Select **[Browse network]**, then press **OK**.
3. Select the network to connect.
4. Press the **Navigation buttons** to select a file, then press **OK**.
5. Press **⬆** to exit.

# 3 Use more of your TV

## Play games

### Add a game console

You can play games consoles projected on a wide screen TV with excellent sound. Before you start, connect your game console to this TV. See **Connect your TV > Connect devices > Game console** (Page 40).

For easy access, add the game console to the Home menu.

1. Press **▲**.
2. Select **[Add your devices] > [Game console]**, then press **OK**.
3. Follow the onscreen instructions to add the game console.

### Game setting

The Game option in the Smart picture settings optimises the TV display for gaming without picture lag.

- If you add the game console to the Home menu as **[Game console]**, the TV switches to the game setting automatically.
- If your game console is automatically added to the Home menu as a Blu-ray disc player or DVD player, set the **[Smart picture]** setting to **[Game]** before you start playing.

### Switch to Game setting

1. Press **≡ ADJUST**.
2. Select **[Smart picture] > [Game]**, then press **OK**. The TV is ready for gaming.

**Note:** When your gaming session ends, switch back to your usual Smart Picture setting.

## View Text

### Select a page

While you watch channels that broadcast text, you can view the text.

1. Select a channel that broadcasts text, then press **TEXT**.
2. Select a page in one of the following ways:
  - Enter the page number with the **Numeric buttons**.
  - Press **CH + / CH -** to view the next or previous page.
  - Press the **Colour buttons** to select a colour coded item.
3. Press **↵** to exit.

### Text options

1. While you view text, press **☰ OPTIONS**.
2. Select an option:
  - **[Freeze page] / [Unfreeze page]:** Freeze or unfreeze the current page.
  - **[Dual screen] / [Full screen]:** Enable or disable dual screen text. Dual screen displays both the current channel and the text broadcast on two halves of the TV screen.
  - **[T.O.P. overview]:** Table Of Pages (T.O.P.) text broadcasts allow you to jump from one subject to another without entering page numbers.
  - **[Enlarge] / [Normal view]:** Zoom in on the page. Press the **Navigation buttons** to move around the enlarged view.
  - **[Reveal]:** Hide or reveal hidden information on a page, such as solutions to riddles or puzzles.
  - **[Cycle subpages]:** If subpages are available, each is shown automatically.
  - **[Language]:** Switch to a different language group to correctly display different character sets.
3. Press **☰ OPTIONS** to exit.

---

## Text language

For digital TV channels where the broadcasters provide different text languages, you can select your preferred primary and secondary language.

1. Press **▲**.
2. Select **[Setup]** > **[Channel settings]** or **[Satellite settings]**.
3. Select **[Languages]** > **[Primary Text]** or **[Secondary Text]**.
4. Select a language, then press **OK**.

---

## Subpages

If the text page contains several subpages, you can view each subpage in succession. These subpages are shown on a bar next to the main page number.

If subpages are available, press **◀** or **▶** to select them.

---

## Digital text

If a digital TV channel's broadcaster offers dedicated digital text or interactive services, you can view digital text. Such channels, such as BBC1, may have digital text with more interactive features.

**Note:** Digital text services are blocked when subtitles are broadcast and switched on. See **Set up your TV > Language settings > Subtitles** (Page 34).

When in digital text:

- Press the **Navigation buttons** to select or highlight items.
- Press the **Colour buttons** to select an option, then press **OK** to confirm or activate.

---

## Text 2.5

With Text 2.5, you can view text with more colours and better graphics than normal text. If Text 2.5 is broadcast by a channel, it is switched on by default.

**To switch Text 2.5 on or off**

1. Press **▲**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]**.
3. Select **[Text 2.5]** > **[On]** or **[Off]**, then press **OK**.

---

## Set locks and timers

---

### Clock

You can display a clock on the TV. The clock displays the time that is broadcast by your TV service operator.

**Display the TV clock**

1. While you watch TV, press **☐** **OPTIONS**.
2. Select **[Clock]**, then press **OK**.

The clock is displayed at the top right-hand corner of the TV screen.

**Change the clock mode**

You can change the clock mode to automatic or manual. By default, it is set to automatic mode, which automatically synchronises it to Coordinated Universal Time (UTC). If your TV cannot receive UTC transmissions, change the clock mode to **[Manual]**.

1. While you watch TV, press **▲**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]**.
3. Select **[Clock]** > **[Auto clock]**.
4. Select **[Automatic]** or **[Manual]**, then press **OK**.

**Enable or disable daylight saving time**

You can enable or disable daylight saving time depending on your region. Before you enable or disable daylight saving time, set the clock mode to **[Auto clock]** > **[Manual]**.

1. In the **[Clock]** menu, select **[Daylight saving]**.
2. Select **[Daylight saving time]** or **[Standard time]**, then press **OK**.

Daylight saving time is enabled or disabled.

**Set the clock manually**

You can set the date and time manually. Before you start, set the clock mode to **[Manual]**.

1. In the **[Clock]** menu, select **[Date]** or **[Time]**, then press **OK**.
2. Use the **Navigation buttons** to make your selection.
3. Select **[Done]**, then press **OK**.

---

## Sleeptimer

You can switch the TV to standby after a specified time. During the countdown to the specified time, you can switch off your TV earlier or reset the sleeptimer.

1. Press **⬆️**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]** > **[Sleep timer]**.
3. Press the **Navigation buttons** to set the sleeptimer.

The sleeptimer can be set up to 180 minutes, in steps of ten minutes. To switch off the sleeptimer, set it to zero minutes.

4. Press **OK** to activate the sleep timer. After the specified time, the TV switches to standby.

---

## Child lock

To protect children from unsuitable TV programmes, you can lock the TV or block age rated programmes.

### Set or change the child lock code

1. Press **⬆️**.
2. Select **[Setup]** > **[Channel settings]** or **[Satellite settings]** > **[Child lock]**.
3. Select **[Set code]** or **[Change code]**.
4. Enter the code with the **Numeric buttons**.

**Tip:** If you forget your code, enter '8888' to override any existing codes.

### Lock or unlock channels

1. In the child lock menu, select **[Channel lock]**.
2. Select the channel to lock or unlock, then press **OK**.
3. If prompted, enter the child lock code with the **Numeric buttons**.
4. Restart the TV to activate the lock.

### Note:

If you access the channels from the channel list, you are prompted to enter your lock code.

---

## Parental rating

You can set your TV to display only programmes with age ratings lower than your child's age. This restriction only applies to digital channels from broadcasters that rate their programmes according to age.

1. Press **⬆️**.
2. Select **[Setup]** > **[Channel settings]** or **[Satellite settings]**.
3. Select **[Child lock]** > **[Parental rating]**.

You are prompted to enter the child lock code.

4. Enter the child lock code with the **Numeric buttons**.

5. Select an age rating, then press **OK**. All programmes above the selected age rating are blocked.

For information on child lock codes, see **Use more of your TV > Set locks and timers > Child lock** (Page 25).

---

## Use EasyLink

---

### What you can do

You can get the most out of your HDMI-CEC-compliant devices with Philips EasyLink enhanced control features. Connect your HDMI-CEC compliant devices through HDMI to your TV and control them at the same time with your TV remote control.

**Note:** Other brands describe HDMI-CEC functionality differently. Some examples are Anynet (Samsung), Aquos Link (Sharp) or BRAVIA Sync (Sony). Not all brands are fully compatible with Philips EasyLink.

After you have switched on Philips EasyLink, the following features are available:

### One-touch play

When you play an HDMI-CEC compliant device, the TV switches on from standby and switches to the correct source.

### One-touch standby

When you press **⏻** on the TV remote control, the TV and all HDMI-CEC compliant devices switch to standby mode.

## EasyLink remote control

You can control multiple HDMI-CEC compliant devices with your TV remote control.

## System audio control

If you connect an HDMI-CEC compliant device that includes speakers through the HDMI ARC connector, you can choose to hear the TV audio from those speakers instead of the TV speakers.

## Synchronise audio

If you connect your TV to a home theatre, you can synchronise the audio and video to avoid lag between the picture and sound.

## Retain picture quality

If your TV picture quality is affected by the picture-processing features of other devices, you can switch on Pixel Plus Link to retain picture quality.

## Maximise display for subtitled video

Some video subtitles can create a separate subtitle bar under the video, which limits the video display area. To maximise the video display area, you can switch on auto subtitle shift and display the subtitles on top of the video image.

## Switch off connecting device

If your connecting device is not the active source, you can save energy by setting the TV to switch it to standby.

---

## What you need

- Connect at least two HDMI-CEC compliant devices through HDMI. See **Connect your TV > Connect devices** (Page 38).
- Configure each HDMI-CEC compliant device properly
- Switch on EasyLink

## Switch on EasyLink

1. Press **⏠**.
2. Select **[Setup] > [TV settings] > [EasyLink] > [EasyLink]**.
3. Select **[On]** or **[Off]**, then press **OK**.

---

## Control devices simultaneously

If you connect multiple HDMI-CEC devices that support this setting, you can control all such devices through the TV remote control.

**Note:** This is an advanced setting. Devices that do not support this setting will not respond to the TV remote control.

1. Press **⏠**.
2. Select **[Setup] > [TV settings] > [EasyLink]**.
3. Select **[EasyLink remote control] > [On]** or **[Off]**.
4. Press **OK** to activate.

### Tips:

- To switch back to TV control, press **⏠**, then select **[Watch TV]**.
- To control another device, press **⏠**, then select the device from the Home menu.
- To exit, press **⏪**.

## EasyLink buttons

You can control HDMI-CEC compliant devices with the following buttons on the TV remote control:

- **⏻**: Switch the TV and the connected device on or to standby.
- **Play buttons**: Control video or music play.
- **Numeric buttons**: Select a title, chapter or track.
- **OK**: Start, pause or resume play on the connected device, activate a selection, or access the device menu.
- **⏮ / ⏭**: Search backwards and forwards on the connected device.
- **⏠**: Display the TV Home menu.

You can also control devices through other EasyLink buttons that are available through the On-Screen Remote Control (OSRC).

## To access the OSRC

1. While you view content from a connected device, press **⏻** **OPTIONS**.
2. Select **[Show remote control]**, then press **OK**.
3. Select an onscreen button, then press **OK**.
4. Press **⏪** to exit.

---

## Select speaker output

If the connected device is HDMI-CEC compliant, you can output TV audio through an HDMI cable. Make sure that you connect the device to the HDMI connector on the TV. See **Connect your TV > About cables > HDMI** (Page 37).

### Configure TV speakers

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [EasyLink] > [TV speakers]**.
3. Select an option, then press **OK**:
  - **[Off]**: Switch off TV speakers.
  - **[On]**: Switch on TV speakers.
  - **[EasyLink]**: Stream TV audio through the HDMI-CEC device. Switch the TV audio to the connected HDMI-CEC audio device through the Adjust menu.
  - **[EasyLink autostart]**: Switch off TV speakers automatically and stream TV audio to the connected HDMI-CEC audio device.

### Select speaker output with the adjust menu

If **[EasyLink]** or **[EasyLink autostart]** is selected, you can change how the TV audio is streamed to the connected HDMI-CEC device.

1. While you watch TV, press **⏸ ADJUST**.
2. Select **[Speakers]**, then press **OK**.
3. Select one of the following, then press **OK**:
  - **[TV]**: On by default.  
Stream TV audio through TV and the connected HDMI-CEC audio device until the connected device switches to system audio control. TV audio is then streamed through the connected device.
  - **[Amplifier]**: Stream audio through the connected HDMI-CEC device. If system audio mode is not enabled on the device, audio continues to stream from the TV speakers. If **[EasyLink autostart]** was selected, the TV prompts the connected device to switch to system audio mode.

### With HDMI ARC compliant device

If an HDMI-ARC compliant device is connected through an HDMI ARC connector to the TV, you can output TV audio through the HDMI cable. You will not need an additional audio cable.

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [EasyLink]**.
3. Select **[HDMI1 - audio out] > [On]**.
4. Select one of the following, then press **OK**.
  - **[On]**: Hear the TV audio through the connected ARC compliant device.
  - **[Off]**: Hear the TV audio through the TV speakers, or through a device connected through the digital audio out connector.
5. Control playback with the TV remote control play buttons.

### Listen to another device when TV is in standby

If available, you can press **⏸ ADJUST** to receive audio from a connected Philips EasyLink device while the TV is in standby mode.

---

## Synchronise audio

If your TV is connected to a home theatre and there is a lag between the picture and the sound, you can synchronise them.

- If you are using a Philips home theatre, the audio and video are automatically synchronised.
- For other home theatre brands, you need to switch on the audio sync delay on the TV to synchronise the audio and video.

### Switch on Audio Out Delay

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [Sound]**.
3. Select **[Audio out delay] > [On]**, then press **OK**.

---

## Retain picture quality

If your TV picture quality is affected by the picture-processing features of other devices, you can switch on Pixel Plus Link.

### Switch on Pixel Plus Link

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [EasyLink]**.
3. Select **[Pixel Plus Link] > [On]**, then press **OK**.

---

## Maximise video display

Some subtitles create a separate subtitle bar under the video that limits the video display area. To maximise the video display area, you can switch on auto subtitle shift. The subtitles are then displayed over the video image.

### Switch on auto subtitle shift

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [EasyLink] > [Auto subtitle shift]**.
3. Select **[On]**, then press **OK** to activate.

**Note:** Make sure that the picture format of the TV is set to **[Auto format]** or **[Movie expand 16:9]**.

---

## Switch off connecting device

You can set the TV to switch off connecting HDMI-CEC compliant devices if they are not the active source. The TV switches the connecting device to standby after 10 minutes of inactivity.

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [EasyLink]**.
3. Select **[Auto switch off devices] > [On]**, then press **OK** to activate.

---

## View Scenea

---

### What you can do

With Scenea, you can display a picture as the wallpaper on your TV. Display the default picture or load your own picture as the wallpaper.

The wallpaper is displayed for 240 minutes or for the duration of the sleeptimer.

---

### Switch on

1. Press **⬆**.
2. Select **[Scenea]**, then press **OK**.

The default picture is displayed.

**Note:** The wallpaper is displayed for 240 minutes or for the duration of the sleeptimer. For information about the sleeptimer, see **Use more of your TV > Set locks and timers > Sleeptimer** (Page 25).

---

### Load TV wallpaper

You can also load your own picture as the wallpaper.

**Note:** When you load a new picture, it overrides the existing picture.

1. Connect the USB storage device to the TV.
2. Press **⬆**.
3. Select **[Browse USB]**, then press **OK**.
4. Select a picture, then press **⏏** **OPTIONS**.
5. Select **[Set as Scenea]**, then press **OK**.
6. Press any button to exit Scenea.

# 4 Set up your TV

## Picture and sound

### Settings assistant

You can select picture and sound settings with the help of the settings assistant, which demonstrates the effect of your chosen setting immediately.

1. While you watch TV, press **▲**.
2. Select **[Setup]** > **[Quick picture and sound settings]**, then press **OK**.
3. Select **[Continue]**, then press **OK**.
4. Follow the onscreen instructions to choose your preferred settings.

### More picture settings

You can change the settings in the Picture menu.

1. Press **▲**.
2. Select **[Setup]** > **[TV settings]** > **[Picture]**, then press **OK**.
3. Select a setting to adjust, then press **OK**.
  - **[Smart picture]**: Access predefined smart picture settings.
  - **[Reset]**: Reset to default factory settings.
  - **[Backlight]**: Change the brightness of the TV to match the lighting condition.
  - **[Video contrast]**: Change the intensity of the bright areas, keeping dark areas unchanged.
  - **[Brightness]**: Change the intensity and details of the dark areas.
  - **[Colour]**: Change colour saturation.
  - **[Sharpness]**: Change sharpness.
  - **[Noise reduction]**: Filter and reduce noise.
  - **[Tint]**: Change the colour balance.
  - **[Custom tint]**: Customise tint setting. (Only available if **[Tint]** > **[Custom]** is selected)

- **[Digital Crystal Clear]**: Control advanced settings to fine-tune each pixel to match surrounding pixels. Produce a brilliant, high definition image.
  - **[Advance sharpness]**: Enable superior sharpness, especially on lines and contours in the picture
  - **[Dynamic contrast]**: Set the level at which the TV automatically enhances details in the dark, middle and light areas of the picture.
  - **[Dynamic backlight]**: Reduce power consumption by dimming the TV backlight to match the room lighting conditions.
  - **[MPEG artifact reduction]**: Smooth the digital transitions in the picture.
  - **[Colour enhancement]**: Change the colours to be more vivid and improve the resolution of details in bright colours.
  - **[Gamma]**: Non-linear setting for picture luminance and contrast.
- **[PC mode]**: When a PC is connected through HDMI, change the picture format to **[Unscaled]** to display maximum detail.
- **[Picture format]**: Change the picture format.
- **[Screen edges]**: Change the picture size.
- **[Picture shift]**: Move the position of the picture. You cannot select this setting if the selected picture format is **[4:3]**, **[Auto fill]**, **[Auto zoom]** or **[Wide screen]**.

### More sound settings

You can change the settings in the Sound menu.

1. Press **▲**.
2. Select **[Setup]** > **[TV settings]** > **[Sound]**, then press **OK**.
3. Select a setting to change, then press **OK**:
  - **[Smart sound]**: Access predefined smart sound settings.
  - **[Reset]**: Reset to factory default settings.

- **[Clear Sound]**: Enhance the sound quality.
- **[Bass]**: Change the bass level.
- **[Treble]**: Change the treble level.
- **[Surround]**: Switch on spatial sound.
- **[Auto volume levelling]**: Automatically reduce sudden volume changes, for example when switching channels.
- **[Headphone volume]**: Change headphone volume.
- **[Balance]**: Change the balance of the left and right speakers.
- **[Audio out delay]**: Automatically sync the image on the TV to the audio from a connected home theatre.
- **[Audio out offset]**: Change the setting for audio output delay. You cannot select this setting if **[Audio out delay]** is not switched on.
- **[Digital output format]**: Select audio output through the digital audio connector. Select **[PCM]** to convert non-PCM audio or **[Multichannel]** to output to home theatre.
- **[Digital output level]**: Set the sampling rate for PCM audio.  
**[Normal]** - No loss in intensity or signal strength; **[Low]** - Certain amount of loss in intensity or signal strength.

---

## Select audio format

If a digital TV channel broadcaster streams audio in several formats, you can select an audio format.

1. Press **⬆**.
2. Select **[Setup]** > **[Channel settings]** or **[Satellite settings]** > **[Language]**.
3. Select a setting, then press **OK**:
  - **[Preferred audio format]**: Receive standard audio format (MPEG) or advanced audio formats (AAC, EAC-3 or AC-3 if available).
  - **[Mono/Stereo]**: If stereo broadcasting is available, select mono or stereo audio.
4. Press **⬅** to exit.

---

## Reset picture and sound

You can restore the default picture and sound settings, while the channel installation settings remain the same.

1. While you watch TV, press **⬆**.
2. Select **[Setup]** > **[TV settings]** > **[Factory settings]**, then press **OK**.

All TV settings (except for channel settings) are reset to the default factory settings..

---

## Channel settings

---

### Automatic install

When the TV was switched on for the first time, a full installation of channels was performed. To change your language, country and reinstall all available TV channels, you can run this full installation again.

#### Start installation

1. Press **⬆**.
2. Select **[Setup]** > **[Search for channels]** > **[Reinstall channels]**, then press **OK**.  
The Country menu is displayed.
3. Select your country, then press **OK**.
4. Select your network, then press **OK**:

- **[Antenna]**: Access free-to-air antenna or digital DVB-T channels.
- **[Cable]**: Access cable or digital DVB-C channels.

5. Follow the onscreen instructions to select other options, if any.

The start menu for channel search is displayed.

6. Start channel search:

- If your channel service provider instructs you to change settings, select **[Settings]**, then press **OK**. Follow the service provider's instructions to complete the installation.
- Otherwise, select **[Start]**, then press **OK**.

7. Once the channel search is complete, select **[Finish]**, then press **OK**.

**Tip:** Press **≡ LIST** to see the channel list.

**Note:** When digital TV channels are found, the list of installed channels may display empty channel numbers. You can rename, reorder or uninstall these channels.

---

## Install analogue channels

You can search and store analogue TV channels one by one.

### Step 1: Select your system

**Note:** Skip this step if your system settings are correct.

1. While you watch TV, press **⬆️**.
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Analogue: Manual antenna installation]** > **[System]**, then press **OK**.
4. Select the system for your country or region, then press **OK**.

### Step 2: Search and store new TV channels

1. In the **[Analogue: Manual antenna installation]** menu, select **[Find channel]**, then press **OK**.
2. Find the channel:
  - If you know the channel frequency, enter it with the **Navigation buttons** or **Numeric buttons**.
  - If you do not know the channel frequency, search for the next frequency that has a strong signal. Select **[Search]**, and then press **OK**.
3. After you have found the correct channel, select **[Done]**, then press **OK**.
4. Select **[Store as new channel]**, then press **OK** to store the new TV channel.

**Note:** If the reception is poor, reposition your antenna and repeat the procedure.

---

## Install digital channels

If you know the channel frequency of the channels you want to install, you can search and store digital channels one-by-one. For best results, contact the service provider.

1. Press **⬆️**.
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Digital: Reception test]** > **[Find channel]**, then press **OK**.
4. Press the **Numeric buttons** to enter the channel frequency.
5. Select **[Search]**, then press **OK**.
6. When the channel is found, select **[Store]**, then press **OK**.
7. Press **⏪** to exit.

**Note:** If your cable provider does not provide you with a specific symbol rate value for DVB-C channels, select **[Automatic]** in **[Symbol rate mode]**.

---

## Fine-tune analogue channels

If the reception of an analogue TV channel is poor, you can fine-tune the TV channel.

1. Press **⬆️**.
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Analogue: Manual antenna installation]** > **[Fine tune]**, and then press **OK**.
4. Press **▲** or **▼** to fine-tune the channel.
5. When you have selected the correct channel frequency, select **[Done]**, and then press **OK**.
6. Select an option, then press **OK**.
  - **[Store current channel]**: Store the channel as the current channel number.
  - **[Store as new channel]**: Store the channel as a new channel number.

---

## Update channel list

When the TV was switched on for the first time, a full installation of channels was performed.

By default, when there are changes to these channel lists, the TV updates them automatically. You can also switch off the automatic update or manually update the channels.

**Note:** If you are prompted to enter a code, enter '8888'.

### Automatic update

To add or remove digital channels automatically, leave the TV in standby mode. The TV updates channels and stores new channels everyday. Empty channels are removed from the channel list.

### Switch off the channel update message

If a channel update is performed, a message is displayed at startup. You can switch off this message.

1. Press **⬆**.
2. Select **[Setup]** > **[Channel settings]** or **[Satellite settings]**.
3. Select **[Channel installation]** > **[Channel update message]**.
4. Select **[Off]**, then press **OK**.

### To switch off automatic updates

In the **[Channel installation]** menu, select **[Automatic channel update]** > **[Off]**.

### Update channels manually

1. Press **⬆**.
2. Select **[Setup]** > **[Search for channels]** > **[Update channels]**, then press **OK**.
3. Follow the onscreen instructions to update the channels.

---

## Satellite settings

---

### What you can do

#### View satellite channels

##### Note:

- Satellite signal is available on certain models only.  
**[Search for satellite]** is only available if the TV supports DVB-S.
- To receive satellite channels, connect a satellite receiver to the SAT connector on your TV.

#### LNBS

This TV can receive signals from 4 different low noise block-down converters (LNBS). An LNB is mounted at the end pole of the dish antenna and captures signals from a satellite.

---

### Install satellite channels

#### Install satellite channels

1. While you watch TV, press **⬆**.
2. Select **[Setup]** > **[Search for satellite]** > **[Reinstall channels]**.
3. Follow the onscreen instructions to complete the installation.
4. Once complete, select **[Finish]**, then press **OK**.

#### Select connection type

While you install satellite channels, you need to set the connection type. The number of LNBS on your dish antenna determines the number of satellite channels you can install.

1. After you select **[Reinstall channels]**, select **[Settings]** and then press **OK**.
2. Select **[Connection type]**.
3. Select a setting, then press **OK**.
  - **[OneLNB]**: Select if you have only one LNB.
  - **[DiSeqC Mini (2 LNBS)]**: Select if you have 2 LNBS.
  - **[DiSeqC 1.0 (3-4 LNBS)]**: Select for 3 or 4 LNBS.

## Test signal strength

If a channel or transponder is skipped during installation, you can test the signal strength of a satellite or add a new channel.

1. While you watch TV, press **▲**.
2. Select **[Setup]** > **[Search for satellite]** > **[Satellite reception test]**, then press **OK**.
3. Select the LNB.
4. If you know the frequency of the transponder (which can include several channels), select **[Frequency]** and enter it.
5. Select **[Search]**, then press **OK**.
6. If a new frequency is found, press **[Store]** to add the new transponder with its channels.

## Update satellite channels

1. While you watch TV, press **▲**.
2. Select **[Setup]** > **[Search for satellite]** > **[Update channels]**.
3. Follow the onscreen instructions to complete the installation.
4. Once complete, select **[Finish]**, then press **OK**.

## Add and remove satellites

You can add or remove satellites at any time, and install channels from new satellites.

**Note:** Before you add satellites, make sure that the connection type is correct. See **Set up your TV > Satellite Settings > Install channels** (Page 32).

1. Press **▲** > **[Setup]** > **[Search for satellite]**, then press **OK**.
2. Select **[Add satellite]**, then press **OK**.  
The TV searches for a satellite on the first free LNB. This can take several minutes. If no satellite is found, check the antenna connections and the position of the dish antenna.
3. If no satellite is found, select **[Restart]**.
  - If you are satisfied with the added satellite, install the channels.
4. To install all channels, select **[Install]**. The installation can take several minutes.

## Remove a satellite

1. Press **▲** > **[Setup]** > **[Search for satellite]**.
2. Select **[Remove satellite]**, then press **OK**.
3. Select the satellite you want to remove, then press **OK**.

## Language settings

### Menu language

1. While you watch TV, press **▲**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]** > **[Menu language]**.
3. Select a menu language from the list, then press **OK**.

### Audio language

#### Set default audio language

For digital channels that are broadcast with multiple audio languages, you can set your preferred audio languages. The TV automatically switches to one of these languages, if they are available.

1. Press **▲**.
2. Select **[Setup]** > **[Channel settings]** or **[Satellite settings]** > **[Language]**.
3. Select **[Primary audio language]** or **[Secondary audio language]** to set the preferred audio languages, then press **OK**.
4. Select the language, then press **OK**.

#### Select audio language

If the TV channel broadcasts multiple or dual audio languages, you can select the preferred audio language.

1. While you watch TV, press **□** **OPTIONS**.
2. Select **[Audio language]** for digital channels or **[Dual I-II]** for analogue channels, then press **OK**.
3. Select from the available languages, then press **OK**.

### Subtitles on analogue channels

1. While you watch an analogue TV channel, press **TEXT**.
2. Enter the three-digit page number of the subtitles page (usually '888').  
If available, subtitles are switched on.
3. Press **▲** to exit text.

---

## Subtitles on digital channels

1. While you watch a digital TV channel, press **⏸** **OPTIONS**.
2. Select **[Subtitles]**, then press **OK**.
3. Select **[Subtitles off]**, **[Subtitles on]** or **[On during mute]**, then press **OK**.  
If you select **[On during mute]**, subtitles are displayed only when you press **⏸** to mute the sound.

**Note:** If an MHEG application is activated, subtitles are not displayed.

---

## Subtitle language

For certain digital channels, you can change the subtitle language.

1. While you watch TV, press **⏸**.
2. Select **[Setup]** > **[Channel settings]** or **[Satellite settings]** > **[Language]**.
3. Select **[Primary subtitle language]** or **[Secondary subtitle language]** for the preferred language.
4. Press **OK** to confirm.

**Tip:** Press **⏸** **OPTIONS** > **[Subtitle language]** to change the subtitle language for a specific channel.

---

## Universal access settings

---

### Switch on

Some digital TV broadcasters provide special audio and subtitle features for people who are hearing or visually impaired. You can switch these features on or off.

1. Press **⏸**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]**.
3. Select **[Universal access]** > **[On]** or **[Off]** then press **OK**.

---

### Hearing impaired access

**Tip:** To make sure that a hearing impaired audio language is available, press **⏸** **OPTIONS**, then select **[Audio language]**. Languages with an ear icon support hearing impaired audio.

### To switch on hearing impaired audio and subtitles

1. While you watch TV, press **⏸** **OPTIONS**.
2. Select **[Universal access]** > **[Hearing impaired]**.
3. Press a button to select an option:
  - **Red:** Switch off hearing impaired features.
  - **Green:** Switch on hearing impaired audio and subtitles.
4. Press **➔** to exit.

---

### Visually impaired access

**Tip:** To make sure that a visually impaired audio language is available, press **⏸** **OPTIONS**, then select **[Audio language]**. Languages with an eye icon support visually impaired audio.

### To switch on visually impaired audio

1. While you watch TV, press **⏸** **OPTIONS**.
2. Select **[Universal access]**.
3. Press the **Green** button to select **[Visually impaired]**.
4. Press a button to select an option:
  - **Red button - [Off]:** Switch off visually impaired audio.
  - **Green button - [On]:** Switch on visually impaired audio.
5. Press **➔** to exit.

**Note:** If the EasyLink remote control is switched on, you cannot select the **Green** button. To switch off EasyLink, see **Use more of your TV > Use EasyLink > What you need** (Page 26).

### Select audio from speakers or headphones

You can choose to hear the visually impaired audio through the TV speakers, headphones or both.

1. Press **⏸**.
2. Select **[Setup]** > **[Channel settings]** > **[Languages]** > **[Visually impaired]** > **[Speakers/ Headphones]**.
3. Select a setting, then press **OK**.
  - **[Speaker]:** Hear visually impaired audio from speakers only.
  - **[Headphone]:** Hear visually impaired audio from headphones only.

- **[Speaker + headphone]:** Hear visually impaired audio from speakers as well as headphones.

### Change volume for visually impaired audio

1. Press **⬆️**.
2. Select **[Setup]** > **[Channel settings]** > **[Languages]** > **[Visually impaired]** > **[Mixed volume]**.
2. Press the **Navigation buttons** to change the volume, then press **OK**.
3. Press **➡️** to exit.

### Audio feedback for the visually impaired

When you press a button on the remote control or TV, you can set the TV to play a beep.

1. In the **[Universal access]** menu, press the **Blue button** to select **[Key beep]**.
2. Press the **Green button** to turn on audio feedback or press the **Red button** to turn it off.
3. Press **➡️** to exit.

### Enable audio effects

1. Press **⬆️**.
2. Select **[Setup]** > **[Channel settings]** > **[Languages]** > **[Visually impaired]** > **[Audio effects]**.
3. Select a setting, then press **OK**.
  - **[On]:** Enable audio effects in the visually impaired audio.
  - **[Off]:** Disable audio effects in the visually impaired audio.

### Choose type of speech

1. Press **⬆️**.
2. Select **[Setup]** > **[Channel settings]** > **[Languages]** > **[Visually impaired]** > **[Speech]**.
3. Select a setting, then press **OK**.
  - **[Descriptive]:** Hear descriptive speech in the visually impaired audio.
  - **[Subtitles]:** Hear subtitles in the visually impaired audio.

## Other settings

### TV demo

You can start a demo to find out more about the features on this TV.

**Note:** Demos are not supported on MHEG channels.

1. While you watch TV, press **⬆️**.
2. Select **[Setup]** > **[Watch demos]**, then press **OK**.
3. Select a demo, then press **OK**.
4. Press **⬆️** to exit.

### Location

To make sure that the correct TV settings are applied, you can select where the TV is used.

### Shop or home mode

Select **[Home]** mode to access all TV settings. In **[Shop]** mode, you can access only limited settings.

1. While you watch TV, press **⬆️**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]**.
3. Select **[Location]** > **[Home]** or **[Shop]**, then press **OK**.
4. Restart the TV.

### Placement

- Before you position the TV, read all safety precautions. See **Get Started > Important > Safety** (Page 6).
- Position the TV where light does not shine directly on the screen.
- The ideal viewing distance of this TV is three times its diagonal screen size. For example, if the diagonal screen size of the TV is 81 cm / 32", the ideal viewing distance is ~2.5 m / ~92" from the front of the screen.
- While seated, your eyes should be level with the centre of the screen.

### Stand mount or wall mount

You can apply the best settings for your TV by selecting wall mount or stand mount.

1. In the **[Preferences]** menu, select **[TV position]**.
2. Select **[On a TV stand]** or **[Wall mounted]**, then press **OK**.

---

## Update software

---

### Check version

1. Press .
2. Select **[Setup]** > **[Software settings]** > **[Current software inf]**, then press **OK**.

The version of the current software is displayed.

**Caution:** Do not install a lower version of software than the current version installed on your product. TP Vision cannot be held liable or be made responsible for problems caused by a software downgrade.

Update the software through one of these methods:

- update with USB storage device
- update from digital broadcast

---

### Update with USB

Before you update the software, make sure that you have:

- A USB storage device that has at least 256 megabytes of storage space, is FAT or DOS formatted and has its write protection disabled.
- Access to a computer with a USB connector and Internet access.

**Note:** Do not use a USB hard drive.

1. Connect a USB storage device.
2. Press .
3. Select **[Setup]** > **[Update software]**, then press **OK**.

The update assistant starts.

4. Follow the onscreen instructions to start the update.

**Note:** The update assistant directs you to the Philips support website. See the installation instructions on the website to complete the update.

---

## Update from digital broadcast

When available, the TV can receive software updates through digital broadcasts. When a software update is received, you are prompted to update the software. We strongly recommend that you update the software when prompted.

Follow the onscreen instructions.

**Note:** To update the software later, select  > **[Setup]** > **[Software settings]** > **[Local updates]**.

Select the file that you downloaded and follow the onscreen instructions to complete the update.

---

## Restore default settings

You can reset all picture and sound settings and reinstall all TV channels on your TV.

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[Reinstall TV]**, then press **OK**.
3. Follow the onscreen instructions.

# 5 Connect your TV

## About cables

### Cable quality

#### Overview

Before you connect devices to the TV, check the available connectors on the device. Connect the device to the TV with the highest quality connection available. Good quality connectors transfer picture and sound better.

The connections shown in this user manual are recommendations only. Other solutions are possible.


**Tip:** If your device only has composite or RCA connectors, use a SCART-cinch adapter to connect the device to a SCART connector on the TV.

### HDMI

An HDMI connection has the best picture and sound quality.

- An HDMI cable combines video and audio signals. Connect HDMI for high-definition (HD) TV signals and to switch on EasyLink.
- An HDMI Audio Return Channel (ARC) connector allows output of TV audio to an HDMI ARC compliant device.


- Connect HDMI cables shorter than 5 meters/16.4 feet.

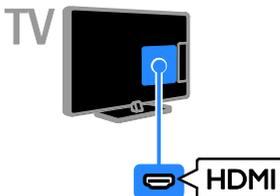

### SCART

A SCART connection combines video and audio signals.


SCART connectors can handle RGB video signals but cannot handle high-definition (HD) TV signals.

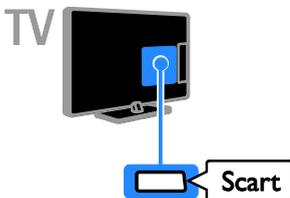

### VGA

You can connect VGA to display PC content on the TV.

VGA only transmits video. For sound, also connect to AUDIO IN.

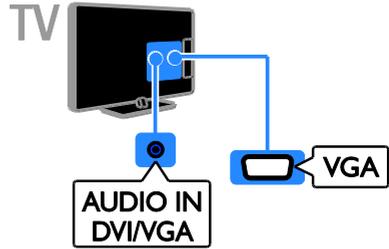

---

## Connect devices

---

### Blu-ray or DVD disc player


Connect the disc player to the TV with an HDMI cable.



---

### TV receiver


Connect the digital TV receiver with an antenna cable to the TV.

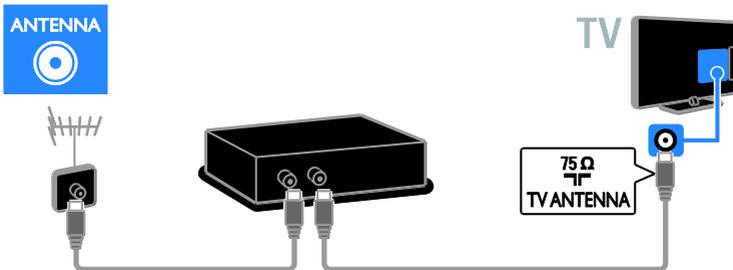

Connect the satellite or digital TV receiver to the TV with an HDMI cable.




Connect the satellite or digital TV receiver to the TV with a SCART cable.

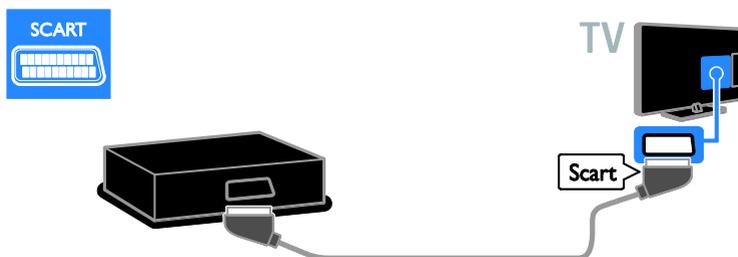


---

## Video recorder

Connect the recorder to the TV with an antenna cable.

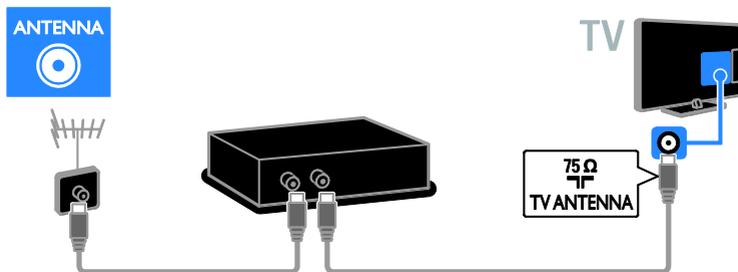

Connect the recorder to the TV with a SCART cable.

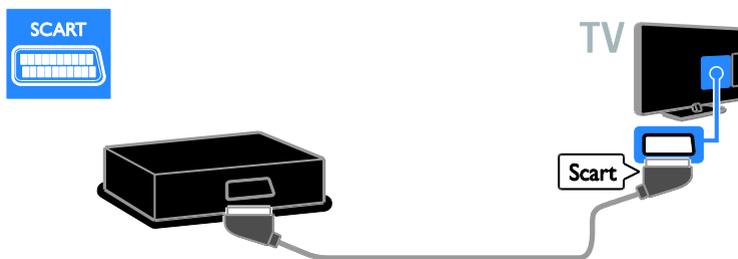

---

## Game console


Connect the game console to the TV with an HDMI cable.




---

## Home theatre

Connect the home theatre to the TV with an HDMI cable and an optical cable.

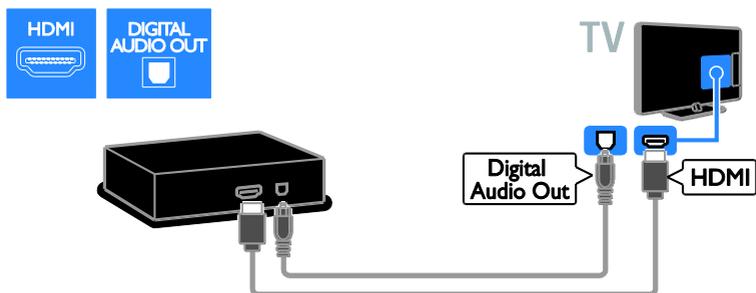


Connect the home theatre to the TV with a SCART cable.

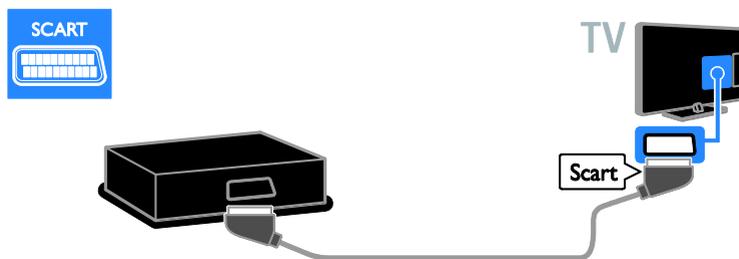

---

## Digital camera


Connect the digital camera to the TV with a USB cable. (For certain camera models only)

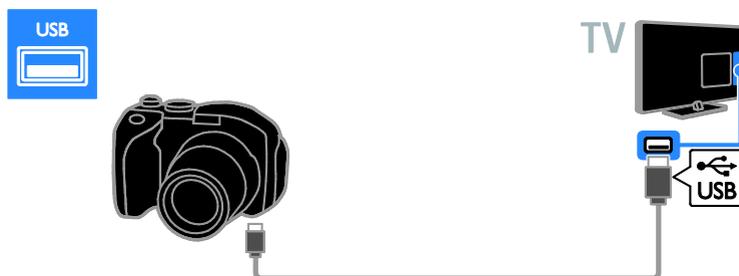

---

## Digital camcorder

Connect the digital camcorder to the TV with an HDMI cable.

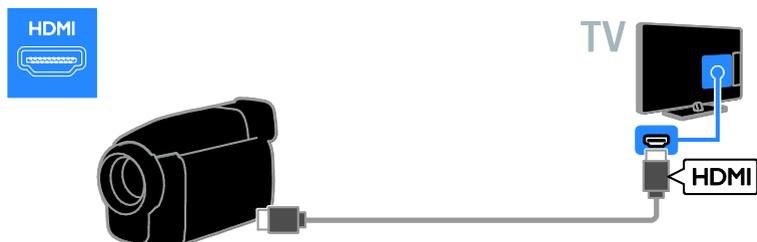

---

## Connect more devices

---

### USB hard drive


Connect the USB hard drive to the TV with a USB cable.




---

### Computer


Connect the computer to the TV with an HDMI cable.

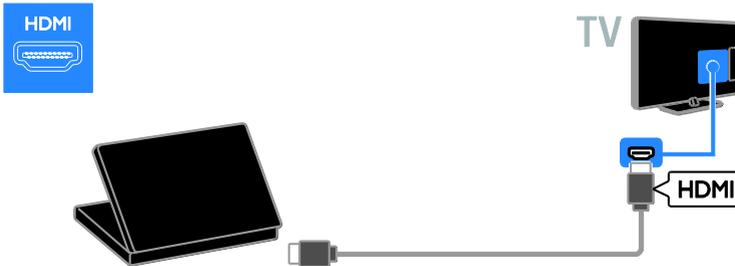

Connect the computer to the TV with a DVI-HDMI cable and an audio cable.

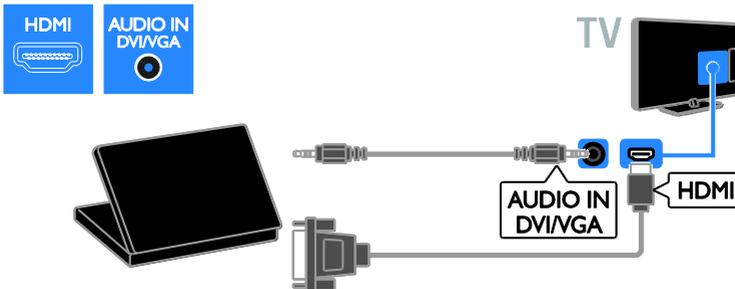

Connect the computer to the TV with a VGA cable and an audio cable.

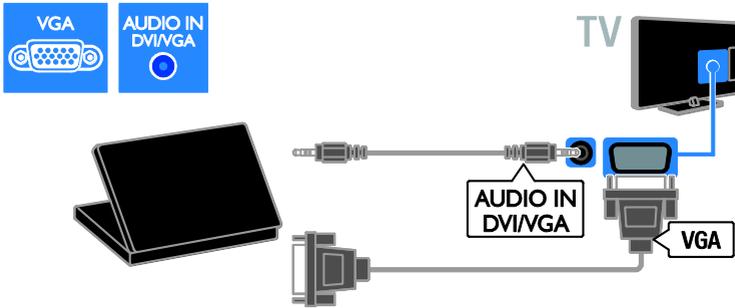

---

## Watch a connected device

---

### Add new device

Before you can watch a connected device,

- Add its icon to the Home menu for easy access. See **Connect your TV > Connect device** (Page 38).
- Select from the Source menu.

**Note:** If you connect an HDMI-CEC compliant device to the TV through the HDMI connector and switch it on, the device will be automatically added to the Home menu.

1. Connect and switch on the device.
  2. Press **⬆️**.
  3. Select **[Add new device]**, then press **OK**.
  4. Follow the onscreen instructions.
- If you are prompted to select the TV connection, select the connector that this device uses.

---

### Rename device

After you have added a new device to the Home menu, you can rename it.

1. Press **⬆️**.
2. Select the device icon from the Home menu.
3. Press **☰** **OPTIONS**.
4. Select **[Rename]**, then press **OK**.  
A text input box appears.
5. Press the **Numeric buttons** and the **Navigation buttons** to select and enter the name.
6. When complete, select **[Done]**, then press **OK**.

---

### Select a source

#### From Home menu

After you have added the new device to the Home menu, you can select the new device icon to view its contents.

1. Press **⬆️**.
2. Select the device icon from the Home menu.
3. Press **OK** to confirm.

#### From Source menu

You can also press **☰** **SOURCE** to display a list of connector names. Select the connector that connects the device to the TV.

1. Press **☰** **SOURCE**.
2. Press the **Navigation buttons** to select a connector in the list.
3. Press **OK** to confirm.

---

### Remove device

If the device is no longer connected to the TV, you can remove it from the Home menu.

1. Press **⬆️**.
  2. Select the device icon from the Home menu.
  3. Press **☰** **OPTIONS**.
  4. Select **[Remove device]**, then press **OK**.
  5. Select **[Remove]**, then press **OK**.
- The selected device is removed from the Home menu.

---

## Network and the Internet

---

### What you can do

**Note:** Network and Internet access are available on certain models only.

#### View Media

If you connect the TV to a home network, you can play photos, music and videos from your computer. See **Use your TV > View Media** (Page 20).

#### Smart TV


If you connect the TV to a home network with an Internet connection, you can browse Smart TV. Smart TV offers Internet services and websites tailored to your TV. Play music and videos, consult infotainment, rent movies and much more. See **Use your TV > Browse Smart TV** (Page 22).

## What you need

**Warning:** This TV complies with the EMC directive only when you use a shielded Cat5 Ethernet cable.


- An Ethernet cable
- A computer network that includes:
  - a) A universal plug-and-play (UPnP) router and
  - b) A computer with one of the following operating systems: Microsoft Windows XP, Microsoft Windows Vista, Mac OS X or Linux.
- To connect your TV to computers, you also need media server software that is set to share files with your TV. See **Use your TV > View media** (Page 20).
- To connect your TV to the Internet, you also need a high-speed connection to the Internet.

## Connect

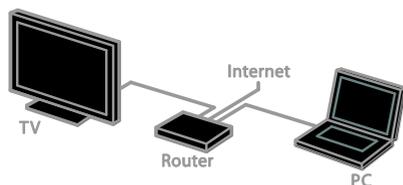

You can connect this TV to your home network through a wired or wireless connection.

- For a wired connection, see **Connect your TV > Network and the Internet > Wired connection** (Page 45).

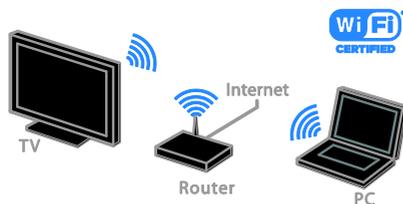

- For a Wi-Fi ready connection, see **Connect your TV > Network and the Internet > Wi-Fi ready** (Page 45).

## Wired connection

1. Switch on the router and switch on its DHCP setting.
2. Connect the router with an Ethernet cable to the TV.
3. Press **Home**, then select **[Setup]**.
4. Select **[Connect to network]**, then press **OK**.
5. Follow the onscreen instructions to install the network.
6. Wait for the TV to find the network connection.
7. If you are prompted, agree to the End User Licence Agreement.

## Wi-Fi ready

**This section is only for Wi-Fi ready TVs.**

With the Philips wireless USB adapter PTA01 (sold separately), you can connect the TV to your home network wirelessly. You can enjoy the best of the Internet from Smart TV services and share content between your connected devices using DLNA.

### Note:

The wireless network operates in the same 2.4GHz frequency spectrum as common household devices, such as Dect phones, microwave ovens or Bluetooth devices, which can cause Wi-Fi interference. Move these devices away from the TV.

- To reduce network traffic, switch off unused network equipment in the home network.
- Reception quality depends on the location of the wireless router and the local Internet service provider.
- When playing video over your wireless home network, we recommend that you use an IEEE 802.11 N router. The connection speed may differ according to the operating environment of your wireless home network.

## Start wireless setup

1. Switch on your wireless network router.
2. Connect the Philips USB adapter PTA01 to a USB connector on the TV.  
The wireless installation starts automatically.
3. Follow the onscreen instructions.

**Tip:** Keep the wireless USB adapter connected to the TV.

## WPS - Wi-Fi Protected Setup

1. If your router supports WPS (WiFi Protected Setup), press the WPS button on the router.
2. After 2 minutes, select **[WPS]** on the TV, then press **OK**.

The TV connects to your network. This takes about 2 minutes.

Most new wireless routers have the WPS system and carry the WPS logo. The WPS system uses WPS security encryption and cannot be combined with devices on your network that use the WEP (Wired Equivalent Privacy) security encryption.

If you still need the WEP devices in your network, install with **[Scan]** > **[Custom]**.

## Scan for routers

If you have several routers in your network, you can select the network you need.

1. To select a specific network router, press **[Scan]** on the first page of the installation.  
The routers with WPS and the strongest signal are shown first in the list on screen.
2. Select the router you need, then press **OK**.

- If you are connecting to a WPS router, select **[WPS]** on the TV.
- If you want to set the PIN code in your router software to connect, select **[WPS pin]** and note down the code.
- To enter the encryption key manually, select **[Standard]** and enter the key when prompted.

## Set secured connection with WPS encryption

1. To set the secured connection with a PIN code, select the **[WPS pin]** and press **OK**.
2. Write down the 8-digit PIN code shown on TV and enter it in the router software on your PC.

See the router manual for where to enter the PIN code.

## Set secured connection with WPA encryption

If your router has WPA (WiFi Protected Access) security, enter the pass phrase with the remote control.

1. To enter the encryption key manually, select **[Standard]** and press **OK**.
2. To access the onscreen keyboard, select the text entry field, then press **OK**.

## Set secured connection with WEP encryption

If your router has WEP security, the TV asks for the WEP encryption key in hexadecimal numbers.

1. Locate the hexadecimal key in the router software on your PC and make a note of of the first key in the WEP keys list.
2. Enter the security key on the TV with the remote control to connect to the router.
3. If prompted, agree to the End User Licence Agreement.

## Common interface

### What you can do

You can watch scrambled digital TV channels with a Conditional Access Module (CAM). After the CAM is inserted and subscription fees are paid, you can watch the programme.


This TV supports CI as well as CI+. CI+ supports premium HD digital programmes with a high level of copy protection.

**Note:** The applications, functions, content and onscreen messages depend on the CAM service provider.

### What you need

**Caution:** To protect the CAM from damage, insert the CAM as instructed.

**Note:** Refer to the documentation from your service operator on how to insert a smart card into the Conditional Access Module.

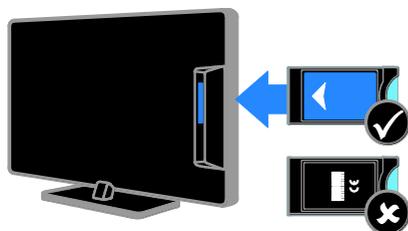

1. Switch off the TV.
2. Follow the directions printed on the CAM to insert the CAM into the Common Interface slot at the side of the TV. Push the CAM in as far as it will go.
3. Switch on the TV, then wait for the CAM to be activated. This takes a few minutes. To maintain access to encrypted digital TV channels, leave the CAM in the slot.

## Watch CAM services

1. After you insert and activate the CAM, press **OPTION**.
2. Select **[Common interface]**, then press **OK**.
3. Select the CAM provider, then press **OK**.

# 6 Troubleshooting

---

## General issues

### The TV does not switch on:

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Make sure that the power cable is securely connected.

### The TV does not respond to remote control or front controls when switched on:

The TV requires some time to start up. During this time, the TV does not respond to the remote control or front controls. This is normal behaviour.

### When you are turning the TV on, off or to standby, you hear a creaking sound from the TV chassis:

No action is required. The creaking sound is due to the normal expansion and contraction of the TV as it cools and warms up. This does not affect performance.

### When the TV is in standby, a startup splash screen is displayed, then returns to standby mode:

This is normal behaviour. When the TV is disconnected and reconnected to the power supply, the startup screen is displayed at the next startup.

To switch on the TV from standby, press **⊕** on the remote control or press any key on the TV.

### The standby light on the TV blinks red:

Disconnect the power cable from the power outlet. Wait until the TV cools down before you reconnect the power cable. If the blinking reoccurs, contact Philips Consumer Care.

### You forgot the 4-digit code to unlock the channel blocking feature (child lock):

Enter '8888'.

### The TV or Smart TV\* menu is in the wrong language:

Change the menu to your preferred language.

For more information, see **Set up your TV > Language settings > Menu language** (Page 33).

\* Available on certain models only.

### Subtitles are not visible when you play a movie file from a USB storage device:

Subtitle files that are not hard-coded into a video file (for example, \*.srt, \*.sub, \*.idx) are not supported.

### You want to upgrade your TV software:

Visit [www.philips.com/support](http://www.philips.com/support) and download the latest software package for your TV. Software installation instructions and release notes indicating what's been updated are also available at the site. Full instructions on how to upgrade your TV software are also available at **Set up your TV > Update software**.

---

## Channel issues

### You want to install TV channels

See **Set up your TV > Channel settings** (Page 30) for instructions on installing analogue or digital channels. If you want to install satellite TV channels, see **Set up your TV > Channel settings** (Page 32).

### No digital channels were found during the installation:

See the technical specifications to make sure that your TV supports DVB-T, DVB-C or DVB-S in your country.

- Make sure that all cables are properly connected and that the correct network is selected.

### Previously installed channels do not appear in the channel list:

Make sure that the correct channel list is selected.

### You want to rearrange or reorder the channel list:

After channels have been installed, they appear in the channel list. For information about managing channel lists, including rearranging channels, see **Watch TV > Manage channel lists**.

---

## Picture issues

### The TV is on, but there is no picture or the picture is distorted:

- Make sure that the antenna is properly connected to the TV.
- Make sure that the correct device is selected as the display source.
- Make sure that the external device or source is properly connected.

### There is sound but no picture:

Make sure that the picture settings are set correctly.

### There is poor TV reception from an antenna connection:

- Make sure that the antenna is properly connected to the TV.
- Loud speakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality. If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine-tune this channel.

### There is poor picture quality from connected devices:

- Make sure that the devices are connected properly.
- Make sure that the picture settings are set correctly.

### The TV did not save your picture settings:

Make sure that the TV location is set to **Home**. You can change and save settings in this mode.

### The picture does not fit the screen; it is too big or too small:

Change the picture format.

### The picture format keeps changing with different channels:

Instead of the picture format **[Auto zoom]**, select a different picture format.

### The picture position is incorrect:

Picture signals from some devices may not fit the screen correctly. Check the signal output of the device.

### The picture from broadcasts is scrambled:

You may need a Conditional Access Module to access content. Check with your service operator.

### An "e-sticker" banner displaying information appears on the TV display:

The TV is in **[Shop]** mode. To remove the e-sticker, set the TV to **[Home]** mode, then restart the TV. See **Set up your TV > Other settings > Location** (Page 35).

### The computer display on the TV is not stable:

- Make sure that your PC uses the supported resolution and refresh rate. See **Product specifications > Display resolutions**.
- Change the TV picture format to **[Unscaled]**.

---

## Sound issues

### There is a picture but sound quality is poor:

If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.

- Make sure that all cables are properly connected.
- Make sure that the volume is not muted or set to zero.
- Make sure that the TV speaker setting is selected. Press **⏏ ADJUST**, select **[Speakers]**, and then select **TV**.
- Make sure that the TV audio output is connected to the audio input on the HDMI-CEC enabled or EasyLink compliant home theatre device. Sound should be heard from the home theatre speakers.
- Some devices may require you to manually enable HDMI audio output. If HDMI audio is already enabled but you still cannot hear audio, try changing the digital audio format of the device to PCM ("Pulse Code Modulation"). Refer to the documentation accompanying your device for instructions.

**There is a picture but the sound quality is poor:**

Make sure that the sound settings are correctly set.

**There is a picture but sound comes from one speaker only:**

Make sure that sound balance is set to the centre.

---

## Disc player issues

**Disc cannot be played.**

- Clean the disc.
- Check that the disc player supports the disc format.
- Check that the disc player supports the region code of the DVD.
- For DVD±RW or DVD±R, ensure that the disc is finalised.
- Check that the disc is inserted correctly, with the disc label facing towards the rear of the TV.

**The menu of the disc player does not appear when the disc is ejected.**

- Press **HOME** > **[Play disc]** to view the disc player menu.
- Press **≡ LIST** to view the disc player setup menu.

**There is no response from the disc player.**

The selected operation is not possible.  
Check the instructions on the disc.

---

## Connection issues

**There are problems with HDMI devices:**

- Note that HDCP (High-bandwidth Digital Content Protection) support can delay the time taken for a TV to display content from an HDMI device.
- If the TV does not recognise the HDMI device and no picture is displayed, switch the source from one device to another and back again.
- If there are intermittent sound disruptions, make sure that output settings from the HDMI device are correct.
- If you use an HDMI-to-DVI adapter or HDMI to DVI cable, make sure that an additional audio cable is connected to AUDIO L/R or AUDIO IN (mini-jack only).

**You cannot use EasyLink features:**

Make sure that your HDMI devices are HDMI-CEC compatible. EasyLink features only work with devices that are HDMI-CEC compatible.

**If an HDMI-CEC compliant audio device is connected to the TV and the TV does not display any mute or volume icon when the volume is muted, increased or decreased:**

When a HDMI-CEC audio device is connected this behaviour is normal.

**USB device content is not displayed:**

- Make sure that the USB storage device is set to **Mass Storage Class** compliant, as described in the storage device's documentation.
- Make sure that the USB storage device is compatible with the TV.
- Make sure that the audio and picture file formats are supported by the TV.

**Audio and picture files on your USB storage device do not play or display smoothly:**

The transfer performance of the USB storage device may limit the data transfer rate to the TV which causes poor playback.

---

## Network issues

This section is applicable to certain models only.

### You want to establish a wireless connection between your TV and home network:

Refer to **Connect your TV > Network and the Internet > Wi-Fi ready** (Page 45) for instructions on how to connect your TV wirelessly to your home network.

### Smart TV does not work:

(Smart TV is available on certain models only.)

Check that the router is properly connected to the TV and that your router has open access to the Internet. If your router has a firewall or security settings, make sure that it allows Smart TV data to pass through - check your router documentation for details.

### Open internet access via Smart TV is slow

- Try to improve the signal quality between the router and TV if you are accessing the Internet wirelessly. Refer to the router's documentation for details.
- Always use a fast broadband connection wherever possible.
- Update your TV with the latest software to ensure browsing speed is optimal.

### Browse Network is slow.

If you are accessing your PC wirelessly, refer to the router's documentation to improve the signal quality between the router and TV.

### Wireless network is distorted or not found:

- Make sure that the wireless network is not disturbed by microwave ovens, DECT phones or other neighbouring Wi-Fi devices.
- If the wireless network is not working, try a wired network connection.
- Make sure that the firewalls in your network allow access to the TV wireless connection.

---

## Contact Philips

**Warning: Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.**

If are not able to resolve your problem, refer to the frequently asked questions (FAQs) for this TV at [www.philips.com/support](http://www.philips.com/support). You can also consult and contribute to the Philips TV community at [www.supportforum.philips.com](http://www.supportforum.philips.com).

If you wish to speak to or email a Philips representative, contact the Philips Consumer Care in your country. You can find the contact details in the leaflet accompanying this TV or at [www.philips.com/support](http://www.philips.com/support).

Note your TV model and serial number before you contact Philips. These numbers are printed on the back of the TV and on the packaging.

# 7 Product specifications

---

## Power and reception

Product specifications are subject to change without notice.

### Power

- Mains power : AC 220-240 V~, 50-60 Hz
- Standby power consumption : < 0,3 W
- Ambient temperature: 5 to 40 degrees Celsius
- For power consumption, see the product specifications at [www.philips.com/support](http://www.philips.com/support).

The power rating stated on the product typeplate is the power consumption for this product during normal household use (IEC 62087 Ed.2). The maximum power rating, stated between brackets, is used for electrical safety (IEC 60065 Ed. 7.2).

### Reception

- Antenna input: 75 ohm coaxial (IEC75)
  - TV system: DVB COFDM 2K/8 K,
  - Video playback: NTSC, PAL, SECAM
  - Digital TV: MPEG-4, DVB-T (Terrestrial), DVB-T2\*, DVB-C (Cable), DVB-S/S2\* (Satellite).
  - Tuner bands: VHF, UHF, S-Channel, Hyperband
- \* Available on certain models only.

---

## Display and sound

### Picture/Display

- Display type: LED backlight
- Diagonal size: 56 cm / 22 inch
- Aspect ratio: 16:9 (widescreen)
- Panel resolution: 1920 X 1080 p (full HD)
- Digital Crystal Clear
- Perfect Motion Rate (PMR): 100 Hz

### Sound

- Output power (RMS): 10 W at 7% THD
- Incredible Surround
- Clear Sound
- Mono / Stereo / NICAM

---

## Display resolutions

### Computer formats - HDMI (Resolution - refresh rate)

640 × 480 - 60 Hz  
800 × 600 - 60 Hz  
1024 × 768 - 60 Hz  
1280 × 720 - 60 Hz  
1280 × 768 - 60 Hz  
1280 × 1024 - 60 Hz  
1360 × 768 - 60 Hz

For Full HD TV only:

1680 × 1050 - 60 Hz  
1920 × 1080 - 60 Hz

### Computer formats - VGA (Resolution - refresh rate)

640 × 480 - 60 Hz  
800 × 600 - 60 Hz  
1024 × 768 - 60 Hz  
1280 × 1024 - 60 Hz  
1360 × 768 - 60 Hz  
1600 × 1200 - 60 Hz  
1920 × 1080 - 60 Hz

### Video formats

#### (Resolution - refresh rate)

480i - 60 Hz  
480p - 60 Hz  
576i - 50 Hz  
576p - 50 Hz  
720p - 50Hz, 60 Hz  
1080i - 50Hz, 60 Hz  
1080p - 24Hz, 25Hz, 30Hz, 50Hz, 60 Hz

## Multimedia

### Supported image files

- JPEG (\*.jpg)

### Supported multimedia connections

- USB: Connect only USB devices which consume 500mA of power or less.
  - NTFS, FAT 16 (Read only)
  - FAT 32
- Ethernet LAN RJ-45 (Available on certain models only)

### Supported audio/video files

Multimedia file names must not exceed 128 characters.

File Extensions	Container	Video codec	Maximum resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio codec	USB	DLNA
.mpe .mpeg .vob	PS	MPEG1	768x576	30	1.8 Mbps	MPEG1 Layer1/2, MP3, AC3, DVD LPCM	YES	YES
		MPEG2 MP@HL	1920x1080	30	40 Mbps		YES	YES
.ts	TS	MPEG2 MP@HL	1920x1080	30	40 Mbps	MPEG1 Layer1/2, AC3	YES	YES
		VC-1	1920x1080	30	40 Mbps	MPEG2 AAC-LC, MPEG4 AAC-LC/LHE-AAC, AC3	YES	YES
		H.264 BP@MP@LV 4.0	1920x1080	30	40 Mbps		YES	YES
		H.264 BP@MP@LV 4.0	1920x1080	30	40 Mbps		YES	YES
.mp4 (mov and 3gp extensions are not supported)	MP4	MPEG4 SP@L 3.0/ASP@HL 4.0	1920x1080	30	40 Mbps	MPEG1 Layer1/2, MP3, MPEG2 AAC-LC, MPEG4 AAC-LC/LHE-AAC	YES	YES
		H.263	1408x1152	30	40 Mbps		YES	YES
		Motion JPEG (*.mov only)	1280x720	30	30 Mbps		YES	YES
		H.264 BP@MP@LV 4.0	1920x1080	30	40 Mbps		YES	YES
.m2v	MKV	MPEG4 SP@L 3.0/ASP@HL 4.0	1920x1080	30	40 Mbps	var-PCH/ADPCH/A-law PCM/u-law PCM, MPEG1 Layer1/2, MP3, MPEG2 AAC-LC, MPEG4 AAC-LC/LHE-AAC, AC3, VMAw6	YES	YES
		VMAw9	1920x1080	30	40 Mbps		YES	YES
		VC-1	1920x1080	30	40 Mbps		YES	YES

### Supported audio/video files

Multimedia file names must not exceed 128 characters.

File Extensions	Container	Video codec	Maximum resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio codec	USB	DLNA
.mp4 .avi	AVI	XviD	1920x1080	30	40 Mbps	var-PCH/ADPCH/A-law PCM/u-law PCM, MPEG1 Layer1/2, MP3, MPEG2 AAC-LC, MPEG4 AAC-LC/LHE-AAC, AC3, VMAw6	YES	YES
		MPEG1	768x576	30	1.8 Mbps		YES	YES
		MPEG2 MP@HL	1920x1080	30	40 Mbps		YES	YES
		H.264 BP@MP@LV 4.0	1920x1080	30	40 Mbps		YES	YES
		MPEG4 SP@L 3.0/ASP@HL 4.0	1920x1080	30	40 Mbps		YES	YES
		Motion JPEG	1280x720	30	30 Mbps		YES	YES
.flv	FLV	Screenion	352x288	30	40 Mbps	MPEG1 Layer1/2, MP3, MPEG2 AAC-LC, MPEG4 AAC-LC/LHE-AAC	YES	YES
		H.264 BP@MP@LV 4.0	1920x1080	30	40 Mbps		YES	YES
.mp3	MP3	NA	NA	NA	32/40/48/56/64/80/96/112/128/160/192/224/256/320 kbit/s	MP3	YES	YES
.wav	MKV	NA	NA	NA	16bit PCM(16/24/32bit endian) 24bit PCM(16/24bit endian)	PCH/ADPCH/A-law PCM/u-law PCM	YES	YES
.aac .mp4 .m4a	AAC	NA	NA	NA	16-576 kbit/s	ACC-LC/LHE-AAC	YES	YES

### Supported DLNA-compliant media server software

(DLNA is available on certain models only)

- Windows Media Player (for Microsoft Windows)
- Twonky Media (for Microsoft Windows and Mac OS X)
- Sony Vaio Media Server (for Microsoft Windows)
- TVersty (for Microsoft Windows)
- Nero MediaHome
- DiXiM (for Microsoft Windows XP)
- Macrovision Network Media Server (for Microsoft Windows)
- Fuppes (for Linux)
- uShare (for Linux)

---

## Disc player

### DVD region codes

Europe:



### Playback media

DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, DivX CD, Picture CD, MP3-CD.

### File formats

- Audio: .mp3
- Video: .mpeg, .mpg
- Picture: .jpeg, .jpg

### Supported subtitle formats for DivX discs

Subtitle formats: .srt, .smi, .sub, .ass

### Character encoding

- 1250: Central and East European Latin
- 1251: Cyrillic
- 1252: West European Latin
- 1253: Greek
- 1254: Turkish
- 1255: Hebrew

### Audio

- Sampling frequency:
  - MP3: 32 kHz, 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 112 kbps - 320 kbps

### Laser

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 645 - 665 nm (DVD), 770 - 800 nm (CD)
- Output power: 6 mW (DVD), 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

---

## Connectivity

### Rear

- NETWORK: Ethernet LAN RJ-45 (available on certain models only)
- Service port: SERV.U
- VGA: PC input
- AUDIO IN: DVI/VGA (stereo 3.5mm mini-jack)
- DIGITAL AUDIO OUT: Cinch
- SCART: SCART (RGB/CVBS)
- HDMI 1/2
- Antenna: 75 ohm coaxial

### Side

- Common Interface: CI
- USB 1 / 2
- Headphones: stereo 3.5mm mini-jack
- HDMI

### HDMI features

- Audio Return Channel (HDMI 1 only)

## Supported TV mounts

You can mount your TV on the wall with a compatible TV mount (sold separately). Select the type of TV mount for your TV screen size:

**56 cm / 22 inches:** 100mm x 100mm, M4

**Warning:** Follow all instructions provided with the TV mount. TP Vision Netherlands B.V. bears no responsibility for improper TV mounting that results in accident, injury or damage.


To prevent damage to cables and connectors, leave a gap of at least 5.5 cm / 2.2 inches from the back of the TV.

**For PFL3557 - 22 inch TVs:**

Before you mount the TV on the wall, find the correct length of the screw.

To find the length of screw, add the thickness of your wall mount to the screw length, as shown in the graphic.

For 22 inch models: 9-10 mm

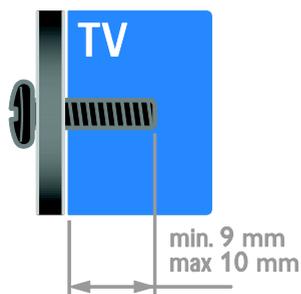

## Help version

UMv 123557122133 - 20120717

# 8 Index

---

## A

age rating - 25  
amplifier, select output - 27  
analogue channels, fine-tune - 31  
analogue channels, subtitles - 33  
audio language - 33  
audio sync - 27

---

## C

CAM, enable - 47  
CAM, insert - 47  
CAM, see Conditional Access Module - 47  
channel list - 13  
channels - 13  
channels, favourites - 13  
channels, fine-tune (analogue) - 31  
channels, install (automatic) - 30  
channels, install (digital) - 31  
channels, install (manual) - 31  
channels, install (satellite) - 32  
channels, reinstall - 36  
channels, rename - 13  
channels, reorder - 13  
channels, switch - 13  
channels, update - 32  
child lock - 25  
clock - 24  
common interface - 47  
computer, play files - 20  
Conditional Access Module - 47  
connect devices - 37  
connect, digital camcorder - 41  
connect, digital camera - 41  
connect, disc player - 38  
connect, external hard disk - 42

connect, game console - 40  
connect, home network - 45  
connect, home theatre system - 40  
connect, PC - 42  
connect, recorder - 39  
connect, TV receiver - 38  
connect, USB - 20  
connected device, add - 44  
connected device, remove - 44  
connected device, rename - 44  
connectors - 37  
contact information, on Internet - 11  
contact Philips - 11

---

## D

demo - 35  
devices - 38  
devices, add - 44  
devices, watch - 44  
digital camcorder - 41  
digital camera - 41  
digital channels - 31  
digital channels, subtitles - 34  
digital radio - 13  
disc player care - 7  
disc player, connect - 38  
disc player, settings - 18  
disc player, software - 19  
display - 52  
display resolution - 52  
DLNA - 20

---

## E

EasyLink - 25  
EasyLink, controls - 26  
EasyLink, enable - 26  
EasyLink, features - 25

EasyLink, onscreen control - 5  
EasyLink, remote control buttons - 26  
EasyLink, TV speakers - 27  
end of use - 10  
energy efficient, settings - 10  
Energy label - 10  
EPG, Electronic Programme Guide - 3  
external hard disk - 42

---

## F

favourite channels, list - 13

---

## G

game console - 40  
games - 23

---

## H

HDMI - 37  
HDMI ARC - 37  
hearing impaired - 34  
help, onscreen - 11  
Help, version - 55  
high-definition (HD), content - 3  
home mode - 35  
home network - 44  
home theatre system, connect - 40

---

## I

install channels, automatic - 30

---

## K

kensington lock - 7

---

## L

language, menu - 33  
language, subtitles - 34  
location, home or shop - 35

---

## M

media server program - 20  
mode, home or shop - 35  
multimedia, play files - 20  
multimedia, supported formats - 53  
musical slideshow - 17

---

## N

network, connect - 44

---

## O

options, disc playback - 16

---

## P

parental rating - 25  
PC, connect - 42  
PC, display resolutions - 52  
picture format - 15  
picture settings - 29  
picture settings, reset - 30  
Pixel Plus link - 28  
placement, stand or wall mount - 35  
position - 35  
power - 52  
product support - 11

---

## R

rear controls - 4  
recorder, connect - 39  
recycle - 10  
reinstall - 36  
remote control - 4  
remove, connected device - 44  
rename channels - 13  
rename, connected device - 44

---

## S

safety - 6

satellite, add or remove - 33  
satellite, install channels - 32  
satellite, settings - 22  
SCART - 37  
Scenea, enable - 28  
Scenea, load wallpaper - 28  
screen care - 7  
screen saver - 28  
sensors - 4  
settings, assistant - 29  
settings, audio format - 30  
settings, disc player - 18  
settings, game - 23  
settings, picture - 29  
settings, sound - 29  
shop mode - 35  
sleeptimer - 25  
smart settings - 14  
Smart TV - 3  
Smart TV, applications - 22  
Smart TV, browse - 22  
Smart TV, network - 44  
software, check version - 36  
software, digital update - 36  
software, disc player - 19  
software, USB - 36  
sound settings, reset - 30  
standby - 12  
subtitles, analog - 33  
subtitles, digital - 34  
subtitles, language - 34  
sustainability - 10  
switch TV on, off - 12

---

## T

text 2.5 - 24  
text, digital text - 24

text, dual screen - 23  
text, enlarge - 23  
text, language - 24  
text, subpages - 24  
text, Table Of Pages - 23  
trademarks and copyrights - 9  
TV receiver, connect - 38  
TV speakers, mute - 12

---

## U

universal access, enable - 34  
universal access, hearing impaired - 34  
universal access, visually impaired - 34

---

## V

VGA - 37  
visually impaired - 34  
volume - 12

---

## W

wall mount - 55  
wallpaper - 28  
watch, DVD - 15  
wireless, dongle - 45

---

## Y

YouTube - 22

