

iTV

26HW9100D/30HW9100D User's Manual



PHILIPS

SAFETY INFORMATION

- Disconnect mains plug when:
 - the red light below the TV screen is flashing continuously.
 - a bright white line is displayed across the screen.
 - cleaning the TV screen. Never use abrasive cleaning agents. Use a slightly damp chamois leather or soft cloth.
 - there is a lightning storm.
 - the set is left unattended for a prolonged period of time.
- No open flame sources, such as lighted candles, should be placed on or near the TV.
- Do not place your TV set under direct sunlight or heat.
- Leave at least 1/4" around each side of TV set for sufficient ventilation to avoid over-heating.
- Avoid placing set where it is likely to be exposed to rain or water (e.g. near the window).
- No objects filled with liquids should be placed on top the TV in order to avoid dripping or splashing of liquids into the set.

USEFUL TIPS

- Do not leave the television off (in standby mode) for a prolonged period of time. Switch off set to allow the CRT to be de-gaussed (demagnetized). A de-gaussed CRT will have optimum picture quality.
- Do not re-position the television while it is switched on. Non-uniformity in screen color may result.
- Never attempt to repair a defective TV yourself. Always consult skilled service personnel.


Before Calling Service

A list of common symptoms is presented as follows. Before you call for service, perform these simple checks. Some of these symptoms can be readily corrected. Note: Please become familiar with the commercial features as described in TV Installation / Setup, because the effects of several of these features, if they are not thoroughly understood, might appear as faulty operation.

Symptom	Possible Corrective Action
TV does not respond to commands (volume, channel, power), or cannot be turned on if it is off, or cannot be turned off if it is on.	Check commercial TV setup (TV installation / setup) menu settings, including power forced on, front keypad lockout, channel ring, volume minimum / maximum features.
TV turns off by itself	<ul style="list-style-type: none"> • TV automatically turns off after approx. 5 minutes when no RF signal is present. • Check Energy Saving Programmability setting (see ESP) in TV installation / setup.
Lack of color uniformity (color unevenness)	<ul style="list-style-type: none"> • Switch off the TV using the mains power button. Wait approximately 20 minutes before switching on again. • Ensure that the TV is not placed near speakers or magnetic objects.
No power	Verify that the TV's AC power cord is plugged into the mains socket. If there is still no power, disconnect plug. Wait for 60 seconds and re-insert plug. Switch on the TV again.
No picture	<ul style="list-style-type: none"> • Check antenna connection at rear of the TV. • Check CABLE TUNING setting (NO / YES). • Possible TV station problem. Try another channel.
Picture ok, no sound.	<ul style="list-style-type: none"> • Try increasing the volume. • Check that the sound is not muted. If it is muted, press the Mute button on the remote control to restore sound. • Check the MIN VOLUME/ MAX VOLUME settings in the setup menu
Sound ok, but poor color or no picture	Check picture adjustments (brightness, contrast, color, tint).
Snowy / noisy picture	<ul style="list-style-type: none"> • Check antenna, cable, and/or set-top box connections and antenna / cable. • Possible electrical interference from appliances or other sources.
Double images / "ghost" images	Check antenna, cable and/or set-top box.
Television does not respond to remote control.	<ul style="list-style-type: none"> • Check batteries. • Aim remote control handset directly at remote control sensor lens on the TV.
Channel Change to digital channels is slow	Channels must be programmed in the Digital OSD menu for the shortest channel change time.

Note: These televisions are shipped in commercial mode with Digital OSD turned ON. If  is pressed while on a digital channel the television will display the digital menu instead of the commercial menu. To properly configure the television using the commercial menu, it is necessary to be on an analog channel to access the setup menu.

Basic Television Connection

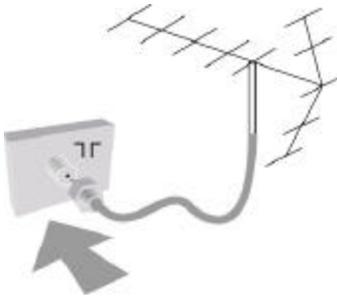

Antenna Connection

- Connect the antenna or RF cable signal to the 75-ohm RF 'F' connector socket located on the TV's rear jack panel.



117 VAC 60 HZ

Mains Connection


- Verify that the mains voltage and frequency are correct. Please refer to the product labeling and documentation.
Note: The power button on the front panel does not disconnect the television from the AC mains; it toggles the TV's power mode between on and standby. To completely remove AC mains power, you must unplug the AC mains plug.



Switching on the Set

- Press the power button on the TV's front panel or on the remote control to switch on the set.
Note 1: If the TV is in commercial mode, it might not respond to the front panel or the remote control, depending upon the TV's mode and setup configuration. Please refer to the section TV Installation and TV Setup Menu in this documentation for more information.
Note 2: See Mains Connection, above.

Use And Care of Remote Control


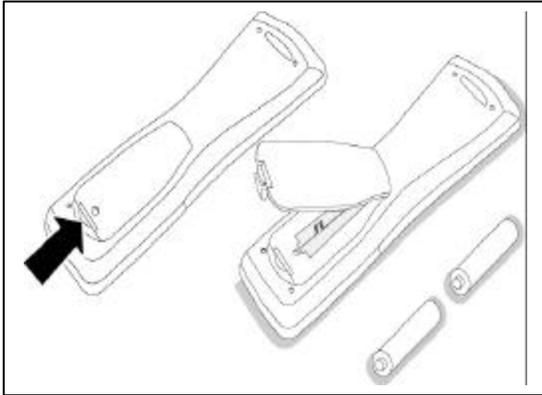


To load the supplied batteries into the remote control:

- Remove the battery compartment lid from the back of the remote control.
- Insert the correct type of batteries into the compartment.
- Ensure that the (+) and (-) ends of the batteries are placed in the correct positions.
- Re-attach the battery compartment lid.

Note: Always remove the batteries from the remote control if it is not to be used for a long period. This can help prevent damage to the remote from possible battery leakage.

Rear Jack Panel Connections

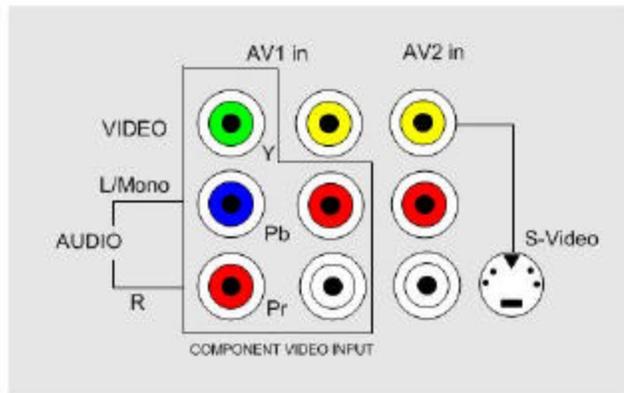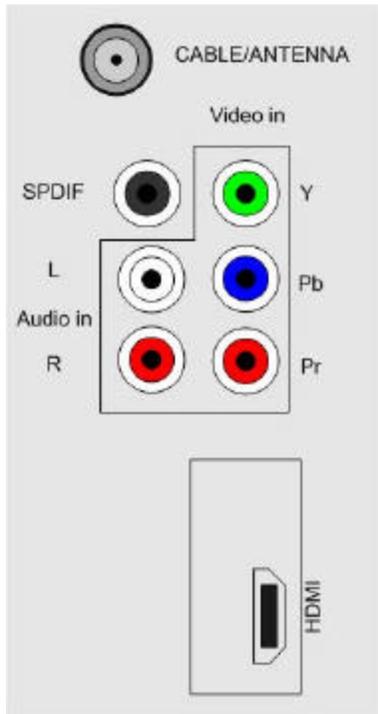

REMOTE CONTROLS

The following remote controls are applicable to the L05 HW-series television products. These can be used for setup and configuration purposes.



RC2888/01
Guest Remote



RC2573GR
Setup Remote
(Optional)

For the purpose of explanation, a guest remote, for the L04 series, similar to the illustration, is used. Remote control RC2573GR is a special and optional remote control specifically for configuring Institutional TV / Business Display Solutions features and SmartCard settings, and is purchased separately. Refer to the documentation for the RC2573GR for detailed information.

When you press RECALL on the RC2573GR setup remote control, when it is in setup mode, information similar to the following will appear on the TV screen. This information describes the TV chassis firmware version, diagnostic codes, setup information, and other service and technical data regarding the television configuration.


Line #10 indicates whether the TV is in CONSUMER or COMMERCIAL mode, and whether it is on-line with a SmartPort DCM (such as a CLON99BK SmartLoader). For more information, please refer to the service documentation for the ITV/BDS L05 TV chassis.

```

1  L05HU1.2          CSM
2  CODE             34  0  0  0  0  0
3  OP 2            96 225 57 126 116 0
4  AUTO AUTO      MONO
5  NOT TUNED
6
7  C0 50 CL 50 BR 47 HU 19 SH 50
8  VL 4  BL 0
9  BS 50 TR 50
10 COMMERCIAL     SMART PORT OFF
11 CHANNEL CVI

```

Guest Remote Control Keys

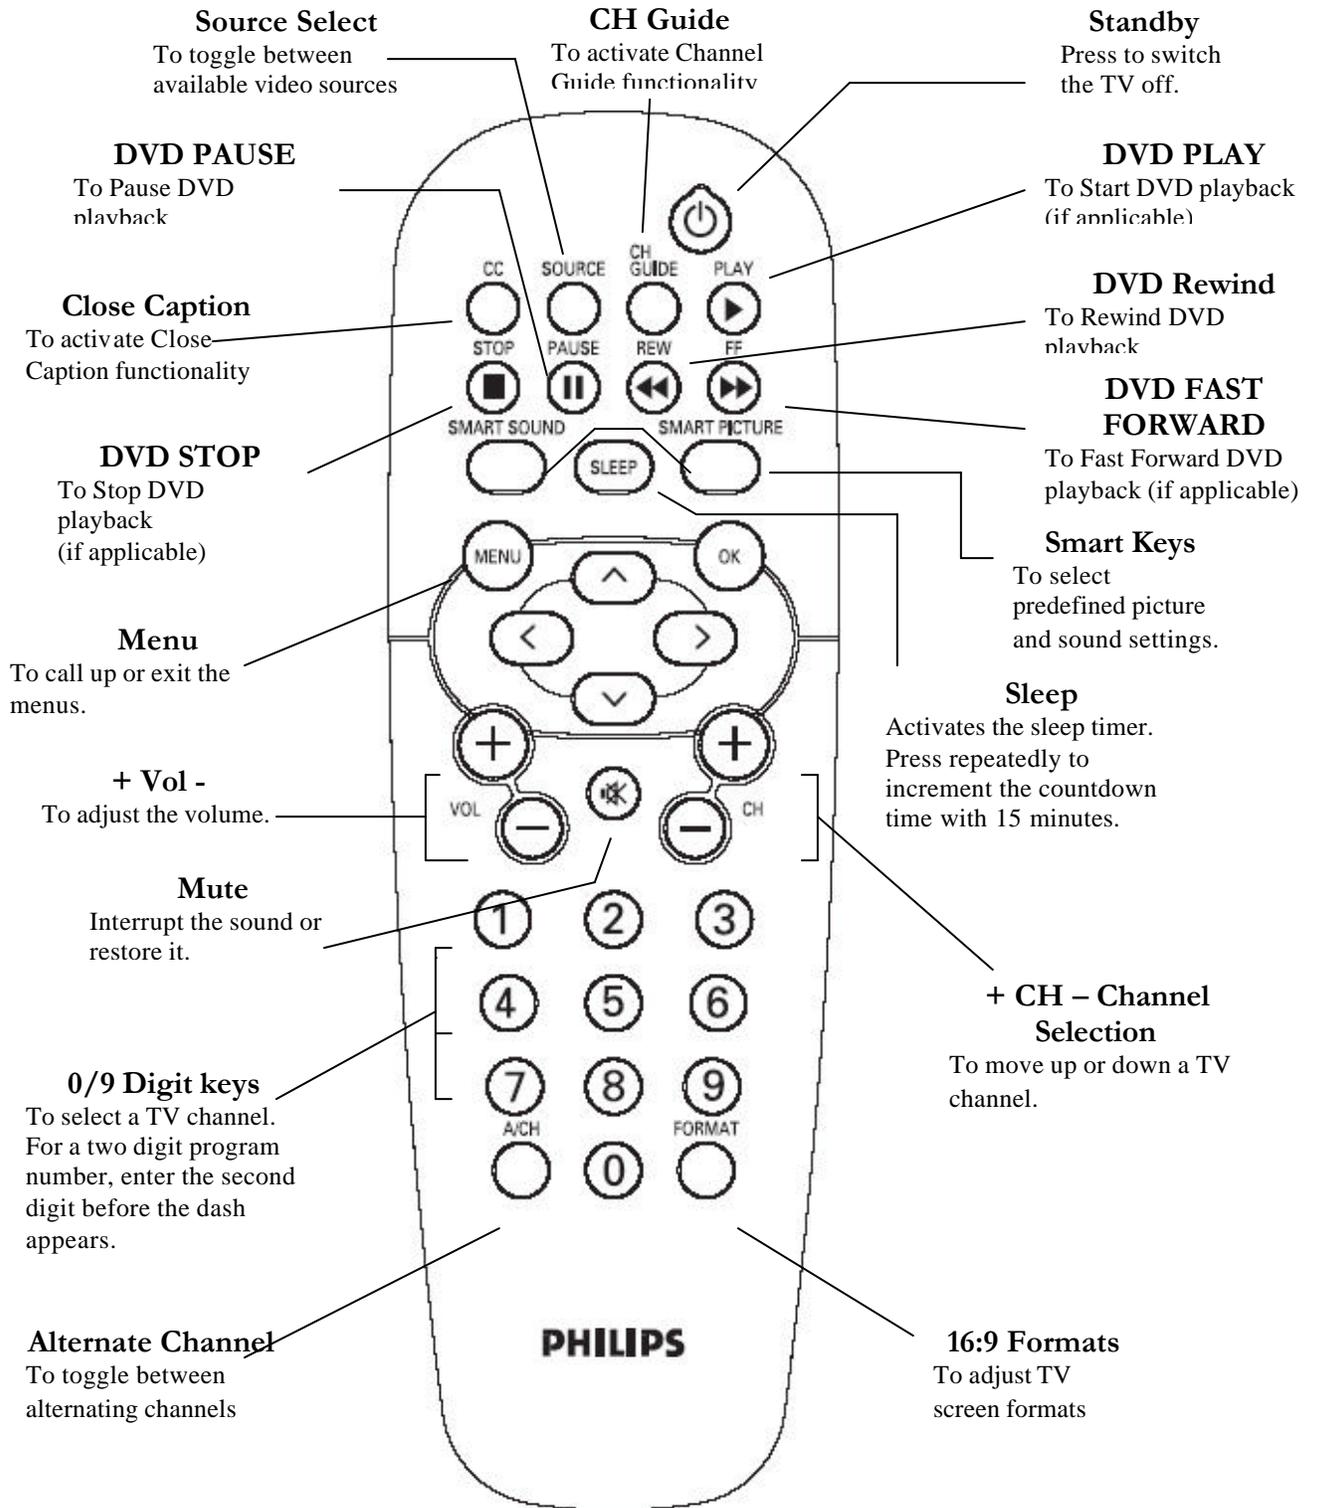

Consumer vs. Commercial Mode

The television is shipped in Commercial mode; however, at times it may be necessary to operate the set in Consumer mode. To switch between Commercial Mode and Consumer Mode the following sequence should be followed:

- With the RC2573GR Master setup remote enter 024995 and press the  key.
- Use the Right cursor button to switch the Mode of the set between Consumer and Commercial.
- With the proper mode selected, cursor down and use the Right cursor button to store the selected mode.
- After the mode is stored, the television will power itself off. At this point disconnect AC and perform a cold start on the television.
- The set should now be in the selected mode.

Accessing TV Setup Menus

With remote control RC2888/01
(only when SECURITY in the TV SETUP menu is set to LOW).

To activate TV Setup menu:

1. Select a channel number.
2. Key in 3 1 9 7 5 3.
3. Press  .

The above sequence should be performed within 20 seconds, and the TV SETUP menu will appear.

With remote control RC2573GR
(only in TV Commercial mode)

Part A: To check the television's mode.

1. Set the remote control selectable switch to SETUP.
2. Press RECALL key and the TV Status menu will appear.
3. Check line 10 of the menu to see if the TV is in the Commercial or Consumer mode.
4. If the TV is in the Commercial mode, then proceed to Part B to activate the TV Setup menu. Otherwise, go to Part C to change the TV mode to Commercial.

Part B: To activate TV Setup menu.

1. Press the RECALL key to clear the menu.
2. Press MENU to activate the TV Setup menu.

Part C: To select Commercial mode, if the TV is in Consumer mode (or to select Consumer mode, if the TV is in Commercial mode).

1. Press the RECALL key to clear the menu.
2. Press 0 2 4 9 9 5.
3. Press M key and the TV Mode menu appears.
4. Press + or - to select Commercial mode.
5. Highlight STORE and press the 4 key to store the change. TV will then go to standby mode.
6. Press any numeric key to switch on the TV again and follow the procedure in Part B, step 2 to activate the TV Setup menu.

TV Setup Main Menu

LANGUAGE	ENGLISH
CHANNEL INSTALL	>
CABLE TUNING	>
FACTORY CH RESET	>
USE CHANNEL TABLE	NO/YES
DIGITAL OSD	NO/YES
ENTER DIGITAL MENU	>
BRIGHTNESS	0 – 100
COLOR	0 – 100
CONTRAST	0 – 100
SHARPNESS	0 – 100
TINT	-50 - +50
ROTATION	0 – 63
DEFAULT FORMAT	WIDESCREEN/4:3/ZOOM 14:9/ZOOM 16:9/ SUBTITLE ZOOM/SUPER ZOOM
NOISE REDUCTION	NO / YES
SOUND MODE	MONO / STEREO
SAP	NO/YES
AVL	NO / YES
BALANCE	-31 - +31
TREBLE	0 – 100
BASS	0 – 100
INCREDIBLE STEREO	NO / YES
ULTRA BASS	YES
VOLUME BAR	YES
MIN VOLUME	0 – 100
MAX VOLUME	0 – 100
SWITCH ON VOLUME	STANDARD / 0 – 100
SWITCH ON CHANNEL	STANDARD / TV 1 -125 / AV 1 / AV 2 / SIDE / S-VIDEO / CVI / AV3YC / HDMI / HD CVI
POWER ON	STANDARD/ FORCED / RESTORED
CHANNEL DISPLAY	NONE / NUMBER / LABEL / ALL
KEYBOARD LOCK	NO / YES
ESP	OFF / 1 HR / 2 HR / ... / 99 HR
AUDIO/VIDEO MUTE	OFF / BLUE / BLACK
WELCOME MESSAGE	>
CHANNEL GUIDE	NO / YES / POWER ON
REMINDER	NO / YES
3 DIGIT ENTRY	NO / YES
A/CH A/V SWITCH	NO / YES
CC	OFF / CC-1 / CC-2 / CC ON MUTE
SAVE CC	NO / YES
SOURCE MENU ITEM	NO / YES
HDMI AUDIO SELECTION	HDMI/AV 1/AV 2/AV 3
V-CHIP MENU ITEM	NO / YES
SAVED V-CHIP	NO / YES
V-CHIP SETUP	>
SLEEPTIMER	OFF / 15 MIN / 30 MIN / 45 MIN / 60 MIN / 90 MIN / ... / 240 MIN
SECURITY	STANDARD / HIGH

Only 8 menu items will be displayed at one time.

1) To scroll through the menu, press  (▲) or  (▼) (cursor up / down) on the remote control. A highlight indicates that the respective menu item's setting is selected for modification.

2) To modify the setting of the selected menu item press  (◀) or  (▶) (cursor left / right).

3) To exit, press  or RECALL on the RC2573GR setup remote control.

TV Setup Menu and Sub-Menus

LANGUAGE

(English / Espanol / Francais)

When you first enter the TV SETUP menu, LANGUAGE is highlighted. You can scroll to the LANGUAGE item. Select the desired language with cursor up / cursor down.

CHANNEL INSTALL

(>)

The CHANNEL INSTALL menu allows the user to configure the channels that can be accessed. When installing the channels, different inputs can be mapped to TV channels to allow seamless integration into the channel map. The two sections below explain how to install analog channels and AV inputs, and how to install digital channels.

Installing Analog channels

When selected, CHANNEL INSTALL menu appears as follows. Configure the inputs and channels as described.

CHANNEL INSTALL	
CHANNEL INPUT	TV 1-125
AUTO PROGRAM	ANTENNA / AV 1 / AV 2 / SIDE / S-VIDEO / CVI / AV3YC /
CHANNEL RING LABEL	HDMI / HD CVI / DIGITAL
VIDEO BLANK	>
AUDIO MUTE	SAVED
	>
	NO/YES
	NO/YES

- **CHANNEL:**
 - Select the channel or input you wish to configure.
- **INPUT:**
 - Select the input source that you wish to associate with the specified CHANNEL . This feature enables you to “map” (re-assign) a numeric channel number to a video input, rather than to its normal RF TV channel (i.e. ANTENNA). In other words, TV channel 2 could be used to select the AV 1 video input instead of RF (ANTENNA) channel 2. Special instructions for mapping digital channels are included below.
- **AUTO PROGRAM:**
 - When AUTO PROGRAM is selected, the TV performs an automatic search for the presence of viable RF signals at its tuner input. An AUTO-PROGRAMMING ACTIVE message and a table of channel numbers will appear. If CABLE TUNING is set to NO, channels 2 through 69 will be checked. If CABLE TUNING is set to YES, channels 2 through 125 will be checked. When a viable signal is detected on a given channel, that channel is highlighted in red and is added to the channel ring. Any command from a remote control terminates the AUTO PROGRAM session. Front-panel commands do not cancel auto-programming.
- **CHANNEL RING:**

AUTO PROGRAMMING ACTIVE												
1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26
27	28	29	30	31	32	33	34	35	36	37	38	39
40	41	42	43	44	45	46	47	48	49	50	51	52
53	54	55	56	57	58	59	60	61	62	63	64	65
66	67	68	69	70	71	72	73	74	75	76	77	78
79	80	81	82	83	84	85	86	87	88	89	90	91
92	93	94	95	96	97	98	99	100	101	102	103	104
105	106	107	108	109	110	111	112	113	114	115	116	117
118	119	120	121	122	123	124	125	126	127	128	129	130
131	132	133	134	135	136	137	138	139	140	141	142	143
144	145	146	147	148	149	150	151	152	153	154	155	156
157	158	159	160	161	162	163	164	165	166	167	168	169
170	171	172	173	174	175	176	177	178	179	180	181	182
183	184	185	186	187	188	189	190	191	192	193	194	195
196	197	198	199	200	201	202	203	204	205	206	207	208
209	210	211	212	213	214	215	216	217	218	219	220	221
222	223	224	225	226	227	228	229	230	231	232	233	234
235	236	237	238	239	240	241	242	243	244	245	246	247
248	249	250	251	252	253	254	255	256	257	258	259	260
261	262	263	264	265	266	267	268	269	270	271	272	273
274	275	276	277	278	279	280	281	282	283	284	285	286
287	288	289	290	291	292	293	294	295	296	297	298	299
300	301	302	303	304	305	306	307	308	309	310	311	312
313	314	315	316	317	318	319	320	321	322	323	324	325
326	327	328	329	330	331	332	333	334	335	336	337	338
339	340	341	342	343	344	345	346	347	348	349	350	351
352	353	354	355	356	357	358	359	360	361	362	363	364
365	366	367	368	369	370	371	372	373	374	375	376	377
378	379	380	381	382	383	384	385	386	387	388	389	390
391	392	393	394	395	396	397	398	399	400	401	402	403
404	405	406	407	408	409	410	411	412	413	414	415	416
417	418	419	420	421	422	423	424	425	426	427	428	429
430	431	432	433	434	435	436	437	438	439	440	441	442
443	444	445	446	447	448	449	450	451	452	453	454	455
456	457	458	459	460	461	462	463	464	465	466	467	468
469	470	471	472	473	474	475	476	477	478	479	480	481
482	483	484	485	486	487	488	489	490	491	492	493	494
495	496	497	498	499	500	501	502	503	504	505	506	507
508	509	510	511	512	513	514	515	516	517	518	519	520
521	522	523	524	525	526	527	528	529	530	531	532	533
534	535	536	537	538	539	540	541	542	543	544	545	546
547	548	549	550	551	552	553	554	555	556	557	558	559
560	561	562	563	564	565	566	567	568	569	570	571	572
573	574	575	576	577	578	579	580	581	582	583	584	585
586	587	588	589	590	591	592	593	594	595	596	597	598
599	600	601	602	603	604	605	606	607	608	609	610	611
612	613	614	615	616	617	618	619	620	621	622	623	624
625	626	627	628	629	630	631	632	633	634	635	636	637
638	639	640	641	642	643	644	645	646	647	648	649	650
651	652	653	654	655	656	657	658	659	660	661	662	663
664	665	666	667	668	669	670	671	672	673	674	675	676
677	678	679	680	681	682	683	684	685	686	687	688	689
690	691	692	693	694	695	696	697	698	699	700	701	702
703	704	705	706	707	708	709	710	711	712	713	714	715
716	717	718	719	720	721	722	723	724	725	726	727	728
729	730	731	732	733	734	735	736	737	738	739	740	741
742	743	744	745	746	747	748	749	750	751	752	753	754
755	756	757	758	759	760	761	762	763	764	765	766	767
768	769	770	771	772	773	774	775	776	777	778	779	780
781	782	783	784	785	786	787	788	789	790	791	792	793
794	795	796	797	798	799	800	801	802	803	804	805	806
807	808	809	810	811	812	813	814	815	816	817	818	819
820	821	822	823	824	825	826	827	828	829	830	831	832
833	834	835	836	837	838	839	840	841	842	843	844	845
846	847	848	849	850	851	852	853	854	855	856	857	858
859	860	861	862	863	864	865	866	867	868	869	870	871
872	873	874	875	876	877	878	879	880	881	882	883	884
885	886	887	888	889	890	891	892	893	894	895	896	897
898	899	900	901	902	903	904	905	906	907	908	909	910
911	912	913	914	915	916	917	918	919	920	921	922	923
924	925	926	927	928	929	930	931	932	933	934	935	936
937	938	939	940	941	942	943	944	945	946	947	948	949
950	951	952	953	954	955	956	957	958	959	960	961	962
963	964	965	966	967	968	969	970	971	972	973	974	975
976	977	978	979	980	981	982	983	984	985	986	987	988
989	990	991	992	993	994	995	996	997	998	999	1000	1001
1002	1003	1004	1005	1006	1007	1008	1009	1010	1011	1012	1013	1014
1015	1016	1017	1018	1019	1020	1021	1022	1023	1024	1025	1026	1027
1028	1029	1030	1031	1032	1033	1034	1035	1036	1037	1038	1039	1040
1041	1042	1043	1044	1045	1046	1047	1048	1049	1050	1051	1052	1053
1054	1055	1056	1057	1058	1059	1060	1061	1062	1063	1064	1065	1066
1067	1068	1069	1070	1071	1072	1073	1074	1075	1076	1077	1078	1079
1080	1081	1082	1083	1084	1085	1086	1087	1088	1089	1090	1091	1092
1093	1094	1095	1096	1097	1098	1099	1100	1101	1102	1103	1104	1105
1106	1107	1108	1109	1110	1111	1112	1113	1114	1115	1116	1117	1118
1119	1120	1121	1122	1123	1124	1125	1126	1127	1128	1129	1130	1131
1132	1133	1134	1135	1136	1137	1138	1139	1140	1141	1142	1143	1144
1145	1146	1147	1148	1149	1150	1151	1152	1153	1154	1155	1156	1157
1158	1159	1160	1161	1162	1163	1164	1165	1166	1167	1168	1169	1170
1171	1172	1173	1174	1175	1176	1177	1178	1179	1180	1181	1182	1183
1184	1185	1186	1187	1188	1189	1190	1191	1192	1193	1194	1195	1196
1197	1198	1199	1200	1201	1202	1203	1204	1205	1206	1207	1208	1209
1210	1211	1212	1213	1214	1215	1216	1217	1218	1219	1220	1221	1222
1223	1224	1225	1226	1227	1228	1229	1230	1231	1232	1233	1234	1235
1236	1237	1238	1239	1240	1241	1242	1243	1244	1245	1246	1247	1248
1249	1250	1251	1252	1253	1254	1255	1256	1257	1258	1259	1260	1261
1262	1263	1264	1265	1266	1267	1268	1269	1270	1271	1272	1273	1274
1275	1276	1277	1278</									

- Specify whether the current channel or input is to be **SAVED** to or **DELETED** from the channel ring (i.e., list of channels available for selection by means of a standard guest remote control).
- **LABEL:**
 - Input a maximum of 8 characters for the channel's label. Cursor to the Right to start the first character. Cursor left or right to navigate between character positions within the label field. Cursor up or down to select characters from the list:- A to Z, 0 to 9, . , , ., /, :, =, ?, ;, <, >, @ or space. To edit, re-input the character at its position. To exit, cursor left or right to navigate out of the label editing field.
- **VIDEO BLANK:**
 - Specify whether video for the current channel is to be displayed (**VIDEO BLANK = NO**) or not displayed (**VIDEO BLANK = YES**).
- **AUDIO MUTE:**
 - Specify whether audio for the current channel is to be audible (**AUDIO MUTE = NO**) or muted (**AUDIO MUTE = YES**).

Installing AV Inputs

CHANNEL INSTALL	
CHANNEL	AV 1 / AV 2 / SIDE / S-VIDEO / CVI / AV3YC / HDMI / HD CVI
CHANNEL RING	SAVED
LABEL	>
VIDEO BLANK	NO/YES
AUDIO MUTE	NO/YES

- **CHANNEL:**
 - Select the input you wish to configure.
- **LABEL:**
 - Input a maximum of 8 characters for the channel's label. Cursor to the Right to start the first character. Cursor left or right to navigate between character positions within the label field. Cursor up or down to select characters from the list:- A to Z, 0 to 9, . , , ., /, :, =, ?, ;, <, >, @ or space. To edit, re-input the character at its position. To exit, cursor left or right to navigate out of the label editing field.
- **VIDEO BLANK:**
 - Specify whether video for the current channel is to be displayed (**VIDEO BLANK = NO**) or not displayed (**VIDEO BLANK = YES**).
- **AUDIO MUTE:**
 - Specify whether audio for the current channel is to be audible (**AUDIO MUTE = NO**) or muted (**AUDIO MUTE = YES**).

Installing Digital Channels

CHANNEL INSTALL	
CHANNEL	TV 1 – 125
INPUT	DIGITAL
MAJOR CHANNEL	0 – 999
MINOR CHANNEL	0 – 999
CHANNEL RING	SAVED
LABEL	>
VIDEO BLANK	NO/YES
AUDIO MUTE	NO/YES

- **CHANNEL:**
 - Select the channel or input you wish to configure.
- **INPUT:**
 - When DIGITAL is selected two additional entries are added to the menu to allow for mapping the digital channels.
- **MAJOR CHANNEL:**
 - MAJOR CHANNEL refers to the either the DIGITAL RF (USE CHANNEL TABLE = NO) channel or the channel referred to in the digital channel table (USE CHANNEL TABLE = YES).
- **MINOR CHANNEL:**
 - MINOR CHANNEL refers to the digital sub-channel related to the MAJOR CHANNEL specified above.
- **CHANNEL RING:**
 - Specify whether the current channel or input is to be SAVED to or DELETED from the channel ring (i.e., list of channels available for selection by means of a standard guest remote control).
- **LABEL:**
 - Input a maximum of 8 characters for the channel's label. Cursor to the Right to start the first character. Cursor left or right to navigate between character positions within the label field. Cursor up or down to select characters from the list:- A to Z, 0 to 9, ., ,, ., /, :, =, ?, ;, <, >, @ or space. To edit, re-input the character at its position. To exit, cursor left or right to navigate out of the label editing field.
- **VIDEO BLANK:**
 - Specify whether video for the current channel is to be displayed (VIDEO BLANK = NO) or not displayed (VIDEO BLANK = YES).
- **AUDIO MUTE:**
 - Specify whether audio for the current channel is to be audible (AUDIO MUTE = NO) or muted (AUDIO MUTE = YES).

CABLE **(NO / YES)**
 Select either standard off-air tuning (CABLE TUNING = NO) or cable offset tuning (CABLE TUNING = YES).

FACTORY CH RESET **(>)**
 Cursor Right will reset the channels programmed in memory.

USE CHANNEL TABLE

(NO/YES)

When NO is selected the MAJOR channel in the Digital channel setup in the CHANNEL INSTALLATION menu refers to an RF channel (frequency). When YES is selected the Major channel refers to the Major channel listed in the Digital Channel Map.

DIGITAL OSD

(NO/YES)

Specify whether the consumer digital version of the OSD is displayed when MENU



is pressed from a digital channel.

ENTER DIGITAL MENU


(>)

Cursor RIGHT will bring up the Consumer DIGITAL Menu below:



The primary use of this menu is to program the digital channels using the Auto Program function of the digital module in the television. To program the digital channels, cursor down to Install, and Cursor Right. This will display the Install Menu. From The Install menu, select Auto Program and Cursor Right to start the Auto Programming.



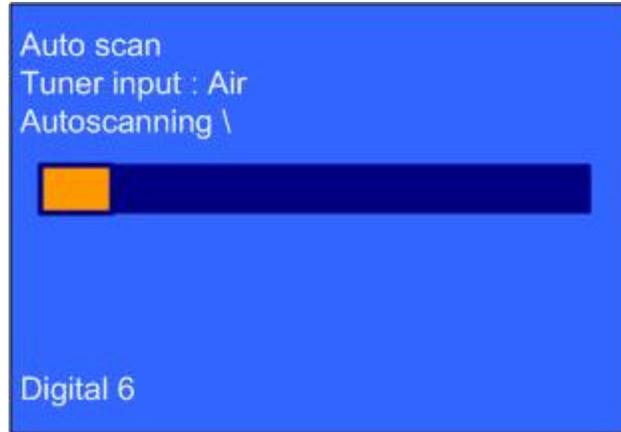

Note: The digital channels must be programmed using the Digital Menu to allow for the fastest possible channel change times.



To exit the digital menu, press the  key on the setup remote twice.

BRIGHTNESS

(||||||| 0 – 100)

Adjust the respective picture setting, using left and right cursor.

COLOR

(||||||| 0 – 100)

Adjust the respective picture setting, using left and right cursor.

CONTRAST

(||||||| 0 – 100)

Adjust the respective picture setting, using left and right cursor.

SHARPNESS

(||||||| 0 – 100)

Adjust the respective picture setting, using left and right cursor.

TINT

(||||||| -31 - 31)

Adjust the respective picture setting, using left and right cursor.

ROTATION

(||||||| 0 – 100)

Adjust the respective picture setting, using left and right cursor.

DEFAULT FORMAT


(**WIDESCREEN / 4:3 / ZOOM 14:9 / ZOOM 16:9 /
SUBTITLE ZOOM / SUPER ZOOM**)

Set the default screen format of the television at Power On.

The pictures you receive may be transmitted in 16:9 format (wide screen) or 4:3 format (conventional screen). 16:9 pictures sometimes have a black band at the top and bottom of the screen (letterbox format). This function allows you to optimize the picture display on screen.


Using the different formats

Select the preferred format from the DEFAULT FORMAT menu item in the setup screen, or (if applicable) use the Format button on the Remote Control to select the different modes: 4:3, Zoom 14:9, Zoom 16:9, Subtitle zoom, Super Zoom, and Widescreen.

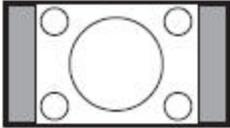


4:3

The picture is reproduced in 4:3 format and a black band is displayed on either side of the picture.

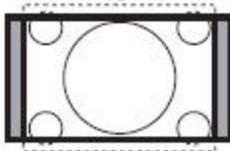


Zoom 14:9

The picture is enlarged to 14:9 format, a thin black band remains on both sides of the picture.

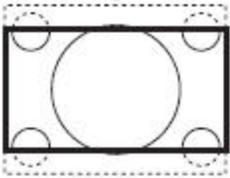


Zoom 16:9

The picture is enlarged to 16:9 format. This mode is recommended when displaying pictures that have black bands at the top and bottom (letterbox format).

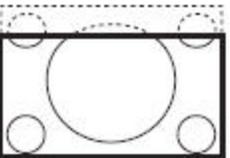


Subtitle Zoom

This mode is used to display 4:3 pictures using the full surface of the screen leaving the subtitles visible.

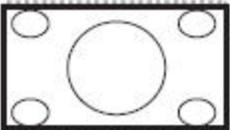

Super Zoom

This mode is used to display 4:3 pictures using the full surface of the screen by enlarging the sides of the picture

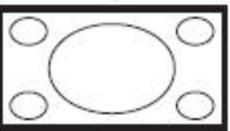

Widescreen

This mode restores the correct proportions of pictures transmitted in 16:9 using the full screen display.

NOISE REDUCTION

(NO / YES)

Disable or enable the video noise reduction feature, in which video noise is reduced, with minimum reduction in picture sharpness.

SOUND MODE (MONO / STEREO)

Select either STEREO or MONO (monaural) sound modes.

Note: STEREO has no effect if the current audio signal is monaural. When SOUND MODE is changed, an on-screen display will appear, indicating the actual audio status (MONO or STEREO)

AVL (OFF / ON)

Disable or enable the Automatic Volume Leveling feature, which minimizes variations in audio playback level.

BALANCE (||||||| -31 - 31)

Adjust the respective audio playback setting.

TREBLE (||||||| 0 - 100)

Adjust the respective audio playback setting.

BASS (||||||| 0 - 100)

Adjust the respective audio playback setting.

INCREDIBLE STEREO (NO / YES)

When INCREDIBLE STEREO is set to YES, and the current SOUND MODE is MONO, a signal processing technique is applied for the purpose of simulating a “stereo-like” effect.

Note: When INCREDIBLE STEREO is set to YES, and the current SOUND MODE is STEREO (regardless of whether there is a stereo signal on the current channel) the resultant effect will be imperceptible, minimal or possibly degraded, depending upon various factors.

ULTRA BASS (NO/ YES)

When ULTRA BASS is set to YES, the audio frequency equalization is modified such that the bass frequencies are significantly emphasized.

VOLUME BAR (NO / YES)

When VOLUME BAR is set to YES, an OSD graphic appears that provides visual verification (e.g. “|||||---- 15”) during volume adjustment, by means of either the remote control, or the front panel (if it is not locked out).

MIN VOLUME (||||||| 0 - 100)

Specify the lowest volume setting possible by means of either the remote control, or the front panel (if it is not locked out). This setting cannot exceed MAX VOLUME (see MAX VOLUME)

Note: The MIN VOLUME setting is effective whether the volume command is issued from the front panel (if it is not locked out), a standard guest-mode remote control, or an RC2573GR setup remote in setup mode.

MAX VOLUME (||||||| 0 - 100)

Specify the highest volume setting possible by means of either the remote control, or the front panel (if it is not locked out). This setting cannot be less than MIN VOLUME (see MIN VOLUME)

Note: The MAX VOLUME setting is effective whether the volume command is issued from the front panel (if it is not locked out), a standard guest-mode remote control, or an RC2573GR setup remote in setup mode.

SWITCH ON VOLUME (STANDARD / ||||| 0 - 100)

Specify the volume setting that takes effect when the TV is powered on.

If STANDARD, the volume at power-on will be the volume at which the TV was prior to last power-down.

If specified as 0 - 63, that will always be the volume at power-on, until SWITCH ON VOLUME is changed.

SWITCH ON CHANNEL (STANDARD / TV 1-125 / AUX / FRONT / S-VIDEO / CVI)

Specify the channel / input to which the TV will be tuned when it is powered on.

If STANDARD, the channel at power-on will be that to which the TV was tuned at last power-down.

If specified (e.g., 2, AUX, etc.), then that will always be the channel / input at power-on, until SWITCH ON CHANNEL is changed.

POWER ON (STANDARD / FORCED / RESTORED)

STANDARD: The TV will be in standby mode when AC mains power is first applied after having been disconnected.

FORCED: The TV will turn ON whenever AC mains power is applied. This feature allows the TV's power status to be controlled for example, from an AC mains breaker.

RESTORED: When AC mains power is first applied after having been disconnected, the TV's power status will revert to that when AC mains power was last removed.

CHANNEL DISPLAY (NONE / NUMBER / LABEL / ALL)

Specifies which of the respective channel properties are displayed by the TV's OSD when a channel or input is first selected. If REMINDER (see REMINDER) is OFF, these properties will be displayed for a few seconds, then disappear. If REMINDER is ON, the channel properties remain on-screen whenever the TV is on.

KEYBOARD LOCK (NO / YES)

NO: The TV's front panel is operational.

YES: The TV's front panel is rendered inoperative.

Note: Even when KEYBOARD LOCK = NO (not locked out), front panel power on/off, volume, or channel controls might have no effect, depending upon the settings of POWER ON (STANDARD / FORCED), CHANNEL INSTALL, MIN VOLUME, and MAX VOLUME.

ESP (OFF / 1 HR / 2 HR / ... / 99 HR)

Energy Saving Programmability. This feature enables the TV to automatically power-down after a specified period of time, if during any such period it receives no commands from the front panel or remote control. This is an energy-saving feature which assumes that the TV, after the specified period of inactivity, is no longer being viewed.

AUDIO/VIDEO MUTE (OFF / BLACK / BLUE)

Also known as "A/V muting". Suppresses audio and video when the TV tuner is supplied with an inadequate signal level. When there is insufficient RF signal level to the TV tuner, the options produce the following results.

OFF: Screen displays "snow", and the audio is white noise ("static").

BLACK: Screen display is black, and the audio is muted.

BLUE: Screen display is blue, and the audio is muted.

AUDIO/VIDEO OUT MUTE (NO / YES)

When set to YES, turns off the audio and video MONITOR OUT signals (either demodulated RF input or loop-through video). Intended to prevent recording of pay-per-view content.

MONITOR OUT RF (NO / YES)

This features configures the audio and video monitor outputs (provided that AUDIO/VIDEO OUT MUTE is not set to YES).

NO: The signals that are present at the monitor outputs are the same as those of the currently-selected channel or video input. In other words, the monitor outputs "track" what is viewed and heard on the TV.

YES: The signals that are present at the monitor outputs are always the tuner output (see NOTE, below), regardless of whether the currently selected TV source is the tuner, or video (i.e., AUX, S-VIDEO, CVI) input.

Note: When MONITOR OUT RF is initially changed from its current setting, the monitor out signal source depends upon the previous MONITOR OUT setting, until a different TV source is selected. From that point, until it is changed, the new MONITOR OUT setting will perform as described.

WELCOME MESSAGE (>)

A welcome message (two lines, 20 characters) can appear on-screen when the set is powered on. The message remains on-screen until the TV receives a command from the remote or front panel. When the WELCOME MESSAGE setup menu item is highlighted, cursor right or left to invoke the MESSAGE sub-menu. Cursor up or down to select the desired MESSAGE sub-menu item. Press RECALL or MENU to return to the SETUP main menu.



- **DISPLAY** (NO/YES)

Cursor right or left to select NO to disable the WELCOME MESSAGE or YES to enable it. Note: If welcome message is enabled, and both LINE 1 and LINE 2 are blank (or consist entirely of space characters), no message will appear.

- **LINE 1/LINE 2**

Select message LINE 1 or LINE 2. When you first cursor left or right, the ">" at the end of the menu line disappears, and a blinking hyphen character indicates message edit mode. Cursor up or down to select a character at the given position. Cursor left or right to move the cursor to the desired character position. Note: When you cursor to the left or right margins of the edit space, the blinking hyphen will disappear and ">" will re-appear at the very end of the menu line. You can then cursor up or down to the next or previous line in the MESSAGE sub-menu.

- **CLEAR** (>)

Erase the entire message.

CHANNEL GUIDE (NO / YES / POWER ON)

The channel guide feature provides an on-screen summary listing of the RF (tuner) channels that are currently in the channel ring (see CHANNEL INSTALL -> CHANNEL RING) and have been assigned labels (see CHANNEL INSTALL -> LABEL).

CHANNEL GUIDE		
TV 2	PBS	>
TV 5	CBS	>
TV 7	QVC	>
TV13	ABC	>
TV14	NBC	>
TV 54	FOX	>
EXIT		>
CH GUIDE TO SCROLL DOWN		

NO: Channel guide is not displayed when CH GDE on remote is pressed, and a "NOT AVAILABLE" message appears.

YES: When CH GDE on remote is pressed, the channel guide is displayed for approximately 10 seconds, or until a remote control command occurs. All RF (tuner) channels that are in the channel ring, and have labels, will appear in the channel guide list.

POWER ON: The channel guide appears automatically at power-on, and remains on-screen for approximately 10 seconds, or until a remote control command occurs. The channel guide also appears when CH GDE on remote is pressed.

Note 1: To appear in the channel guide, an RF (tuner) channel must be assigned a label, and must be saved in the channel ring.

Note 2: Only RF (tuner) channels will be listed in the channel guide. Video inputs (AUX, S-VIDEO, CVI, FRONT A/V) will not appear in the channel guide.

REMINDER

(NO / YES)

When REMINDER = YES, the reminder feature provides a constant on-screen indication of the current channel or input, (e.g., TV 2, CVI, etc.), that channel's or input's label (if a label has been assigned in CHANNEL INSTALL), and the current MUTE status (i.e., if sound MUTE is active). The REMINDER on-screen indication appears near the top of TV screen viewing area. When REMINDER = NO, the reminder information appears only when the channel or input is changed, then disappears after approximately ten seconds.

3 DIGIT ENTRY

(NO / YES)

YES: The TV, upon receiving a remote control digit command, "expects" to receive up to two more successive remote control digit commands (e.g. 123, 012, etc.) before tuning the intended channel. The television will display, in the upper left-hand corner of the screen, each digit as it is received, followed by a hyphen '-', indicating that the TV is "waiting" for the next digit (see Note).

NO: The TV, upon receiving a remote control digit command, "expects" to receive one more successive remote control digit command before tuning the intended channel (see Note).

Note: Successive digit commands must occur within two seconds, or the TV will interpret the previously-received digit(s) as constituting the intended channel and tune accordingly.

A/CH A/V SWITCH

(NO / YES)

The A/CH A/V (alternate channel A/V switch) feature provides the choice to use the remote control A/CH command to either switch between the current and previously-tuned channels / inputs, or to step successively through all sources (e.g., ANTENNA (tuner), AUX, S-VIDEO, CVI, FRONT) presently in the channel ring.

YES: Upon receiving an alternate channel (A/CH) command, the TV will tune to the next signal source (e.g., tuner, AUX, S-VIDEO, etc.), if any, in the channel ring.

NO: Upon receiving an alternate channel (A/CH) command, the TV will switch to the most recently selected channel / input.

CC

(OFF / CC-1 / CC-2 / CC ON MUTE)

Closed Captioning. Since July 1, 1993, television sets with 13" screens or larger must have built-in caption decoders. Captioning of most broadcast and cablecast programming is mandated under the Telecommunications Act of 1996, except for certain types of programs exempted by the FCC. For additional information, please visit the U.S. FCC web site at (<http://ftp.fcc.gov/cgb/consumerfacts/closedcaption.html>).

OFF: Regardless of whether there is a closed captioning signal present on the current source, closed captioning will not appear.

CC-1: CC-1-mode closed captioning will be displayed if it is present on the incoming signal.

CC-2: CC-2-mode closed captioning will be displayed if it is present on the incoming signal.

CC ON MUTE: If the television is in audio mute mode, CC-1-mode closed captioning will be displayed if it is present on the incoming signal.

Note: When the television is powered down and back on again, the closed captioning setting will default to OFF, unless SAVE CC (see SAVE CC) is set to YES.

SAVE CC (NO / YES)

Save closed captioning. This feature enables the CC setting (see CC) to remain in effect after the television is powered down.

NO: When the television is powered down and back on again, the closed captioning setting will default to OFF.

YES: When the television is powered down and back on again, the closed captioning setting last specified in CC (see CC) will remain in effect.

SOURCE MENU ITEM (NO / YES)

This feature provides the option to specify whether the current signal source (e.g., TV 54, AUX, CVI, S-VIDEO, etc.) item is present in the FEATURES MENU that appears when the remote control SLEEP or CC command is issued, or when a guest-mode remote control RECALL command is issued.



Features Menu With SOURCE MENU ITEM = YES

NO: The SOURCE line item does not appear in the FEATURES MENU.

YES: The SOURCE line item appears in the FEATURES MENU.

Note 1: When the SOURCE item is highlighted, cursor right or left to step through the signal sources (e.g., tuner, AUX, S-VIDEO, etc.) that are in the CHANNEL RING. The SOURCE item in the FEATURES MENU cannot be used to select RF (tuner) channels.

Note 2: The SOURCE item can only be used to select signal sources (e.g., tuner, AUX, S-VIDEO, etc.) that are in the CHANNEL RING.

Note 3: If there are no signal sources in the channel ring other than the presently-selected source, the SOURCE item is for indication only, and cannot select any other sources.

HDMI AUDIO SELECTION (HDMI / AV1 / AV2 / AV 3)

This menu item allows the user to associate an audio input to the HDMI input. Devices with an HDMI output usually have digital audio included on the HDMI output; however, outputs such as DVI have no audio included on the connector. For those devices with a

DVI output, a DVI to HDMI converter is required for the video input to the television, and the analog audio can be configured on any of the listed audio inputs.

V-CHIP MENU ITEM

(NO / YES)

This feature provides the option to specify whether the V-CHIP SETUP menu item is present in the FEATURES MENU which appears when the remote control SLEEP or CC command is issued, or when a guest-mode remote control RECALL command is issued.



Features Menu With V-CHIP Menu Item = YES

NO: The V-CHIP line item does not appear in the FEATURES MENU.

YES: The V-CHIP line item appears in the FEATURES MENU.

SAVE V-CHIP

(NO / YES)

This feature provides the option to specify whether the current V-CHIP SETUP configuration remains in effect after the television is powered down.

NO: The current V-CHIP setup configuration reverts to defaults when the television is powered down.

YES: The current V-CHIP setup configuration remains in effect when the television is powered down.

V-CHIP SETUP

(>)

Configures the V-CHIP program content viewing restriction feature. Please consult the mainstream / consumer product documentation for information about this feature.

NO: The current V-CHIP setup configuration reverts to defaults when the television is powered down.

YES: The current V-CHIP setup configuration remains in effect when the television is powered down.

SLEEPTIMER


(OFF / 15 MIN / 30 MIN / 45 MIN / 60 MIN / 90 MIN / 120 MIN / 180 MIN / 240 MIN)

Activates the SLEEPTIMER feature, in which the television powers down automatically after the specified period of time.

Note 1: The SLEEPTIMER feature differs from ESP (energy saving programmability), in that the SLEEPTIMER countdown timer continues, regardless of whether the

television receives a remote control or front-panel command, whereas the ESP timer is reset whenever the television receives a command from a remote control or from the front panel.

Note 2: If the SLEEPTIMER is in progress, the current SLEEPTIMER countdown timer value appears in the ITV / commercial SETUP MENU, as well as in the FEATURES MENU. The SLEEPTIMER period can of course also be reset from either menu.

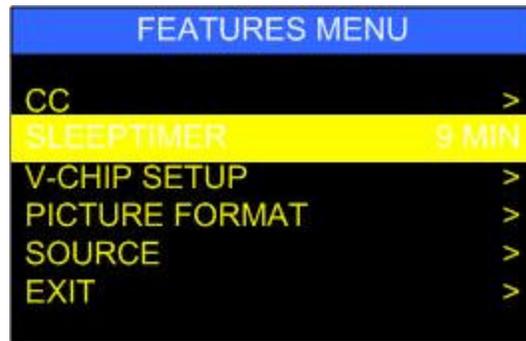




SLEEPTIMER Countdown In Progress (example)

SECURITY

Special feature for commercial use only.

(STANDARD / HIGH)

26HW9100D Dimensions

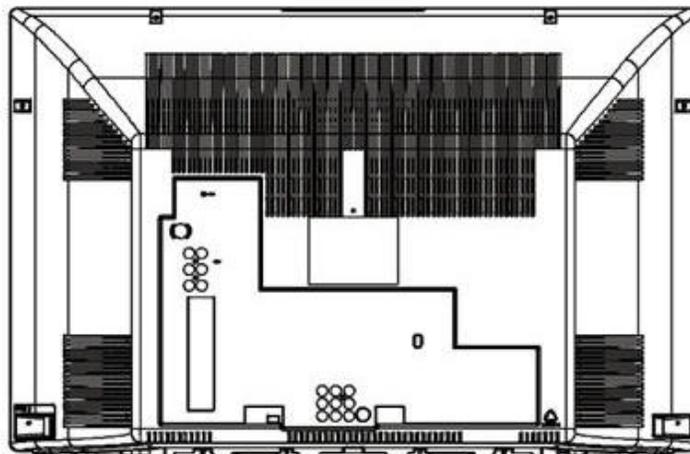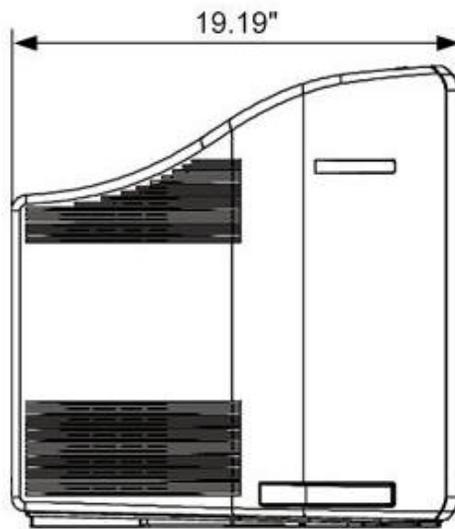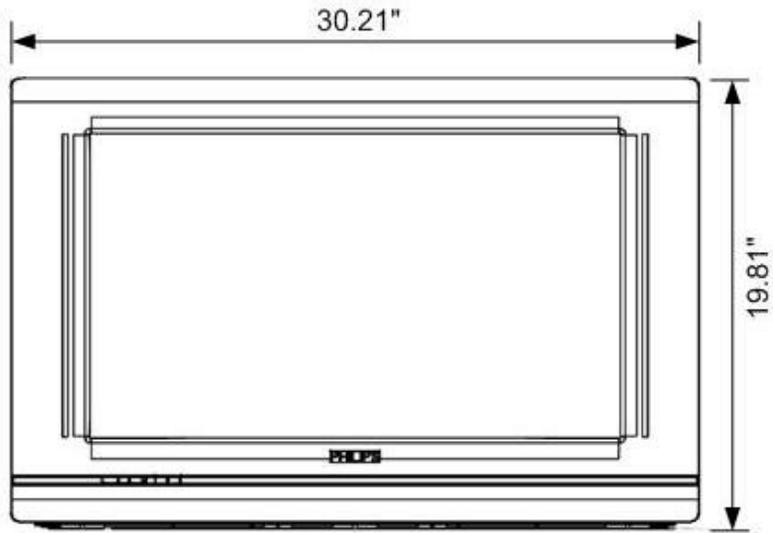

30HW9100D Dimensions

