

32HFL2808D/12
39HFL2808D/12



EN User Manual

Studio 32/39HFL2808D/12

PHILIPS



For support, please check your warranty card or www.philips.com/support.

Contents

1	Important Information	4
2	Notice	5
3	Sustainability	6
4	Help and support	6
5	TV Control switch & Operation	7
6	Stand Installation/Un-Installation	8
7	Viewing remote control	9
8	Viewing the connections	10
9	Switching On/Off	11
10	First Time Installation	11
11	Media Playback via USB input	12
12	TV Features and Functions	13
13	Software Upgrade	17
14	Specifications	19
15	Supported File Formats and Compatibility	21
16	TV Menu Professional Mode	23
17	HotelTV Options	26

Important Information

Safety

Read and understand all instructions before you use your TV. If damage is caused by failure to follow the instructions, the warranty does not apply.

Risk of electric shock or fire!

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
- Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.



- Never insert objects into the ventilation slots or other openings on the TV.
- Never expose the remote control or batteries to rain, water or excessive heat.
- Avoid force coming onto power plugs. Ensure that the power plug is fully inserted into the power socket. Loose power plugs can cause arcing or fire.
- When the TV is swiveled, ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
- To disconnect the TV from the mains power, the power plug of the TV must be disconnected. When disconnecting the power, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

Risk of damage to the TV!

- Two people are required to lift and carry a TV that weighs more than 25kg or 55lbs.
- When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.

- When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. TP Vision Netherlands B.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- If you need to store the TV, disassemble the stand from the TV. Never lie the TV on its back with the stand installed.
- Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

Risk of injury to children!

Follow these precautions to prevent the TV from toppling over and causing injury to children:

- Never place the TV on a surface covered by a cloth or other material that can be pulled away.
- Ensure that no part of the TV hangs over the edge of the surface.
- Never place the TV on tall furniture, such as a bookcase, without anchoring both the furniture and TV to the wall or a suitable support.
- Educate children about the dangers of climbing on furniture to reach the TV.

Risk of swallowing batteries!

- The product/remote control may contain a coin type battery, which can be swallowed. Keep the battery out of reach of children at all times!

Risk of overheating!

- Never install the TV in a confined space. Always leave a space of at least 4 inches or 10 cm around the TV for ventilation. Ensure that curtains or other objects never cover the ventilation slots on the TV.

Risk of injury, fire or power cord damage!

- Never place the TV or any objects on the power cord.
- Disconnect the TV from the power outlet and aerial before lightning storms. During lightning storms, never touch any part of the TV, power cord or aerial cable.

Risk of hearing damage!

- Avoid using earphones or headphones at high volumes or for prolonged periods of time.

Low temperatures

- If the TV is transported in temperatures below 5°C or 41°F, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

Screen care

- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- To avoid deformations and color fading, wipe off water drops as soon as possible.
- Avoid stationary images as much as possible. Stationary images are images that remain onscreen for extended periods of time. Stationary images include onscreen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

Notice

2012 © TPVision Netherlands B.V. All rights reserved. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. TP Vision Netherlands B.V. reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. TP Vision Netherlands B.V. warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied. TP Vision Netherlands B.V. cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

Terms of warranty

- Risk of injury, damage to TV or void of warranty! Never attempt to repair the TV yourself.
- Use the TV and accessories only as intended by the manufacturer.
- The caution sign printed on the back of the TV indicates risk of electric shock. Never remove the TV cover. Always contact Philips Customer Care for service or repairs.



- Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorised in this manual shall void the warranty.

Pixel characteristics

This LCD/LED product has a high number of color pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

CE compliance



This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage), 2004/108/EC (EMC).

Compliance with EMF

TP Vision Netherlands B.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the Electro Magnetic Field (EMF) standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. TP Vision confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today. Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Trademarks and copyrights

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.



Manufactured under license from Dolby Laboratories. Dolby and the double D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

All other registered and unregistered trademarks are the property of their respective owners.

Sustainability

Energy efficiency

This TV is designed with energy-efficient features. To access these features, press the **Green button** on the remote control.

- **Energy saving picture settings:** You can apply a combination of energy saving picture settings. While you watch TV, press the **Green button** and select **[Energy saving]**.
- **Screen off:** If you only want to listen to audio from the TV, you can switch off the TV display. Other functions continue to operate normally.

End of use

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.



Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

EU energy label

The European Energy Label informs you on the energy efficiency class of the product. The greener the energy efficiency class of this product is, the lower the energy it consumes.

On the label, you can find the energy efficiency class, the average power consumption of the product in use and the average energy consumption for 1 year. You can also find the power consumption values for the product on the Philips website for your country at www.philips.com/TV.

Help and support

Visit Philips website

Visit the Philips support website at www.philips.com/support.

At the Philips support website, you can also:

- Find answers to Frequently Asked Questions (FAQ)
- Download a printable PDF version of this user manual
- Email us a specific question
- Chat online with our support personnel (available in certain countries only)


Contact Philips

You can contact Philips Consumer Care in your country for support. The number is available in the leaflet accompanying this product, or online at www.philips.com/support.

Before you contact Philips, write down the model and serial number of your TV. You can find this information on the back of your TV or on the TV packaging.

Important information

TV Control switch & Operation

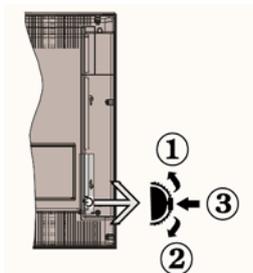

1. Up direction
2. Down direction
3. Program switch

Program switch can control:
Volume/ AV / Standby-On

Note:

You can move the switch, upward or downward to change the volume. If you want to change channels, press the middle of the switch once (Position 3) and then move upward or downward. If you press the middle of the switch once more, source OSD will be displayed. If you press the middle of the switch and hold about a few seconds, the TV will switch to standby mode. Main menu OSD cannot be displayed via control buttons.

Operation with the Remote Control

- Press "MENU" button on your remote control to display main menu screen. Use **Left** or **Right** button to select a menu tab and press **OK** to enter. Use **Left / Right / Up / Down** to select or set an item. Press "MENU" or "RETURN" button to quit a menu screen.
- Once you have connected external systems to your TV, you can switch to different input sources. Press **SOURCE** button on your remote control consecutively to select the different sources.
- You can change the channel and adjust the volume by using the **+/-** and **P/CH +/-** buttons on the remote.

General Operation


Installing the Batteries to the Remote

Lift the cover on the back of the remote upward gently. Install two **AAA** batteries. Make sure to match the + and - ends of the batteries in the battery compartment (observe the correct polarity). Replace the cover.



Connect Power & Antenna/Cable

IMPORTANT: The TV set is designed to operate on 220-240V AC, 50 Hz socket. After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains. Plug the power cable to the mains socket outlet.

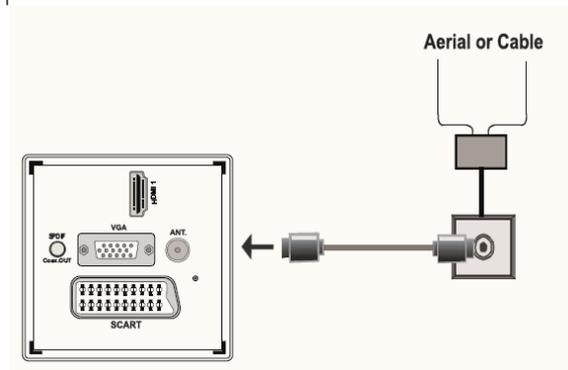


Accessories included

- Remote Control
- Batteries: 2 x AAA


Detachable Stand Installation Method

1. TV is laid on a flat surface. Make sure that there are no objects on the table that can damage/harm the TV
2. Position the stand so that it coincides with the stand mounting points (4x) on the TV. Once it is positioned fix the stand with four screws to the TV.

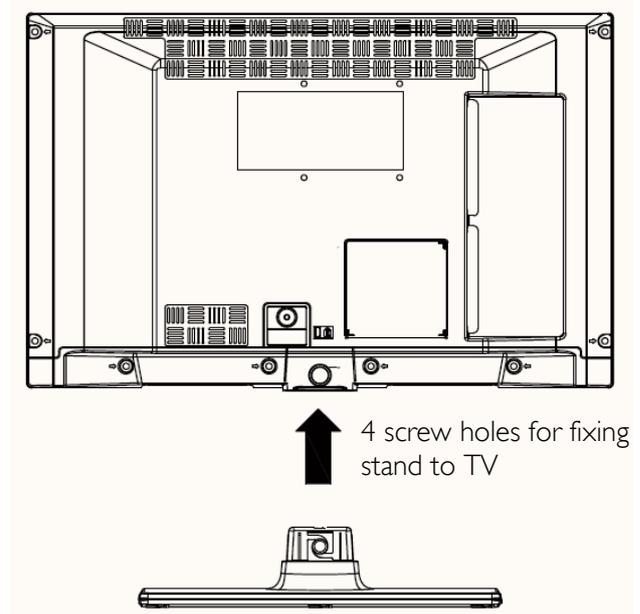

Detachable Stand Un-Installation Method

1. TV is laid on a flat surface.
2. Remove four screw that fix stand to TV.
3. Stand is pulled back.
4. Stand is detached.

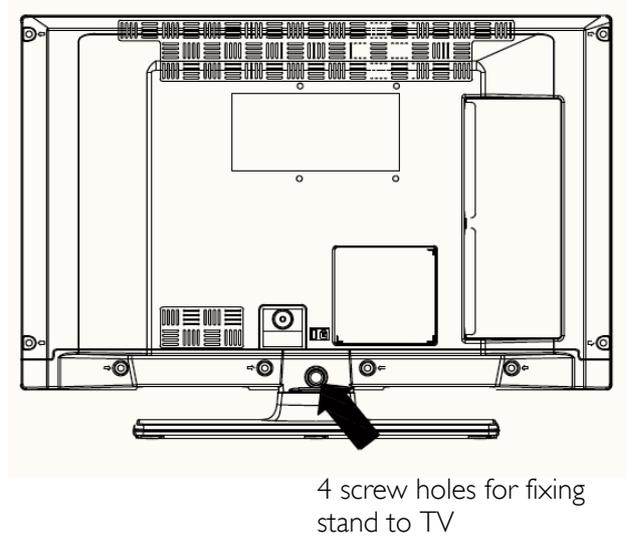

Viewing remote control

 

 
 
 
- 1 Teletext / mix
- 2 Standby
- 3 Image Size
- 4 Sleep Timer
- 5 Info/ Reveal (in TXT mode)
- 6 Source selection
- 7 Yellow button/Current language (in DVB Channel) / Mono-Stereo Dual I-II (in Analog Channel)
- 8 Blue button
- 9 Green button
- 10 Red button
- 11 Navigation buttons / Subpage (in TXT mode)
- 12 OK / Hold (in Text mod) /Channel List
- 13 Return /Back /Index page (in TXT mode)
- 14 Electronic Programme Guide
- 15 Menu on/off
- 16 Mute
- 17 Programme up/down
- 18 Previous Programme/ Now (in EPG mode)
- 19 Volume up/down
- 20 Numeric buttons



Digital Teletext (for UK only)

Press **RED** button to view digital teletext information. Operate it with the coloured buttons, cursor buttons and **OK** button. The operation method may differ depending on the contents of the digital teletext. Follow the instructions displayed on digital teletext screen.

Viewing the connections

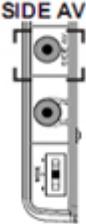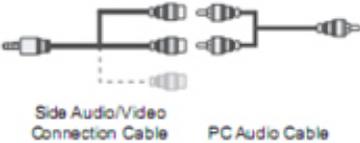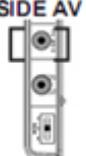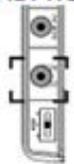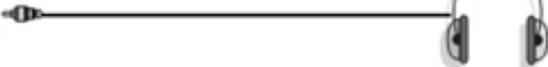Connector	Type	Cables (Not supplied)	Device
	Scart Connection (back)		
	VGA Connection (back)		
	PC/YPbPr Audio Connection (side)	 Side Audio/Video Connection Cable PC Audio Cable	
	HDMI Connection (back)		
 SPDIF	SPDIF Connection (back)		
	Side AV Connection (side)	 AV Connection Cable	
 HEADPHONE	Headphone Connection (side)		
	USB Connection (side)		
	CI Connection (side)		

NOTE:

When connecting a device via the Side AV input, you must use the supplied connection cables to enable connection. See the illustrations above. To enable PC audio, you will need to use the supplied SIDE AV CONNECTION cable's WHITE & RED inputs. If an external device is connected via the SCART socket, the TV will automatically switch to AV mode. When receiving DTV channels (Mpeg4 H.264) or while in Media Browser mode, output will not be available via the scart socket. We recommend that you plug all your cables into the back of the TV before mounting on the wall. Insert or remove the CI module only when the TV is SWITCHED OFF. You should refer to the module instruction manual for details of the settings.

Note: You can use YPbPr to VGA cable (not supplied) to enable YPbPr signal via VGA input

WARNING: You cannot use VGA and YPbPr at the same time.

Switching On/Off

To Switch the TV On

- Connect the power cord to the 220-240V AC, 50 Hz.
- Then the standby LED lights up.
- To switch on the TV from standby mode either:
 - Press the “” button, **P/CH-** or **P/CH+** or a numeric button on the remote control.
 - Press the control switch left side of the TV. The TV will then switch on.

Note:

If you switch on your TV via **CH-** or **CH+** buttons on the remote control or on the TV set, the program that you were watching last will be reselected.

By either method the TV will switch on.

To Switch the TV Off

- Press the “” button on the remote control or hold the control switch on the TV until shut down, so the TV will switch to standby mode.
- To power down the TV completely, unplug the power cord from the mains socket.

Note:

When the TV is switched to standby mode, the standby LED can blink to indicate that features such as Standby Search, Over Air Download or Timer is active.

First Time Installation

When turned on for the first time, language selection screen is displayed in all language options listed alphabetically. Press the “” or “” button to highlight the required language, press **OK** button to select. “First Time Installation” appears. Use “” or “” button to set the required country, and press “” button to select Search Type. Use “” or “” to set the desired Search Type. Available search types are Digital and analog, digital only and analog only. When set, press “” to select Teletext Language. Use “” or “” to select Teletext Language. Next, select Scan Encrypted and set as Yes if you want to scan coded stations. Press **OK** button on the remote control to continue and the search type screen will be displayed. You must select a search type to search and store broadcasts from the desired source.

IMPORTANT:

When you select Country option as France or Italy, you will be asked to set and confirm a PIN number. Selected PIN number cannot be 0000. Enter a PIN number and confirm it by entering once more. Press **OK** button to continue. If the two PIN numbers match, your master PIN number will be set.

WARNING:

When you are required to enter a PIN number for any menu operation you should use the PIN that you have previously defined during the first time installation. If you have forgotten the PIN number you have set during the first time installation, you should use the master PIN code, 4725.

Aerial Installation

If you select **AERIAL** option from the **Search Type** screen, the television will search for digital terrestrial TV broadcasts.

 **NOTE:** You can press “**MENU**” button to cancel.

After all the available stations are stored, Channel List will be displayed on the screen. If you like the sort channels, according to the LCN (*), please select “Yes” and then press **OK**.

Press “**MENU**” button to quit channel list and watch TV.
(*) LCN is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable channel sequence (if available).

Cable Installation

If you select **CABLE** option from the Search Screen, press **OK** button on the remote control to continue. To continue, please select **YES** and press **OK**. To cancel operation, select **NO** and press **OK**. You can select frequency ranges from this screen. For highlighting lines you see, use “” or “” button. You can enter the frequency range manually by using the numeric buttons on the remote control. Set **Start** and **Stop Frequency** as desired by using the numeric buttons on the remote control. After this operation, you can set **Search Step** as 8000 KHz or 1000 KHz. If you select 1000 KHz, the TV will perform search process in a detailed way. Searching duration will thus increase accordingly. Depending on your Country selection in the first time installation, 250KHz search step option might be available on Network Channel Scan screen. Note that if you perform the search with 250KHz option, search process could take a longer time.

Additionally, for some countries, Network ID option will be available. Network ID feature gets the Network Information Table. This table provides information on the selected network. It may change according to the operator and the region where that operator actively broadcasts. When finished, press **OK** button to start automatic search. The TV will search and store available broadcasts.

Media Playback via USB input

You can connect a USB hard disk drive or USB memory stick to your TV by using the USB inputs of the TV. This feature allows you to play files stored in a USB drive. 2.5" and 3.5" inch (hdd with external power supply) external hard disk drives are supported.

IMPORTANT! You should back up your files before making any connections to the TV set in order to avoid any possible data loss. Manufacturer will not be responsible for any file damage or data loss. It is possible that certain types of USB devices (e.g. MP3 Players) or USB hard disk drives/memory sticks may not be compatible with this TV. The TV supports

FAT32 and NTFS disk formatting. Note: While formatting a USB hard disk that has 1TB (TeraByte) or more file capacity, you can experience problems with the formatting process. Quickly plugging and unplugging USB devices, is a very hazardous operation. Do not repeatedly quickly plug and unplug the drive. This may cause physical damage to the USB player and USB device itself. Do not pull out USB module while playing a file.

Media Browser Menu

You can play photo, music, and movie files stored on a USB disk by connecting it to your TV and using the Media Browser screen. To do this, perform the following: Connect a USB disk to one of the USB inputs located on the side of the TV. Press "**MENU**" button and select Media Browser tab by using **Left/Right** and **OK** buttons. Main media browser screen will be displayed. You can display the related content by selecting the Video, Music or Picture tab. Follow the button indications under each on screen menu for media playback features. You can set your Media Browser preferences by using the Settings dialogue

TV Features and Functions

Picture Menu Contents	
Mode	For your viewing requirements, you can set the related mode option. Picture mode can be set to one of these options: Cinema, Game, Sports, Dynamic and Natural .
Contrast	Sets the lightness and darkness values of the screen.
Brightness	Sets the brightness value for the screen.
Sharpness	Sets the sharpness value for the objects displayed on the screen.
Colour	Sets the colour value, adjusting the colors.
Power Save Mode	Press “◀” or “▶” button to set mode as Disabled, Eco or Screen Off.
Backlight (optional)	This setting controls the backlight level and it can be set to Auto, Low, Medium and High Mode. Backlight function will be inactive if Power Save Mode is set to On. Backlight cannot be activated in VGA, Media Browser mode or while the picture mode is set to Game.
Noise Reduction	If the broadcast signal is weak and the picture is noisy, use Noise Reduction setting to reduce the noise amount. Noise Reduction can be set to one of these options: Low, Medium, High or Off .
Advanced Settings	Press “OK” to enter Advanced Settings Menu
Reset	Press “OK” to resets the picture settings to factory default settings.
Advanced Settings	
Dynamic Contrast	Sets the desired contrast level. Off, Low, Medium, High .
Colour Temp	Sets the desired colour tone. Normal, Warm, Cool .
Picture Zoom	Sets the picture size to Auto, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema .
Film Mode	Films are recorded at a different number of frames per second to normal television programs. When this feature set to Auto when you are watching films to see the fast motion scenes clearly.
Skin Tone	Adjust the desired skin color level.
Colour Shift	Adjust the desired colour tone.
RGB Gain Setting	Adjust the desired gain settings for Red, Green and Blue.
Autoposition (in PC mode)	Automatically optimizes the display. Press OK to optimize.
H Position (in PC mode)	This item shifts the image horizontally to right hand side or left hand side of the screen.
V Position (in PC mode)	This item shifts the image vertically towards the top or bottom of the screen.
Dot Clock (in PC mode)	Dot Clock adjustments correct the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.
Phase (in PC mode)	Depending on the resolution and scan frequency that you input to the TV set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.
<i>While in VGA (PC) mode, some items in Picture menu will be unavailable. Instead, VGA mode settings will be added to the Picture Settings while in PC mode.</i>	

TV Menu Features and Functions

Sound Menu Contents	
Volume	Adjusts volume level.
Equalizer:	In equalizer menu, the preset can be changed to Music, Movie, Speech, Flat, Classic and User . Press "OK" to enter the menu. Press the "MENU" button to return to the previous menu. Equalizer menu settings can be changed manually only when the Equalizer Mode is in User .
Balance	This setting is used for emphasizing left or right speaker balance.
Headphone	Sets headphone volume.
Sound Mode	You can select Stereo, Dual I or Dual II mode, only if the selected channel supports that mode.
AVL	Automatic Volume Limiting (AVL) function sets the sound to obtain fixed output level between programs (For instance, volume level of advertisements tends to be louder than programs).
Headphone/Lineout	Select play out signal on headphone connector out.
Dynamic Bass	Press "◀" or "▶" button to set Dynamic Bass as On or Off.
Surround sound	Press "◀" or "▶" button to set Surround sound option On or Off.
Digital Out	Sets digital out audio type to "PCM" or "Compressed".

Using the Channel List

The TV sorts all stored stations in the Channel List. You can edit this channel list, set favorites or set active stations to be listed by using the Channel List options.

- Select Channel List from the main menu.
- Select **Edit Channel List** to manage all stored channels. You can move, delete, edit name and lock channels using this screen.
- Select **Favorites** to create a list of favorite programs.
- Select **Active Channel List** to sort channel list. You can select a broadcast type option from the displayed list by using "▼" or "▲" and OK buttons.

Note:

Broadcast type can be changed from other settings menu.

Configuring Parental Settings

To prohibit viewing of certain programs, channels and menus can be locked by using the parental control system.

Highlight **Parental** in the Settings menu and press **OK** to continue. To display parental lock menu options, the PIN number should be entered. The factory default PIN number is **0000**. After coding the correct PIN number, parental settings menu will be displayed.

Menu Lock: Menu lock setting enables or disables the menu access.

Maturity Lock: When set, this option gets the maturity information from the broadcast and if this maturity level is disabled, disables access to the broadcast.

Child Lock: When Child Lock is set, the TV can only be controlled by the remote control. In this case the control panel buttons will not work.

Set PIN: Defines a new PIN number.

IMPORTANT: The factory default pin number is 0000, if you change the pin number make sure you write it down and keep it safe.

Note: If the Country option is set to France or Italy, you can use 4725 as the default code.

TV Menu Features and Functions

Settings Menu Contents	
Conditional Access	Controls conditional access modules when available.
Language	Configures language settings (-may change depending on the country selected) Preferred and current settings will be available. Current settings can be changed only if the broadcaster supports.
Parental	Configures parental settings. (see page 14)
Timers	Sets timers for selected programs. / Sets sleep timer to turn off the TV after a certain time.
Recording Configuration	If removable device (hard disk) is connected to USB port, recording and playback features are enabled.
Date/Time	Sets date and time. – Note: * The TV takes the time info via the broadcast. Correct time will be available on Date/Time Settings, if the time info is provided in the broadcast. If the TV is in no channel mode, Date/Time settings can be changed. However, if there is a channel preset, only "Time Settings Mode" can be changed and if this is set to Manual, Time Zone will be enabled. * If the TV is switched to standby mode and switched on later and there is no broadcast available, time information will not be updated. If there is a present broadcast; however, time information will be taken via the broadcast. In other words, time information will be available according to these priorities: The TV first looks for the time info in the broadcast, then to the user preference, and lastly to the teletext time information.
Sources	Enables or disables source selection.
Other Settings Contents	
Menu Timeout	Changes timeout duration for menu screens. (Off, 15s, 30s, 60s)
Scan Encrypted	When this setting is on, search process will locate the encrypted channels as well. If it is set as Off, encrypted channels will not be located in automatic search or manual search.
Blue Background (optional)	Activates or deactivates blue background system when the signal is weak or absent.
Software Upgrade	To ensure that your TV always has the most update information, you can use this setting. In order for the proper operation once Automatic scanning is set to Enabled, please ensure that the TV is set to standby mode. Select Scan for Upgrade is OK, manual search for update is initiated.
Application Version	Displays current application software version.
Hard of Hearing	If the broadcaster enables any special signal concerning the audio, you can set this setting as On to receive such signals.
Audio Description	Audio description refers to an additional narration track for blind and visually impaired viewers of visual media, including television and movies. You can use this feature, only if the broadcaster supports that additional narration track.
Auto TV Off	Timeout value Auto, 1 – 6 hour . When the timeout value is reached and the TV is not operated for selected time, the TV will go off.
Standby Search (optional)	If you change Standby Search to Off , this function will be unavailable. When the Standby Search is set to On , and if the TV is in standby mode, available broadcasts will be searched. If the TV locates any new or missing broadcasts, a menu screen will be displayed, asking you whether or not to execute these changes. Channel list will be updated and changed after this process. Please activate Standby Search setting in order to enable your TV for automatically updating the broadcast frequency of the broadcaster, broadcast definition and similar changes.

Store mode	If enabled will store changes to channels are made.
Power Up Mode	Power up of TV will be Standby mode or Last Status at moment of power down.

TV Menu Features and Functions

Install and Retune Menu Contents	
Automatic Channel Scan (Retune)	Displays automatic tuning options. Digital Aerial: Searches and stores aerial DVB stations. Digital Cable: Searches and stores cable DVB stations. Analogue: Searches and stores analogue stations. Digital Aerial & Analogue: Searches and stores aerial DVB and analogue stations. Digital Cable & Analogue: Searches and stores cable DVB and analogue stations.
Manual Channel Scan	This feature can be used for direct broadcast entry.
Network Channel Scan	Searches for the linked channels in the broadcast system.
Analogue Fine Tune	You can use this setting for fine tuning analogue channels. This feature is not available if no analogue channels are stored.
First Time Installation	Deletes all stored channels and settings, resets TV to factory settings and starts first time installation. You can follow the instructions in the Initial Installation section for more information on this process.
Clear Service List	(*) Visible for Denmark, Sweden, Norway or Finland. Clear Service List and then press OK. The following OSD will be displayed on the screen. Select YES and press OK to continue or select NO and press OK button to cancel.

Electronic Program Guide

Some, but not all channels send information about the current and next programs. Press the "EPG" button to view the EPG menu.

Up/Down/Left/Right: Navigate EPG.

OK: Displays program options.

INFO: Displays, in detail information on program selected.

GREEN: Switches to List Schedule EPG.

YELLOW: Switches to Timeline Schedule EPG.

BLUE: displays filtering options.

Program Options

In EPG menu, press the **OK** button to enter the **Event Options** menu.

Select Channel

In EPG menu, using this option, you can switch to the selected channel.

Software Upgrade

Your TV is capable of finding and updating new software upgrades over broadcast channels (if available). For broadcast channels search, TV looks the available channels stored in your settings. So before software upgrade search, it is advised to auto search and update all available channels.

1. Software Update via USB Input

Before starting..

Ensure that you have a USB flash disk with appropriate free space. Do not use a USB hard disk drive for the software update process.

Get software updates from your dealer or www.philips.com/support.

Check the current software version of your TV using the **MENU> Settings> Other Settings> Software Upgrade** item. If the version you have found is not newer than the current version on your TV, it is not necessary to update your product. Do not install a lower version of the software since this may cause problems.

- After obtaining the most recent software, copy the BIN file to the USB flash disk.
- Now connect the USB flash disk to the USB input of your TV.
- Switch off your TV using the main control switch of the TV and unplug the power cord.

- Hold the remote control towards the TV. Now press the OK button and keep pressing the OK button (Do not release the OK button now).
- Plug the TV to the mains and switch on the TV.
- Keep pressing the OK button five seconds more after the TV switches on and release it afterwards. Software update process should now start.
- The TV will switch on in First Time Installation mode after the software update finishes.

IMPORTANT

- Do not press any other buttons on the TV or on the remote control during the software update.
- Do not remove the USB flash disk from the TV during the process.
- To prevent accidental updates, please use your computer to delete the BIN file on your USB flash disk after the software update is successfully finished.

2. 3 AM search and upgrade mode

- If **Automatic scanning** in **Upgrade Options** menu is enabled, TV wakes up at 03:00 and searches broadcast channels for new software upgrade. If new software is found and downloaded successfully, with next power up TV opens with new software version.

Note on reboot operation: Reboot is the last step in software upgrade operation if download of new software is finished successfully. During reboot TV makes final initialization. In reboot sequence panel power is closed and front led indicates the activity with blinking. Around 5 minutes later TV restarts with new software activated. The TV may start in first time installation mode.

- If your TV fails to restart in 10 minutes, unplug power for 10 minutes and re-plug again. TV should open with new software safely. If you still cannot get TV working, please kindly repeat unplug and plug sequence a few times more. If your set still cannot operate, please call the service personnel to fix the problem for you.

Caution: While led is blinking during reboot do not unplug your TV's power. Doing this may cause your TV not to re-open again and can only be fixed by service personnel.

Troubleshooting & Tips

Image persistence – ghosting

Please note that ghosting may occur while displaying a persistent image (still or paused image). LED TV's image persistence may disappear after a short time. Try turning off the TV for a while. To avoid this, do not leave the screen in still picture mode for extended periods.

No power

If your TV has no power, please check the power cord plug is connect to the mains power socket.

Poor picture

1. Have you selected the correct TV system?
2. Is your TV or house aerial located too close to non-earthed audio equipment or neon lights, etc.?
3. Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial. Is the picture or teletext unrecognisable?
4. Check if you have entered the correct frequency.
5. Please retune the channels.
6. The picture quality may degrade when two devices are connected to the TV at the same time. In such a case, disconnect one of the devices.

No picture

1. No Picture means that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more. Also make sure the correct input source has been selected.
2. Is the antenna connected properly?
3. Are the plugs connected tightly to the antenna socket?

4. Is the antenna cable damaged?
5. Are suitable plugs used to connect the antenna?
6. If you are in doubt, consult your dealer.

No sound

1. Has the TV been set to mute? To cancel mute, press “~~M~~” button, or increase the volume level.
2. Sound is coming from only one speaker. Is the balance set to one extreme? See Sound Menu section.

Remote control - does not operate

Your TV no longer responds to the remote control. The batteries may be exhausted, if so you can still use the control buttons on the TV. (* Is only possible if they are not blocked by parental control and if they are available with your model.)

Input sources - cannot be selected

1. If you cannot select an input source, it is possible that no device is connected.
2. Check the AV cables and connections if you have tried to connect a device.

Specifications

TV BROADCASTING

PAL/SECAM B/G D/K K' I/I' L/L'

DIGITAL RECEPTION

DVB-T MPEG2 DVB-T MPEG4 HD
DVB-T MHEG-5 Engine (for UK only)
DVB-C MPEG2 DVB-C MPEG4 HD

RECEIVING CHANNELS

VHF (BAND I/III) UHF (BAND U)
HYPERBAND

NUMBER OF PRESET CHANNELS

1000 (800 DVB-T / 200 Analogue)

CHANNEL INDICATOR

On Screen Display

RF AERIAL INPUT

75 Ohm (unbalanced)

OPERATING VOLTAGE

220-240V AC, 50 Hz.

AUDIO

German + Nicam Stereo

AUDIO OUTPUT POWER (WRMS) (10% THD)

2 x 5W

32HFL2808D/12:

POWER CONSUMPTION

EU energy label: 41W

PANEL

16:9 display,
32" Screen Size

VESA Mounting

200mm x 100mm
Screw Type: M4

DIMENSIONS (mm)

With foot:
DxLxH (mm): 185 x 742 x 489
Weight (Kg): 6.9kg

Without foot:
DxLxH (mm): 89/105 x 742 x 451
Weight (Kg): 6.3kg

39HFL2808D/12:

POWER CONSUMPTION

EU energy label: t.b.c.

PANEL

16:9 display,
39" Screen Size

VESA Mounting

200mm x 200mm
Screw Type: M4

DIMENSIONS (mm)

With foot:
DxLxH (mm): 220 x 893 x 570
Weight (Kg): 9.5kg

Without foot:
DxLxH (mm): 77/xxx x 893 x 530
Weight (Kg): 8.7kg

Supported DVI Resolutions

When connecting devices to your TV's connectors by using DVI to HDMI cables (not supplied), you can refer to the following resolution information

Index	Resolution	Frequency
1	640x400	70Hz
2	640x480	60Hz-66Hz-72Hz-75Hz
3	800x600	56Hz-60Hz-70Hz-72Hz-75Hz
4	832x624	75Hz
5	1024x768	60Hz-66Hz-70Hz-72Hz-75Hz
6	1152x864	60Hz-70Hz-75Hz
7	1152x870	75Hz
8	1280x768	60Hz-75Hz
9	1280x960	60Hz-75Hz
10	1280x1024	60Hz-75Hz
11	1360x768	60Hz
12	1400x1050	60Hz-75Hz
13	1400x900	65Hz-75Hz
14	1600x1200	60Hz
15	1680x1050	60Hz
16	1920x1080	60Hz
17	1920x1200	60Hz
18	480i-480p	60Hz
19	576i-576p	50Hz

PC Typical Display Modes

The following table is an illustration of some of the typical video display modes. Your TV may not support all resolutions. Your TV supports up to 1920x1080.

Index	Resolution	Frequency
1	640x350p	60 Hz
2	640x400p	60 Hz
3	1024x768	60 Hz
4	1280x768	60 Hz
5	1360x768	60 Hz
6	720x400	60 Hz
7	800x600	56 Hz
8	800x600	60 Hz
9	1024x768	60 Hz
10	1024x768	66 Hz
11	1280x768	60 Hz
12	1360x768	60 Hz
13	1280x1024	60 Hz
14	1280x960	60 Hz
15	1280x1024	60 Hz
16	1400x1050	60 Hz
17	1600x1200	60 Hz
18	1920x1080	60 Hz

Supported File Formats for USB Mode

Media	File Extension	Format	Remarks	
		Video codecs	(Maximum resolution/Bit rate etc.)	
Movie	.mpg, .mpeg, .dat	MPEG1,2	MAX 1920x1080 @ 30P 20Mbit/sec	
	.vob	MPEG2		
	.mkv	H.264, MPEG1,2,4		
	.ts	MPEG2, H.264, VC1, AVS, MVC		
	.avi	Xvid 1.00,		MPEG2, MPEG4
		Xvid 1.01, Xvid 1.02, Xvid 1.03,		
		Xvid 1.10-beta1/2		
		H.264		
	.mp4	Xvid 1.00,		-
		Xvid 1.01, Xvid 1.02, Xvid 1.03,		
Xvid 1.10-beta1/2				
H.264				
Motion JPEG	JPEG	640 x 480 @ 30fps		
.asf, .wmv	VC1	1080p @ 30fps		
.fla, .flv	H.264, Sorensen H.263	1080p @ 25-50fps		
Media	File Extension	Audio Codecs	Remarks	
Music	.mp3	MPEG1/2 Layer 1	32Kbps ~ 448Kbps(Bit rate)	
			8Kbps ~ 384Kbps(Bit rate)	
			8Kbps ~ 320Kbps(Bit rate)	
			32KHz ~ 48KHz(Sampling rate)	
		AC3, EAC3	Embedded in video files	32Kbps ~640Kbps, 32/44.1/48KHz 32Kbps ~6Mbps, 32/44.1/48KHz
	.m4a, .aac	M4A/AAC		Free format 8KHz ~ 48KHz(Sampling rate)
	.wma, .asf	WMA		128Kbps ~320Kbps, 8 ~ 48KHz
.wma, .asf	WMA Pro		<768Kbps, 96KHz	
	LPCM	Embedded in video files	64Kbps ~ 1.5Mbps, 8 ~ 48KHz	
	IMA-ADPCM / MS-ADPCM	Embedded in video files	384Kbps, 8 ~ 48KHz	
.pcm, .wav	PCM, LPCM		8Kbps ~320Kbps, 16 ~ 48KHz	
Media	File Extension	Photo formats	Remarks	
Photo	.jpeg	Base-Line	max WxH = 15360x8640	
		Progressive JPEG	max WxH = 1024 x 768	
	.png	Non-interlace-	max WxH = 9600x6400	
		interlace	max WxH = 1200 x 800	
	.bmp		max WxH = 9600x6400	

AV and HDMI Signal Compatibility

Source	Supported Signals		Available
EXT (SCART)	PAL 50/60		○
	NTSC 60		○
	RGB 50		○
	RGB 60		○
Side AV	PAL 50/60		○
	NTSC 60		○
YPbPr	480I	60Hz	○
	480P	60Hz	○
	576I	50Hz	○
	576P	50Hz	○
	720P	50Hz	○
	720P	60Hz	○
	1080I	50Hz	○
	1080I	60Hz	○
	1080P	50Hz	○
HDMI1	480I	60Hz	○
	480P	60Hz	○
	576I	50Hz	○
	576P	50Hz	○
	720P	50Hz	○
	720P	60Hz	○
	1080I	50Hz	○
	1080I	60Hz	○
	1080P	24Hz	○
	1080P	25Hz	○
	1080P	30Hz	○
	1080P	50Hz	○
1080P	60Hz	○	

(X: Not Available, O: Available)


In some cases a signal on the LED TV may not be displayed properly. The problem may be an inconsistency with standards from the source equipment. If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.

TV Menu Professional Mode Features and Functions

Hotel Setup RC (22AV8573)

Enter Hotel TV Menu

It is only possible to enter the Hotel TV Menu for the Professional Mode using the optional HotelTV SetUp Remote Control (22AV8573).

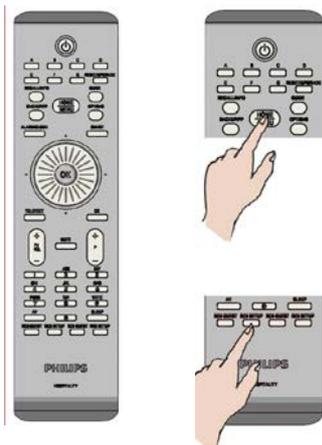

To enter the Hotel TV menu:

- press RC5 Setup key
- press Home/Menu key

Note:

Only the Home/Menu key on the HotelTV SetUp RC (22AV8573) will control the TV. No other keys will function on this TV! To make changes use the Remote Control that is included with the TV.

The RC 22AV8573 is optional and NO part of the standard accessories. This RC can be purchased at your dealer.

Exit Hotel TV Menu

Leaving the Hotel TV Menu after making the required settings can be done using the HotelTV SetUp Remote Control (22AV8573) and the with the TV included standard Remote Control.

To exit the Hotel TV menu:

- press RC5 Setup key
- press Home/Menu key

Standard RC

To exit the Hotel TV menu with standard RC:

- press Menu key



Hotel TV Menu settings

Hotel Mode [Off]	Feature to enable or disable the Hotel TV Menu features. <ul style="list-style-type: none"> When enabled the TV will follow configured feature settings. Note: Access to the Hotel TV Menu is by the use of <Help/Menu> on the HTV Setup RC or on the standard RC using key sequence: Menu 7 9 3 5 .
Below settings are only active while [Hotel Mode] is On.	
Pin8 [Off]	Feature to enable or disable the auto SCART feature. <ul style="list-style-type: none"> This feature allows a connected SCART device to turn the TV on or off.
Last Status [On]	Feature to enable or disable the last status feature <ul style="list-style-type: none"> This feature allows the TV to remember the last used configuration and restores when startup again. Otherwise default settings are used.
Panel Lock [Off]	Feature to enable or disable the functionality of the side control TV button. <ul style="list-style-type: none"> Select [On] to lock the side control TV button. Select [Off] unlock the side control TV button.
RCU Inhibit [Off]	Enable or disable the functionality Remote Control. <ul style="list-style-type: none"> Select [On] to block all RC commands (except the HotelTV SetUp RC Home/Menu key, or the standard RC Menu 7 9 3 5 key sequence). Select [Off] and all RC commands are enabled.
Startup Position [TV]	Select startup program/source when TV is switched on via Power On key or Digit keys. <ul style="list-style-type: none"> Auto TV wakes up in last used channel/source. TV TV wakes up with the channel specified in Startup Channel field. EXT1 / EXT1-S / Side AV / HDMI1 / HDMI2 / YPbPr / VGA_PC TV wakes up with the specified external source.
Startup Channel [1]	Feature to select the channel to be used as Startup Position.
Volume Limit [63]	Feature to set the maximum volume level. <ul style="list-style-type: none"> Range values 0-63.
Fixed Volume Enable [Off]	Feature to set Volume to a set Fixed Volume. <ul style="list-style-type: none"> Volume is fixed to the level set at Fixed Volume Value item.
Fixed Volume Value [20]	Feature to set the Fixed Volume level. <ul style="list-style-type: none"> Range values 0-63.
Headphone Direct Volume [Disabled]	Control Head Phone out volume instead of TV speakers. TV speakers volume is set to Last Status before Hotel Mode is activated.

Hotel TV Menu settings

OSD Disable [Disable All Menus]	Feature to hide menu items when the Remote Control Menu key is pressed. <ul style="list-style-type: none"> • Disable All Menus <ul style="list-style-type: none"> ○ all menu icons are hidden. • Disable Setup Menus <ul style="list-style-type: none"> ○ picture, sound, settings and media browser menu icons are displayed. <p>When [Hotel Mode] is set to Off, all TV menu items will be displayed (picture, sound, settings, install and retune, channel list, media browser)</p>
Teletext [Off]	Feature to hide Teletext display. <ul style="list-style-type: none"> • On to enable Teletext activation. • Off to hide Teletext.
Copy To USB <OK>	Feature to copy configuration and channel settings. <ul style="list-style-type: none"> • Select [OK] to copy settings to a USB device (connected to side-I/O).
Copy From USB <OK>	Feature to copy configuration and channel settings of a similar TV. <ul style="list-style-type: none"> • Select [OK] to copy settings from a USB device (connected to side-I/O).
Wakeup Time Channel [1]	Feature to set the channel to view when the TV wakes up. <ul style="list-style-type: none"> • Use Digits button(s) to complete entry field. All timers and events are not possible to set once all menus are hidden. (Already set events must be cleared before hide all menus) >>> OSD Disable → [Disable All Menus]
Wakeup Time Volume [40]	Feature to set the wakeup time volume level. Range values 0-63.
USB option [On]	Feature to detect if a USB device is connected. <ul style="list-style-type: none"> • On to enable USB device detection. • Off to disable USB device detection. <p>When [Off] the Media Browser icon will be displayed but cannot be activated.</p>
Fixed Pic. Mode [Off]	Feature to hide picture menu icon. <ul style="list-style-type: none"> • Off picture icon is displayed amongst all menu. • On picture icon is hidden.
Digital Tuner [On]	<ul style="list-style-type: none"> • Off mixture of analog and digital channels. • On digital channels only.
Multiple RC support [Off]	Feature to select a unique RC address (1 out of 4) // a.k.a. MultiRC <ul style="list-style-type: none"> • Off feature is disabled. • On feature is enabled and shows what RC is set.
Welcome Screen [On]	Feature to show a welcome screen at startup. <ul style="list-style-type: none"> • On a welcome screen is shown • Off a welcome screen is hidden
NIT Update [Disable]	Feature to retrieve channel table information: <ul style="list-style-type: none"> • On Retrieve NIT information • Disable Don't use NIT table
High Security [Off]	Feature to limit Hotel Mode menu access: <ul style="list-style-type: none"> • On Access to Hotel Menu only by Hotel Setup Remote • Off Access to the Hotel Menu also with standard TV RC
Reset to Default	Feature to reset all features to standard factory setting

HotelTV Options

Service Menu

Enter Service Menu



It is only possible to enter the Service Menu if the Hotel Mode is disabled, Hotel Mode set to <Off>. If enabled, open the Hotel TV Menu and set Hotel Mode to Off.

To enter the Service Menu:

- press Menu key
- press key sequence:
<1><2><3><6><5><4>

All items are unselectable under the Service Menu. The software version number will be shown as VES11E_x.y.z

MultiRC setup

Enter MultiRC Menu Feature to program a RC to pair to a TV

To enter the MultiRC Menu:

- (press Menu key)
- press key sequence:
<RETURN><1><2><3><4>

On the TV a menu will guide you to select the desired TV. Press the relevant key and then press the OK key to finish the programming.

Enter MultiRC Menu Feature to reset the RC/TV

To enter the MultiRC Menu:

- (press Menu key)
- press key sequence:
<RETURN> <4><3><2><1>

On the TV you will see a dialog, "Reset OK?" Press the OK key to reset the system. After resetting, the system will return to the factory default.

Welcome Picture

Store in a **welcome_image** directory on a USB device a picture file with the name: **hotel_wel.png**.

<USB>:/welcome_image/hotel_wel.png

Picture characteristics:

Name + extension	Hotel_wel.png
Resolution	960h x 540v

Note:

For the welcome picture, there is a color lookup table used that is limiting the number of colors available to display. This can result in certain display color artifacts and using a limited number of different color values can improve this.

The picture can be loaded into the TV using the **Copy from USB** command in the Hotel TV Menu.

In the Hotel TV Menu, set the entry: **Welcome Screen <On>**

Once this feature is configured and set the welcome image will be displayed within 8 seconds after switch on. This page will remain until a key on the RC is pressed.