

Quick Start Setup Guide

46HFL5784L

42HFL5784D

42HFL5784L

39HFL5784D

39HFL5784L

PHILIPS

Know these **safety** symbols



The caution marking is located on the rear or bottom of the cabinet.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the apparatus's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the apparatus.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

PHILIPS

Visit our World Wide Web Site at www.philips.com/hospitality

CHILD SAFETY:

PROPER TELEVISION PLACEMENT MATTERS

THE CONSUMER ELECTRONICS INDUSTRY CARES

- Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions – new and old- must be supported on proper stands or installed according to the manufacturer's recommendations. Televisions that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.

TUNE IN TO SAFETY

- **ALWAYS** follow the manufacturer's recommendations for the safe installation of your television.
- **ALWAYS** read and follow all instructions for proper use of your television.
- **NEVER** allow children to climb on or play on the television or the furniture on which the television is placed.
- **NEVER** place the television on furniture that can easily be used as steps, such as a chest of drawers.
- **ALWAYS** install the television where it cannot be pushed, pulled over or knocked down.
- **ALWAYS** route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.

WALL OR CEILING MOUNT YOUR TELEVISION

- **ALWAYS** contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- **ALWAYS** use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
- **ALWAYS** follow all instructions supplied by the television and mount manufacturers.
- **ALWAYS** make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.

MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME

- Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
- **ALWAYS** place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
- **NEVER** place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
- **ALWAYS** make sure your older CRT television does not hang over the edge of your furniture.

CE.org/safety



CEA
Consumer Electronics Association

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

 


13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Note to the CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of Antenna Grounding as per NEC - National Electric Code

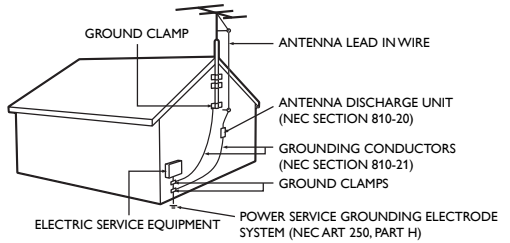

Wall Mount Bracket Kit

	Brand	Model #	Screw dimension
46HFL5784L	PHILIPS	SQM6485	M6 x 1.614" (41mm) with spacer
42HFL5784D 42HFL5784L 39HFL5784D 39HFL5784L	SANUS	SAN25BB	M4 x 0.472" (12mm)

- The recommended Wall Mount Bracket Kit (sold separately) allows the mounting of the TV on the wall.
- For detailed information on installing the wall mount, refer to the Wall Mount Instruction Book.
- P&F USA is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV Wall Mount Bracket or mount the TV onto the Bracket on your own.
- The Wall Mount Bracket must be installed by experts.

P&F USA is not liable for these types of accidents or injury noted below.

- Install the Wall Mount Bracket on a sturdy vertical wall.
- If installed onto a ceiling or slanted wall, the TV and Wall Mount Bracket may fall which could result in a severe injury.
- Do not use screws that are longer or shorter than their specified length. If screws too long are used this may cause mechanical or electrical damage inside the TV set. If screws too short are used this may cause the TV set to fall.
- Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to an injury.
- For safety reasons use 2 people to mount the TV onto a Wall Mounting Bracket.
- Do not mount the TV onto the Wall Mounting Bracket while your TV is plugged in or turned on. It may result in an electrical shock injury.

When installing the unit on the wall, allow this much space.

Top:	11.8 inches (30cm)
Left and right side:	5.9 inches (15cm)
Bottom:	3.9 inches (10cm)

1 Notice

Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

P&F USA reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this manual is believed adequate for the intended use of the system. If the product or its individual modules or procedures are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. P&F USA warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

P&F USA cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to P&F USA will be adapted and published on the P&F USA support website as soon as possible.

Pixel characteristics

This LCD product has a high number of color pixels. Although it has effective pixels of 99,999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by Service Centers and official repair shops. Failure to do so shall void any warranty, stated or implied.

Any operation expressly prohibited in this manual, any adjustments or assembly procedures not recommended or authorized in this manual shall void the warranty.

Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Declaration of Conformity

Trade Name: PHILIPS
Responsible Party: P&F USA, Inc.
Model: 46HFL5784L, 42HFL5784D, 42HFL5784L, 39HFL5784D, 39HFL5784L
Address: PO Box 2248, Alpharetta, GA 30023 U.S.A.
Telephone Number: 1 866 497 4225

Modifications

This apparatus may generate or use radio frequency energy. Changes or modifications to this apparatus may cause harmful interference unless the modifications are expressly approved in the manual. The user could lose the authority to operate this apparatus if an unauthorized change or modification is made.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

Canadian notice

CAN ICES-3 (B)/NMB-3 (B)

Standard Television Receiving Apparatus, Canada BETS-7/NTMR-7.

Copyright


All other registered and unregistered trademarks are the property of their respective owners.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



SRS  is a trademark of SRS Labs, Inc. TruSurround HD technology is incorporated under license from SRS Labs, Inc.

SRS TruSurround HD™ creates an immersive, feature-rich surround sound experience from two speakers, complete with rich bass, high frequency detail and clear dialog.



ENERGY STAR® is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy helping us all save money and protect the environment through energy efficient products and practices.

Consumer Notice:

This TV has been set to maximize energy efficiency while delivering the best possible picture using the factory installed home mode settings.

Changing or enabling other features in this TV (e.g. brightened backlighting) will possibly increase energy consumption beyond the original ENERGY STAR® qualified limits.



LED backlighting technology uses less energy when compared with a standard CCFL backlighting LCD television of the same screen size. Actual energy savings will vary depending on the screen size.

 
Portions of this software are copyright © The FreeType Project (www.freetype.org).

The American Academy of Pediatrics discourages television viewing for children younger than two years of age.

2 Important

Positioning the TV

- Large screen TVs are heavy, 2 people are required to carry and handle a large screen TV.
- Make sure to hold the upper and bottom frames of the unit firmly as illustrated.
- Install the unit in a horizontal and stable position.
- Do not install the unit in direct sunlight or in a place subject to dust or strong vibration.
- Depending on the environment, the temperature of this unit may increase slightly. This is not a malfunction.
- Avoid a place with drastic temperature changes.
- Do not place anything directly on top or bottom of the unit.
- Depending on your external devices, noise or disturbance of the picture and/or sound may be generated if the unit is placed too close to them. In this case, please ensure enough space between the external devices and the unit.
- Do not insert the AC power cord into the power socket outlet before all the connections are made.
- Ensure that you always have easy access to the AC power cord or plug to disconnect the TV from the power.
- Before you move the TV, disconnect attached cables to prevent damage to connectors.
- Be sure to unplug the AC power cord from the AC outlet before moving or carrying the unit.

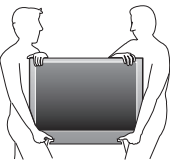


CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING: Batteries (battery pack or battery installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: To prevent injury, this apparatus must be securely attached to the furniture/wall in accordance with the instructions. Tipping, shaking or rocking the unit may cause injury/death.

 Environmental care



The packaging of this product is intended to be recycled.

Contact your local authorities for information about how to recycle the packaging.

For product recycling information, please visit - www.recycle.philips.com

End of life directives



Philips pays a lot of attention to produce environment-friendly products in green focal areas. Your new TV contains materials which can be recycled and reused. At the end of its life, specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the amount of materials to be disposed of. Please ensure you dispose of your old TV according to local regulations.

 
Disposal of used batteries

The batteries supplied do not contain the heavy metals mercury and cadmium. Nevertheless, in many areas batteries may not be disposed of with your household waste. Please ensure you dispose of batteries according to local regulations.


Regulatory notices

Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling unit can cause serious injury or even death.

This apparatus should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided. Make sure to leave a space of 4 inches (10cm) or more around this apparatus.

Press  to turn the unit on and go into standby mode. To completely turn off the unit, you must unplug the AC power cord.

 Disconnect the AC plug to shut the unit off when trouble is found or not in use. The AC plug shall remain readily available.

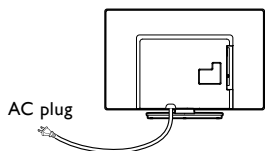

Never use a gas duster on this TV. The gas trapped inside of this unit may cause ignition and explosion.

How to use this guide

The Quick Start Setup Guide helps you install the Philips commercial television, as quickly as possible. It contains the necessary information to install the TV and configure the settings. Read and understand the instructions in the Quick Start Setup Guide before you use your TV.

For detailed information on additional features, download the user manual by selecting your TV model at

www.philips.com/hospitality.

The Quick Start Setup Guide contains the following information:

- Contents of the box
- Configuration of channel and advanced settings
- Cloning of data

As part of striving to improve the TV performance throughout the product life, some TV menus may differ from the illustration on this document.

The contents of the box

The box contains the following items:

- TV
- TV stand
- Quick Start Setup Guide (this document)
- Warranty sheet
- Remote control
- 2 x AAA, 1.5V batteries
- TV stand hardware
 - Stand-to-TV screws (x 3 for 42HFL5784D, 42HFL5784L, 39HFL5784D, 39HFL5784L) (x 4 for 46HFL5784L)
 - Stand -to-Stand neck screw (x 4 for 46HFL5784L)
 - Stand pin (x 2 for 42HFL5784D, 42HFL5784L, 39HFL5784D, 39HFL5784L)
 - Screw for Stand pin (x 4 for 42HFL5784D, 42HFL5784L, 39HFL5784D, 39HFL5784L)
- TV security package
 - Stand-to-TV security hex screws (x 3 for 42HFL5784D, 42HFL5784L, 39HFL5784D, 39HFL5784L) (x 4 for 46HFL5784L)
 - Stand -to-Stand neck security hex screw (x 4 for 46HFL5784L)
 - Security bolt and cap (x 2)
 - Washer (x 2)
 - Security nut (x 2)
 - Security double-sided tape (x 4)

TV Setup

 
Philips Hospitality TVs have a USB cloning capability so you only need to manually setup one TV - the "master TV". Then the complete setup configuration can be copied from the master TV to a USB storage device which can then be used to load the same setup configuration into all other TVs. Step 1 is to setup the master TV as follows:

Accessing the setup menu

To access and adjust the setup functions, YOU MUST USE A SPECIAL SETUP REMOTE CONTROL (not provided with the TV) IN THE RC5 SETUP MODE. All the following instructions assume the use of a setup remote control in the RC5 Setup mode.

Note

- The optional setup remote control is not included in the box. Contact your Philips authorized agent or dealer to purchase the setup remote control. Setup remote control might differ from the illustration.

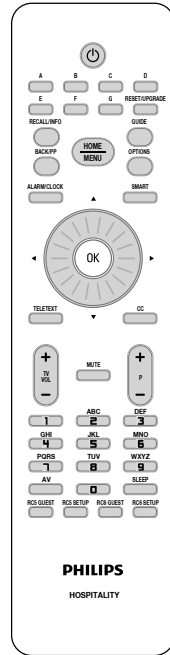


Note

- The items are available on selected models only.
- An optional security tool is required to tighten the security screws and nuts. Please contact your Philips authorized agent or distributor to purchase the tool.

Channel installation

This section describes how to install the TV channels automatically.

 
- 1 Connect the RF signal to the TV.
- 2 Plug the power cord into the power outlet.

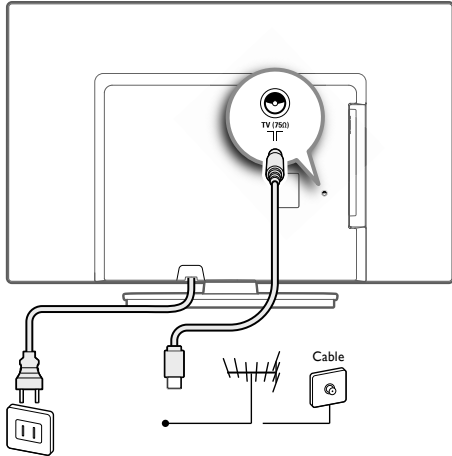

- 3 Turn the TV on.


46HFL5784L, 42HFL5784D, 42HFL5784L

 - Press **POWER** at the rear of the TV or use the **POWER** on the remote control.

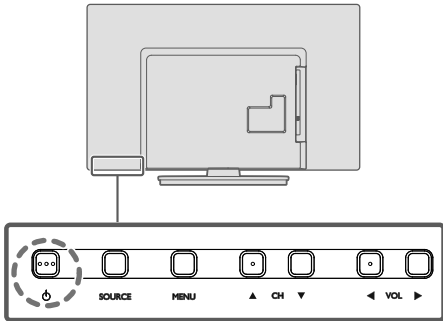


39HFL5784D, 39HFL5784L

 - Press **POWER** at the front of the TV or use the **POWER** on the remote control.

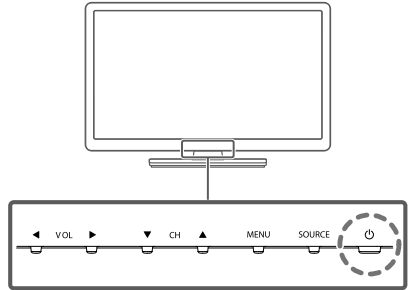

 - 4 Press **RC5 SETUP** to put the remote control into setup mode, then press the **HOME/MENU** button to display the setup menu. (Hereafter; **HOME/MENU** will be simply referred to as **MENU**)
- 5 Select **Setup Menu - Channels - Autoprogram**; then select **Cable**. (unless the installation is using only Antenna signals - in which case you would select **Antenna**)

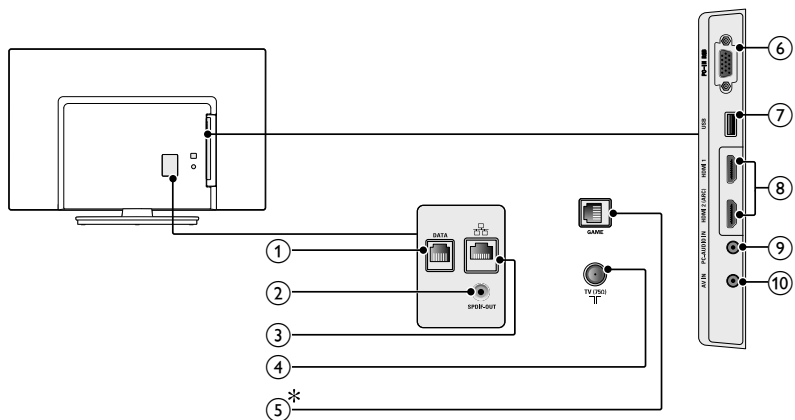

- ① DATA (RJ-12 SPI port)
- ② Digital audio output jack
- ③ IP Control port
- ④ Antenna Input jack
- * ⑤ GAME port
- ⑥ PC Input jack
- ⑦ USB terminal
- ⑧ HDMI Input jack(s)
- ⑨ Audio input jack for PC connection
- ⑩ Audio Video Input jack

* 46HFL5784L, 42HFL5784L, 39HFL5784L only.

Installation

Note

- As part of the initial TV setup, there is PC application to support the installation. The application that can be downloaded at www.philips.com/hospitality or contact Philips agent representative, this tool is subject to availability.

In the 1st time (Virgin) installation, the following steps should be followed:

Language

If Language other than English is required, select the desired language.

- Press **MENU** on the setup remote control to display the setup menu.
- Select **Settings**.
- Select the preferred language.

Note

- The setup menu is available in English only - this setting changes the language of the guest menus.

TV system

If TV is part of a PPV (Pay Per View) system

- Press **MENU** on the setup remote control to display the setup menu.
- Select **System**.
- Select **SPI**.
- Select the correct SPI mode (3v3 , 5V).

If the TV will be used in FTG (Free To Guest) mode
(Skip if the TV is in PPV mode)

- Press **MENU** on the setup remote control to display the setup menu.
- Select **System**.
- Select **Pro:Idiom Control**.
- Select **Mode**.
- Select **FTG**.
- Enter the correct pass-code.

Note

- D-model TVs ship in FTG mode
- L-model TVs ship in PPV mode

You need a pass code to change the TV mode between FTG ↔ PPV. The pass code is unique for each TV and may be manually input using the setup remote control, or it may be input using a USB storage device. The pass codes may be obtained from the call center helpline.

Install TV Channels (Skip if the TV is in PPV mode)

- Press **MENU** on the setup remote control to display the setup menu.
- Select **Channels**.
- Select **Installation mode** and the required installation mode (**Antenna, Cable**).
- If auto installation is required, select **Auto program** and **Start**.
- If manual installation is preferred, select **Manual setup** and the correct parameters.

After the initial setup, the TV can be further configured, to achieve the desired behavior. A summary of available options is described in the following sections.

Channel setting setup

This section describes how to change the channel settings. The TV must be in FTG mode for the channel settings to be available.

- Press **MENU** on the setup remote control to display the setup menu.
- Select **Channels**.
- Manual setup** options: **Channel, Input, Channel Logo, Digital, RF Channel Number, MPEG Program Number, Rings, Label** and **Mute**.
- Select the **Current Ring**.

Configuration menu

This section describes how to change the TV general performance settings. Switch On settings and Control settings.

- Press **MENU** on the setup remote control to display the setup menu.
- Press **▲ ▼** to select the desired mode, then press **OK**.

Hotel Info	Defines property information. (Hotel name and Room ID)
Switch On and OSD	Defines the parameters loaded when the TV is switched On and the OSD behavior. (Welcome Message, Switch On Program and Channel Display)
Volume Settings	Defines the Volume and Volume OSD behavior. (Volume Indicator, Max Volume and Switch On Volume)
Lock Settings	Enable/disable various interfaces and controls. (USB, Keyboard, Remote Control, AV Inputs and Auto Sensing)
Power Settings	Defines the TV standby and Eco power, as well as the Power On mode. (StandBy Mode, Power On and Eco Power)

Configure standard TV settings

This menu will allow the configuration of the standard TV parameters.

Options: **Language, Picture, Sound, Caption settings, Child Lock, EasyLink**

Use of Slideshow application

The slideshow application will enable a basic signage mode.

- 1 Insert the USB stick with the graphic files.
- 2 Press **MENU** on the setup remote control to display the setup menu.
- 3 Select **Applications** or **Slideshow**.
- 4 For testing and fine tuning, select **Run from USB**. The TV will start displaying the files, with the parameters configured in the **Slideshow** menu.
- 5 When all is confirmed, select **Copy to TV**. The graphic files will be copied to the TV memory.
- 6 Select **Configuration, Switch On and OSD, Switch On Program** or **Slideshow** in the main setup menu. Next time the TV will switch On, will automatically start the slideshow application.

Configure the upgrading and cloning settings

Preface:

The Upgrades section of the Hospitality TV setup menu has three possible sources:

1. IP
2. USB
3. RF

Only the USB source is bidirectional, meaning that the TV can either read from the USB, or write to the USB. The IP and RF sources are unidirectional – read only. It cannot write to them.

If the source USB is selected, there are 5 upgrade types available:

1. **All**
2. **Software** (TV firmware(s))
3. **Assets** (Slideshow pictures)
4. **Clone** (TV settings and channel map)
5. **P:I Key** (Change TV between PPV ↔ FTG modes)

Of these, only the **Assets** and **Clone** types are bidirectional. The **All**, **Software**, and **P:I Key** types are read only. So, if either **Assets** or **Clone** is selected, an additional menu item: **Direction** appears. There are two possible directions:

1. **To TV** (reads data from the USB, copies it to the TV)
2. **From TV** (reads data from the TV, copies it to the USB)

How to capture a clonefile from the TV to a USB storage device

1. Insert a USB storage device into the TV USB terminal. (It must have sufficient free space to hold a TV clonefile – about 5 MB.)
2. Press **MENU** on the setup remote control to display the setup menu.
3. Scroll down to and select **Upgrades**.
4. Select **Source** and select **USB** then press **OK**.
5. Select **Type** and select **Clone** then press **OK**.
6. Select **Direction** and select **from TV** then press **OK**.
7. Select **Execute** and select **Start** then press the **OK**.
8. After the successful completion, **Upgrade Completed! Press OK to continue** message appears on screen.

How to install a clonefile from a USB storage device to the TV

1. Insert the USB storage device containing the clonefile into the TV USB terminal.
2. Press **MENU** on the setup remote control to display the setup menu.
3. Scroll down to and select **Upgrades**.
4. Select **Source** and select **USB** then press **OK**.
5. Select **Type** and select **Clone** then press **OK**.
6. Select **Direction** and select **To TV** then press the **OK**.
7. Select **Execute** and select **Start** then press the **OK**.
8. After the successful completion, **Upgrade Completed! Press OK to continue** message appears on screen.
9. After pressing **OK**, the TV will restart and initialize with the new values



Note

- When selecting **RF** and its respective parameter, ensure that this is the channel that will be used to stream the data and it is not used by any video channel.
- RF cloning/upgrading must be used with a Gateway Network Appliance (GNA) device. For more information on the GNA, contact your Philips authorized agent or dealer.

Installation of pay-per-view box

This section describes how to install a external pay-per-view box.

Step 1 : Set the communication mode

You must setup the correct communication protocol before you connect the Pay-per-View box to the TV. This section describes how to select the communication mode.

- 1 Press **MENU** on the setup remote control to display the setup menu.
- 2 Select **SPI** and the appropriate option (3v3 ,5v).

Step 2 : Set the communication mode

Note

- Turn off your TV before you connect the pay-per-view box.

- 1 Insert the RJ12 cable of the Pay-per-View box into the RJ12 connector of the TV.
- 2 Connect the other cables as directed by the Pay-per-View provider;
- 3 After completing the connections of the cable, turn on the TV.
- 4 Press **RECALL** on the setup remote control and check that the status of SPI ONLINE in page 4.

Multi RC

Multi RC enables control of multiple TVs in a room without any interference from each other's remote control.

To enable Multi RC, each remote control is set to one of the four colors - Blue, Green, Yellow or Red. Each TV in the room is separately programmed to a remote control of one of those colors. In this way, each TV responds to only one RC that is set to the same color as the TV itself. This prevents interference from each other's remote control when you watch multiple TVs in a room.

 
- 1 Press **MENU** on the setup remote control to display the setup menu.
- 2 Select **System**.
- 3 Select **MultiRC** and the correct color code.
- 4 Press **▲▼◀▶** to select **[Select a color code]**.
 - The TV is configured to respond to the RC that is set to the same color;
- 5 On the guest RC, press **HOME** (the menu button) and the **color button** (same color as above) simultaneously, for at least 5 seconds.
 - The guest RC is set to the selected color;

Note

- The Guest RC defaults to Blue, and a remote which has been set to any color can operate any TV which has not been configured to a different color yet. Therefore, if 2 TVs are being configured in the same space, then each TV/RC pair **MUST** be set a their own color (one pair cannot be left as default, otherwise both RCs will operate the TV which has not been configured).

Watch your video on a USB storage device

- 1 Connect your USB storage device to the TV.
- 2 Press **MENU** on the remote control to display the guest menu.
- 3 Select **Browse USB**.

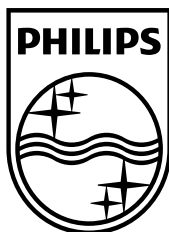

P&F USA, Inc.
PO Box 2248, Alpharetta, GA 30023

P&F Mexicana, S.A. de C.V.
Av. La Palma No. 6, Col. San Fernando La Herradura.
Huixquilucan, Edo. de México. C.P. 52787

Philips and Philips Shield are used under license of
Koninklijke Philips N.V.

Printed in China
A37QZUH / A37HYUH / A37HZUH / A37TYUH / A37TZUH
2EMN0058 ★★★★★

