

Update the TV software

Philips continuously tries to improve its products and we recommend that you update the TV software when updates are available.

What you need

To update with a USB storage device, you need:

- An empty USB flash drive. The USB flash drive must be FAT or DOS-formatted. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip® for Microsoft® Windows® or Stuffit® for Macintosh®).

Step 1: Check the current software version

1. Press [HOME] [4] [5] [6] [9] [8] [7] [BACK].
2. The software version is displayed in the CSM Menu.
3. Write down the software version number (Example: TPS1011A_2.04).
4. To exit, press HOME.

Step 2: Download the latest software

Caution: Do not install a lower version of software than the current version installed on your product. Philips cannot held liable or be made responsible for problems caused by a software downgrade.

1. Insert the USB flash drive into a USB port on your PC.
2. From your PC, navigate to www.philips.com/support.
3. Find your product and locate the software and drivers available for your TV set. The software is available as a zip file.
4. If the software version is higher than the version on your TV, click the software update link.
5. Accept the license agreement and save the ZIP file to the USB flash drive.
6. Using the archive utility, extract *.bin file to the root directory of the USB flash drive.
7. Disconnect the USB flash drive from the PC.

Step 3: Update the TV software

1. Switch on the TV.
2. Connect the USB flash drive (containing the software update) to the USB connector on the TV.
3. A message prompts you to update the software. Select “Confirm” to continue.
4. TV restarts by itself upon successful software upgrade.
5. Remove the USB flash drive.
6. To confirm the latest software is properly installed, check the software version displayed in the CSM Menu. Refer Step 1 on how to check the software version.

Note: To prevent accidental updates to the TV software, delete the *.bin file from the USB flash drive.