

Dear Customer,

Philips continuously tries to improve its products and we recommend that you update the TV software when updates are available. Do not install a lower version of software than the current version installed on your TV. Philips cannot be held liable or be made responsible for problems caused by a software downgrade.

Step 1: Check TV current software version


Press  [4] [5] [6] [9] [8] [7] [BACK]. The current software information is displayed.

Step 2: Download the latest software

To update with a USB storage device, you need:

- An empty USB flash drive. The USB flash drive must be FAT formatted. Do not use a USB hard drive.
- An archive utility that supports the zip file format (for example, WinZip® for Microsoft® Windows® or Stuffit® for Macintosh®).

1. Insert the USB flash drive into a USB port on your computer.
 2. Next to the instruction, you should be able to find the latest SW.
- ➔ The software is available as a zip file.

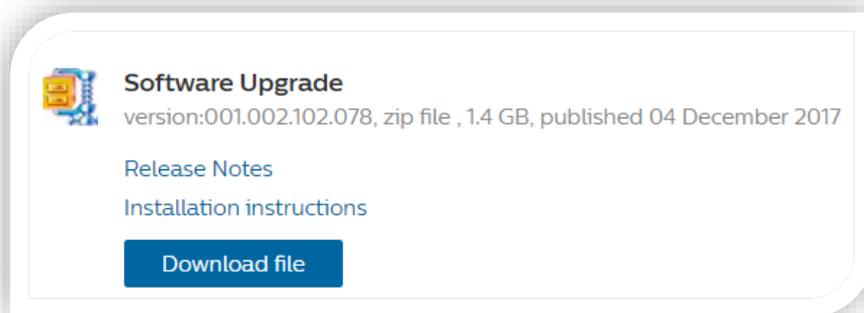

3. If the software version is higher than the version installed on your TV, click download file.
4. Accept the license agreement/Terms and Conditions, select "I agree", then the zip file will be downloaded automatically.
5. Unzip the zip file to any directory using an archive utility
6. Extract all files to the root directory of the USB flash drive.
7. Disconnect your USB flash drive from the computer.

Warning:

- Do not switch off your TV or remove your USB flash drive during the software update.
- If a power failure occurs during the update, do not remove your USB flash drive from your TV. Your TV will continue the update as soon as power is restored.

Step 3: Update the software

1. Connect your USB flash drive (containing the software update) to the USB connector on the TV. Wait 30 seconds or until the USB drive is recognized by the TV.
2. Your TV will start loading the software automatically.
3. When the loading of the software finished, press "Start" to activate the upgrade of the TV.

Notes:

- If the USB flash drive is not detected, disconnect it and reconnect again.