

Philips TV Firmware Upgrade (w/USB Drive)

Applicable Televisions

In the *.zip file you have download, there are two different software files.

PHL_0CFX_047_1 This file is for the model 46PFL3608/F7 A only.

PHL_0CFX_087_1 This file is for the model 46PFL3608/F7 only.

Getting Started

1. Please read the entire instructions once before performing the upgrade.
2. The USB drive you use for the upgrade needs to meet the following criteria:
 - a. USB drive size should be 128 MB or larger.
 - b. USB drive should be clean formatted for FAT32 before you start the process.
 - c. Drives with U3 software are not supported. The U3 uninstall tool can be found here.
<http://u3.sandisk.com/launchpadremoval.htm>
3. Most modern computers (operating systems) usually have Zip File extraction tools built-in but in case yours does not, you can download and install 7-Zip or any other extraction tool to extract the Firmware Upgrade Package. 7-Zip can be found here: <http://7-zip.org/download.html>
4. There is a rare possibility that the firmware upgrade fails; if this happens you need to perform a recovery process which is outlined later in this document.

Firmware Upgrade Process

1. Copy the *.upg file (PHL-OCEX_xxx_x.upg) from the Firmware Upgrade package to the root of the USB drive.
2. While your TV is on, insert the USB drive in the USB port of your TV.
3. Using the Philips TV remote, navigate to "Home/Menu -> Setup -> Software -> Software Update -> USB".
4. If your TV successfully detects the firmware upgrade file on your USB drive, it should list it at this stage.
5. Select the file and press OK on the TV remote.
6. From this point onwards please follow the On-Screen instructions on the TV to successfully complete the firmware upgrade. Do not interrupt the process or turn off your TV while the firmware is upgrading.
7. If the firmware upgrade fails for some reason, please perform the "Recovery Process".

Recovery Process (Perform ONLY if Firmware Upgrade fails, 46PFL3608 only)

1. Clean format your USB drive to FAT32.
2. Copy the "RecoverySoft.upg" file from the Firmware Upgrade Package to root of your USB Drive. DO NOT rename the file.
3. While your TV is on, insert the USB drive in the USB port of your TV.

4. If your TV successfully detects the Recovery Upgrade file on your USB drive, it should list it at this stage or start the recovery process on its own.
5. Select OK on the TV remote, follow the On-screen instructions and finish the recovery process. Do not interrupt the process or turn off your TV while the firmware is upgrading.
6. When the Recovery Process is complete, remove the USB drive and turn off your TV.
7. Unplug the TV from the AC outlet it is plugged in to and wait 10 to 15 seconds.
8. Plug the TV back to the AC outlet, wait 10 to 15 seconds and turn it back on.
9. If all went well, you should be good to enjoy your TV again! If not, please call our Customer Care Center at +1 (866) 309-5962 for further assistance.

Change Log for 46PFL3608/F7

Firmware Version	Change Log
PHL-0CEX_011_2	<ul style="list-style-type: none"> ! VUDU Stability Issues Fixed ! Audio and Video Quality Settings files tweaked ! Minor OSD issues fixed
PHL-0CEX_013_2	<ul style="list-style-type: none"> ! Cable tuning algorithm tweaked ! Minor OSD tweaks ! Rare crash occurred when switching between RF and HDMI inputs, now fixed
PHL-0CEX_013_3	<ul style="list-style-type: none"> ! Some poorly encoded MP3 files would cause MP3 USB playback to crash, now fixed. ! VGA display scaling improvements.
PHL-0CEX_013_4	<ul style="list-style-type: none"> ! Turning on closed captioning would create some video noise, now fixed.
PHL-0CEX_014_2	<ul style="list-style-type: none"> ! White Balance adjustments to certain panels.
PHL-0CEX_016_1	<ul style="list-style-type: none"> ! Touch Sensor Buttons performance tweak. ! Minor tweaks in the way Firmware Upgrade over the internet works. ! Netflix availability based on locality updated. ! Updated Portico Icon.
PHL-0CEX_016_2	<ul style="list-style-type: none"> ! No Video issue on certain rare digital channels resolved.
PHL_0CEX_017_1	<ul style="list-style-type: none"> ! The TV might say “No Signal” when switched between HDMI 2 and 3 fixed. ! Audio and Video Quality Settings files tweaked.
PHL-0CEX_018_1	<ul style="list-style-type: none"> ! Audio and Video Quality Settings files tweaked. ! Minor OSD issues fixed.
PHL-0CEX_030_2	<ul style="list-style-type: none"> ! You Tube App updated to v4. ! Netflix App updated to v3.2 ! Audio and Video Quality Settings files tweaked.* ! Minor OSD issues fixed
PHL-0CEX_078_4	<ul style="list-style-type: none"> o Update Netflix to v4.0 o Delete Film Fresh o Add support for Standby mode for Netflix and VUDU o Replaced TAG Game Icon o Replace Portico Icon o Tweaked Component scaling o Fixed image color change when adjusting Horizontal position. o TV freezes when playing Music file from DMC fixed.
PHL-0CEX_084_3	<ul style="list-style-type: none"> o Updated FTA_Portico_IF Specification o Replaced Portico Icon o Modified the Label List

Note: Not all changes listed above affect every model in the family of TVs based on this platform. Certain Audio and Video performance changes only affect TVs with certain components which the firmware auto-detects on your TV and applies them appropriately.

Firmware Version	Firmware Fix
PHL-0CEX_087_1	<ul style="list-style-type: none"><li data-bbox="565 268 1138 306">○ Instability issues when playing YouTube.<li data-bbox="565 306 935 342">○ Netflix failure to boot up.

SOFTWARE HISTORY for 46PFL3608/F7 A

Version	Date	SW Fix
PHL_0CFX_042_1	10/30/14	> NetLauncher update > Modified Label List > Icons updated
PHL_0CFX_047_1	02/16/15	> Netflix fix for failure to boot. > Add XUMO banner to NET TV screen.