

Register your product and get support at

www.philips.com/welcome

32PFL5615D

32PFL6615D

40PFL5615D

40PFL6615D

40PFL8605D

46PFL5615D

46PFL6615D

52PFL8605D

EN User Manual

PHILIPS


Contents

1	Get started	3	6	Troubleshooting	53
	TV Tour	3		Contact us	53
	Important	8		General TV issues	53
	Position the TV	10		TV channel issues	53
	Product highlights	12		Picture issues	53
	Access more information	12		Sound issues	54
2	Use your TV	13		HDMI connection issues	54
	Overview	13		USB connection issues	55
	TV controls and indicators	13		Network connection issues	55
	Remote control	13	7	Technical data	56
	Basic TV menus	15		Overview	56
	Watch TV	16		Power and reception	56
	Watch a connected device	19		Display and sound	56
	Use Ambilight	19		Display resolutions	56
	Enjoy Net TV	20		Multimedia	56
3	Use more of your TV	24		Connectivity	57
	Favorite channels	24		Dimensions	57
	Use EPG	24	8	Index	61
	Display Closed caption text	24			
	Use timers, locks and subtitles	25			
	Access multimedia	25			
	Use Scenea	27			
	Universal access	27			
	Access DTVi applications	28			
4	Setup the TV	29			
	Change picture and sound settings	29			
	Change channel settings	30			
	Install channels	31			
	Setup network	31			
	Change other settings	35			
	Update software	36			
	Reinstall the TV	37			
5	Connect the TV	38			
	First connections	38			
	About cables	38			
	TV connectors overview	39			
	Connect devices	41			
	Connect more devices	46			
	Use Philips EasyLink	50			


1 Get started

TV Tour


The remote control

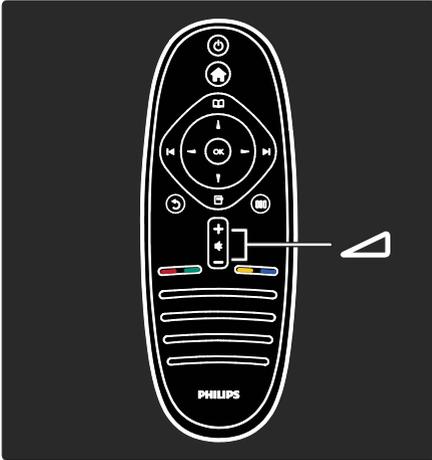

To adjust the volume.

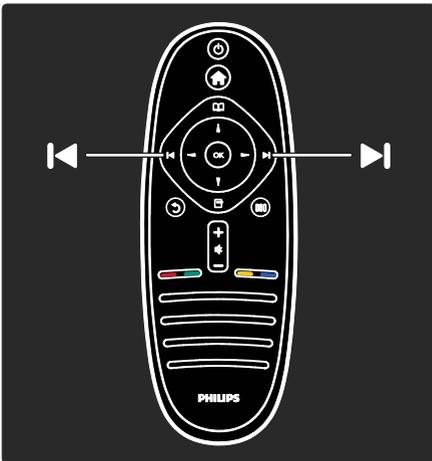


To switch TV channels.

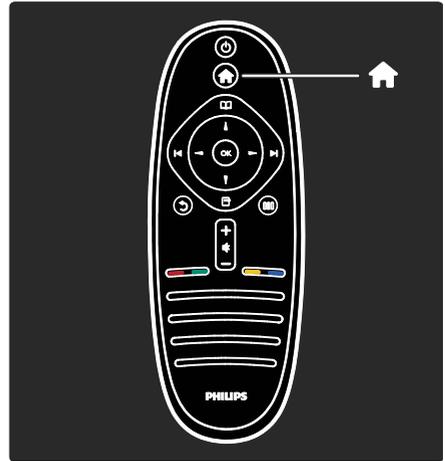

To open or close the **Home menu** .


In the Home menu, you can access connected devices, picture and sound settings, and other useful features.

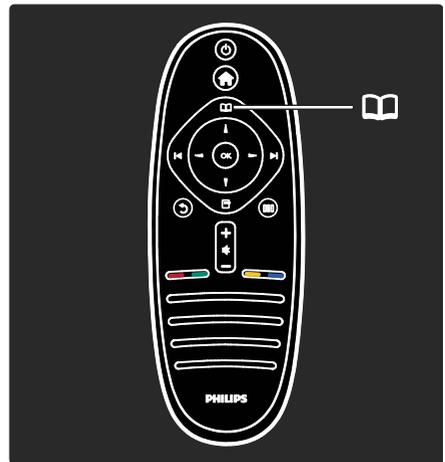

To open or close the **Browse menu** .


In the Browse menu, you can access Teletext, the channel list, or the electronic Program Guide (EPG)*.

*EPG is not available in all countries.

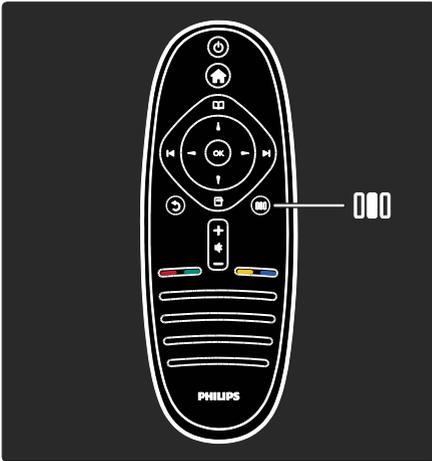


To open or close the **Experience menu** .

In the Experience menu, you can access a range of frequently used settings.

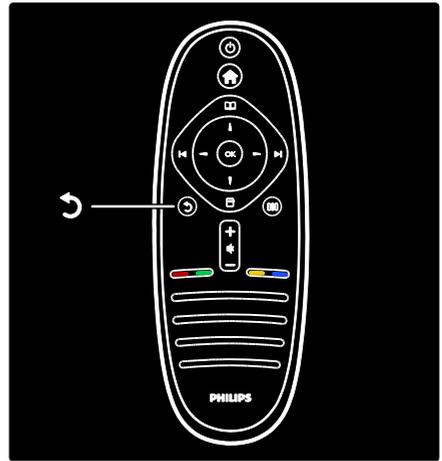


Back .

To return to the previous TV channel or menu. Press and hold to return to watching TV.

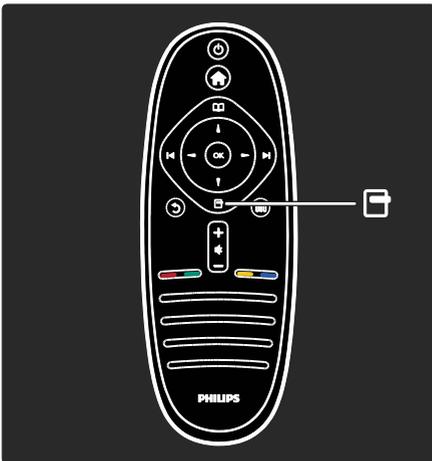

To open or close the **Options menu** .


Options menus offer convenient settings related to what is on-screen.

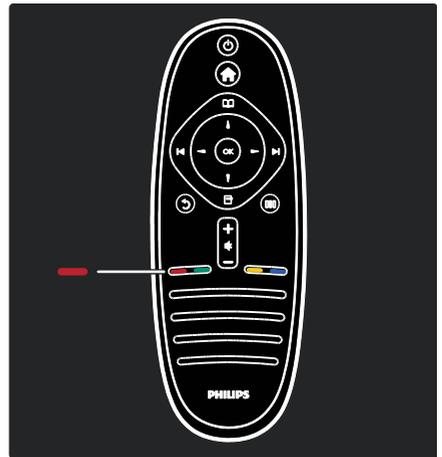

Red


To select the red option, access digital Interactive TV services*, or watch TV demonstration clips.

*Available on certain models only.

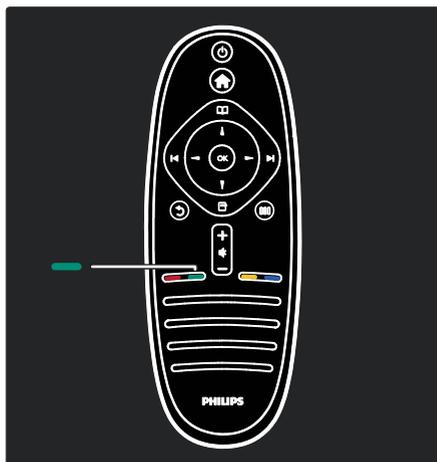


Green

To select the green option or the energy-efficient settings.

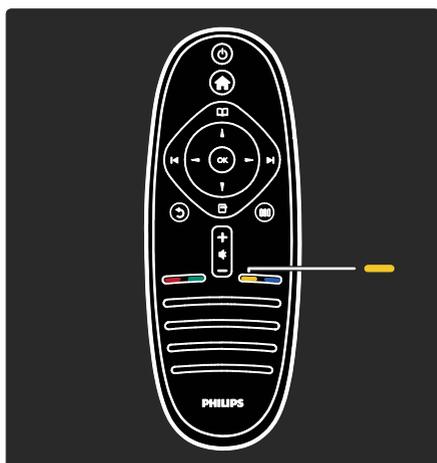

Yellow

To select the yellow option.

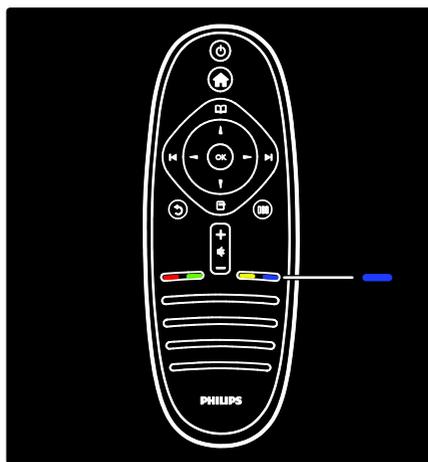

Blue

To select the blue option or to open the Widgets*.


*Available on certain models only.

Read more about the remote control in **Help > Use your TV > Remote control > Overview** (Page 13).

Alternatively, find the answer in **Search for...**

Press **▲** to select the next TV tour.


The TV menus

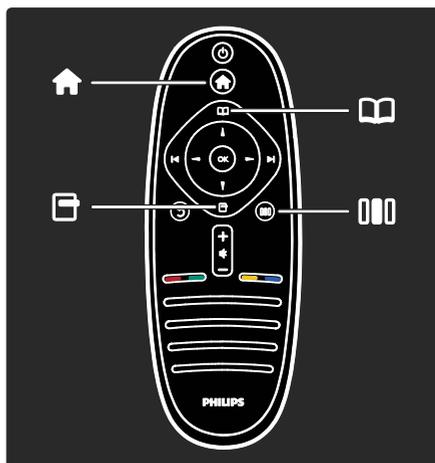


Let's learn more about these frequently used menus:

- the **Home menu** 
- the **Browse menu** 
- the **Options menu** 


- the **Experience menu** 

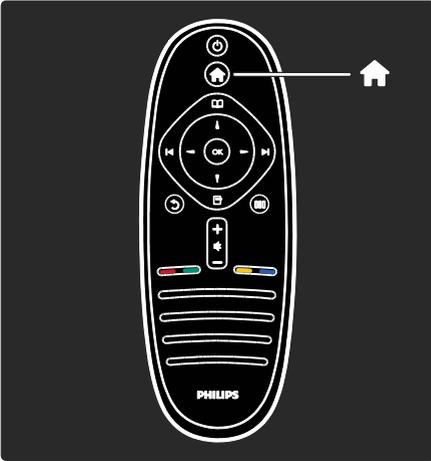

In the **Home menu** , you can select the source to watch, such as a TV channel, or movies from a connected DVD player or USB flash drive. You can also add a new device or access the **[Setup]** menu for more settings.

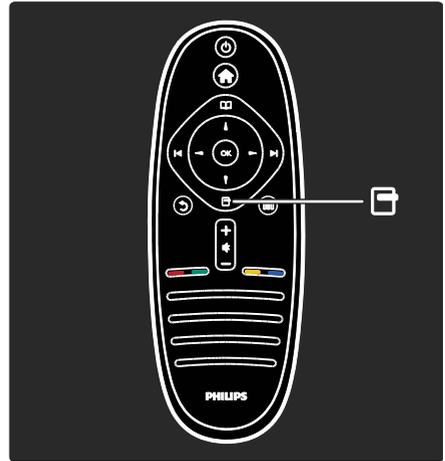


In the **Options menu** , you can select settings related to what is shown on screen. For example, while you watch a channel, you can mark it as a favorite.

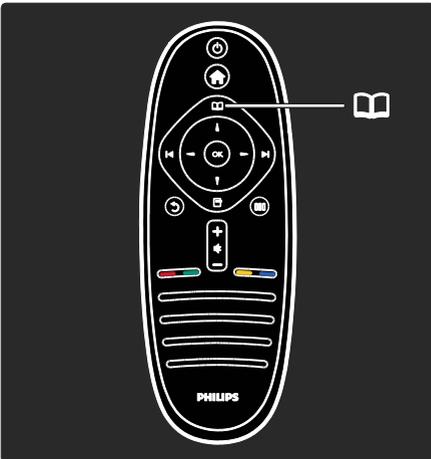

In the **Browse Menu** , you can access Teletext, the channel list, or the electronic Program Guide (EPG)*.

*EPG is not available in all countries.

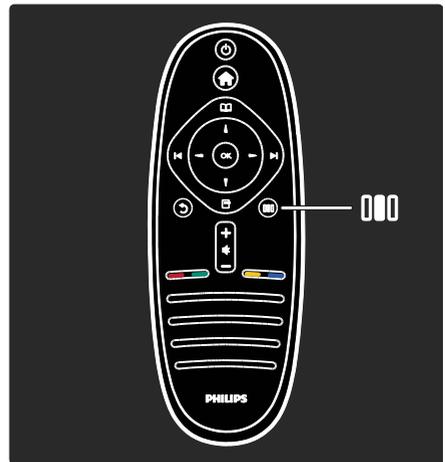

In the **Experience menu** , you can quickly adjust Ambilight*, picture, and sound settings.


You can select the ideal picture setting for movies, games, or music. Or you can change the picture format of the on-screen image. You can even change the surround settings for the TV speakers.

*Available on certain models only.

You can also find the answer in **Search for...**


Press  to select the next TV tour.

Connect devices

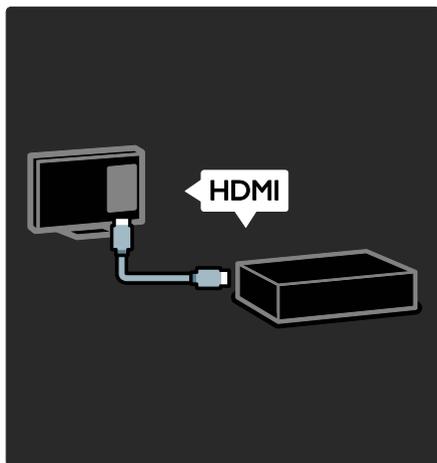

Connect DVD players, Blu-ray Disc players, or game consoles through HDMI.

In **Help > Connect the TV** (Page 38), you can learn to connect the most common devices through illustrations, for example:

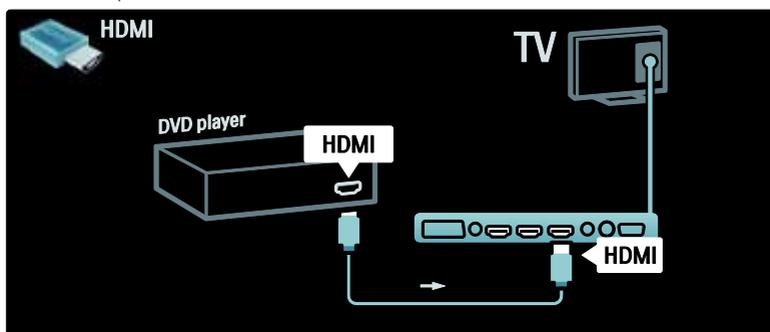

High Definition TV

You can watch High Definition (HD) programs in HD picture quality.

If you watch non-HD programs, the picture quality will be similar to non-HD TVs.

Your TV can display HD video content from:

- a Blu-ray disc player, connected with a HDMI cable, playing a Blu-ray disc
- an upscaling DVD player, connected with a HDMI cable, playing a DVD disc
- an over-the-air HD broadcaster (DVB-T MPEG4)

The HDMI connection offers the best picture and sound quality.

If you connect a device to this TV, access the Home menu to add it.

Press **Home** > **[Add your devices]**, then follow the on-screen instructions. Ensure that you select the correct TV connector which the device is connected to. Read more in **Help > Use your TV > Basic TV Menus > Add your devices** (Page 16).

If you connect an EasyLink (HDMI-CEC) compliant device to the TV, it is automatically added to the Home menu.

Access the Home menu and select the newly added device icon. Read more in **Help > Connect the TV > Use Philips EasyLink** (Page 49).


- a digital HD receiver, connected with an HDMI cable, playing HD content from a cable or satellite operator
- a HD channel on your DVB-C network
- a HD game console (for example, X-Box 360 or PlayStation 3), connected with an HDMI cable, playing a HD game

HD video clip

To experience the stunning sharpness and picture quality of HD TV, you can watch the High Definition video clip from the Home menu. Press **Home** > **[Setup]** > **[Watch demos]** (on the second page of the setup menu).

Contact your dealer for more information. Go to www.philips.com/support to find FAQs that list the HD channels or providers in your country.

Network and Net TV

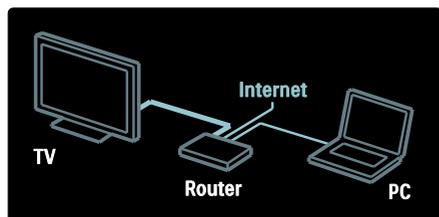

Network*

When you connect your TV to your home network, you can play music, photo and video from a computer or other media server on the same network. Read more in **Help > Setup the TV > Setup Network (Page 31)**.

*Available on certain models only.

Net TV*

When the connected PC network is connected to the Internet, you can connect your TV to **Net TV**. Net TV offers movies, pictures, music, and much more. Read more in **Help > Use your TV > Enjoy Net TV (Page 20)**.

*Available on certain models only.

Important

Congratulations

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your TV at www.philips.com/welcome.

Safety

Read and understand all instructions before you use your TV. If damage is caused by failure to follow instructions, the warranty does not apply.

Risk of electric shock or fire!

Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.

- Never insert objects into the ventilation slots or other openings on the TV.
- When the TV is swivelled ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
- Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.



Risk of short circuit or fire!

- Never expose the remote control or batteries to rain, water or excessive heat.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.

Risk of injury or damage to the TV!

- Two people are required to lift and carry a TV that weighs more than 25kg/55lbs.
- When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.

- When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.
- Disconnect the TV from the power outlet and aerial before lightning storms. During lightning storms, never touch any part of the TV, power cord or aerial cable.

Risk of hearing damage!

Avoid using earphones or headphones at high volumes or for prolonged periods of time.

Low temperatures

If the TV is transported in temperatures below 5°C/41°F, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

Risk of injury to children!

Follow these precautions to prevent the TV from toppling over and causing injury to children:

- Never place the TV on a surface covered by a cloth or other material that can be pulled away.
- Ensure that no part of the TV hangs over the edge of the mounting surface.
- Never place the TV on tall furniture, such as a bookcase, without anchoring both the furniture and TV to the wall or a suitable support.
- Educate children about the dangers of climbing on furniture to reach the TV.

Risk of overheating!

- Never install the TV in a confined space. Always leave a space of at least 4 inches around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.

Risk of injury, fire or power cord damage!


- Never place the TV or any objects on the power cord.
- To easily disconnect the TV power cord from the power outlet, ensure that you have full access to the power cord at all times.
- When you disconnect the power cord, always pull the plug, never the cable.

Screen care


- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.
- Avoid stationary images as much as possible. Stationary images are images that remain on-screen for extended periods of time. Stationary images include on-screen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

End of use

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

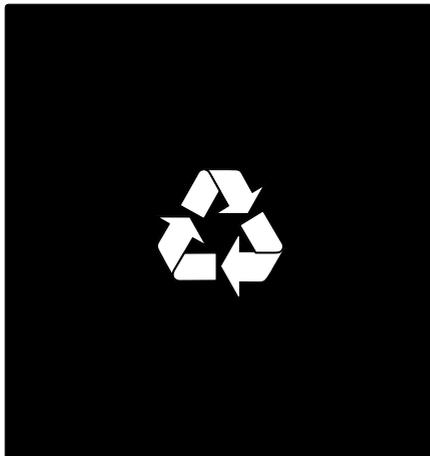


When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

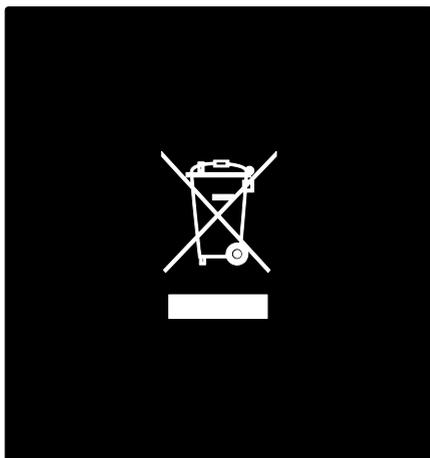

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.


Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

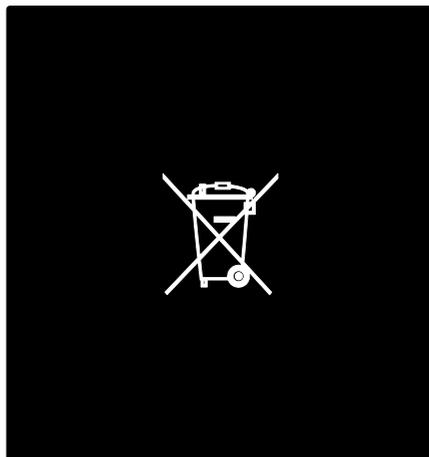

Use a Kensington lock

Your TV is equipped with a Kensington security slot located under the TV or at the back of the TV.

Purchase a Kensington anti-theft lock (not supplied) to secure the TV.

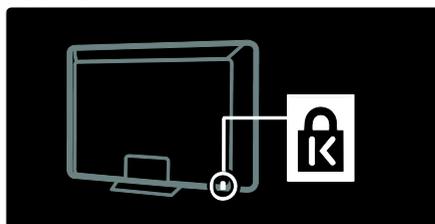

Position the TV

To mount the TV, purchase a Philips TV mount or a compatible TV mount. Check your TV screen size and match it against the list for the type of wall mount to purchase:


32 inches/81cm: 200mm × 200mm, M6
40 inches/102cm: 200mm × 200mm, M6
46 inches/117cm: 300mm × 300mm, M8
52 inches/132cm: 400mm × 400mm, M8

Warning: Follow all instructions provided with the TV mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper TV mounting that results in accident, injury or damage.

To prevent damage to cables and connectors, be sure to leave a clearance of at least 5.5cm/2.2" from the back of the TV.


For 32 inch to 42 inch TVs:

Before you wall mount the TV, determine the correct length of the screw.
 You can determine the length of the screw by adding the thickness of your wall mount to the screw length shown in the graphic.

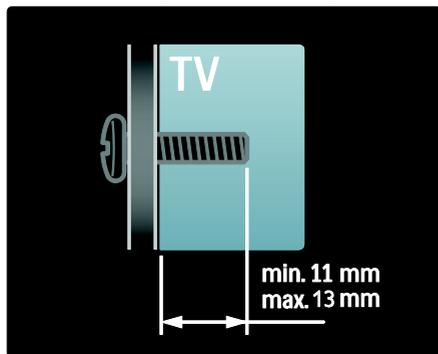


For 46 inch to 52 inch TVs:

Before you wall mount the TV, determine the correct length of the screw.
 You can determine the length of the screw by adding the thickness of your wall mount to the screw length shown in the graphic.

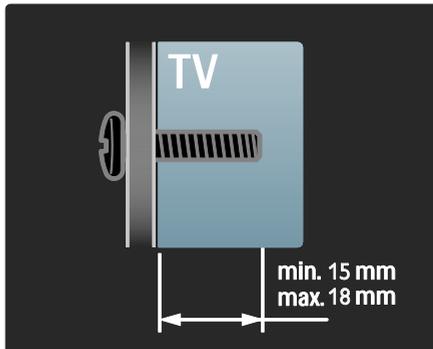

Placement

- Before positioning the TV, read all safety precautions. See **Get Started > Important > Safety** (Page 8).
- Position the TV where light does not shine directly on the screen.
- The ideal distance to watch TV from, is three times its diagonal screen size. For example, if the diagonal screen size of the TV is 116cm/46", the ideal viewing distance is ~3.5m/~138" from the front of the screen.
- While seated, your eyes should be level with the center of the screen.
- For best Ambilight effect, position the TV 25 cm away from the wall.

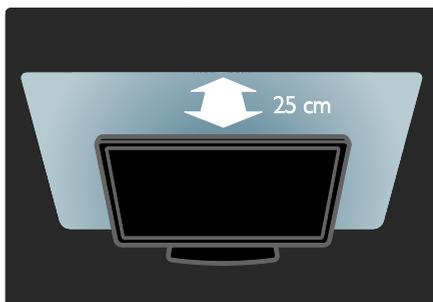

Product highlights

Full HD LCD display

This TV is equipped with a full High-Definition (HD) LCD display, supporting the maximum HD resolution of 1920x1080p.

This display offers a brilliant flicker-free progressive scan picture with optimum brightness and superb colours.

The LED backlight of the display offers exceptional picture contrast with exceptional energy saving.

Ambilight

Ambilight is the lighting technology that emanates from the back of the television onto the wall. This innovative technology automatically adjusts the colour and brightness of the light to match the TV picture.

This creates an unprecedented improvement in viewing experience. The light also reduces eyestrain thus providing a more relaxing viewing experience.

See **Use your TV > Use Ambilight** (Page 19).

Digital TV

In addition to normal analog TV broadcasts, your TV can receive SATVD-T or SBTVD-T broadcasts.

Programme guide (EPG)

Electronic Program Guide (EPG) is an on-screen guide available for digital channels. EPG allows you to:

- View a list of digital programs being broadcast
- View upcoming programs
- Group programs by genre
- Set reminders when programs start
- Set up preferred EPG channels

Notes:

- EPG is not available in all countries.
- For more information on EPG, see **Use more of your TV > Use EPG** (Page 24).

Net TV

Net TV allows you to enjoy movies, music and other infotainment from the Internet directly on your TV screen. See **Use your TV > Enjoy Net TV**.

To enjoy Net TV, you must connect the TV to a network. See **Setup the TV > Set up network** (Page 31).

DTVi

Use DTVi applications to view TV program information, play games, and respond interactively to TV programs.

See **Use more of your TV > Access DTVi applications** (Page 28)

Multimedia

View or play your own multimedia files (such as photos, music and videos) from the USB connection on the side of the TV.

See **Use more of your TV > Access multimedia** (Page 25).

Access more information

On-screen

You are reading the on-screen user manual. This manual contains all of the information you need to install and use this TV. Access the user manual by selecting **[Help]** in the home menu.

Before carrying out instructions, temporarily close the user manual by pressing  on the remote control. Open to the same page in the user manual by selecting **[Help]** in the home menu.

On the Internet

A printable PDF version of this user manual is available on the Internet. It contains the latest information and detailed feature explanations not covered by this on-screen user manual.


Access the PDF as well as other product information, including FAQs and firmware upgrades at www.philips.com/support.

2 Use your TV


Overview

This section gives you an overview of commonly used TV controls and functions.

TV controls and indicators

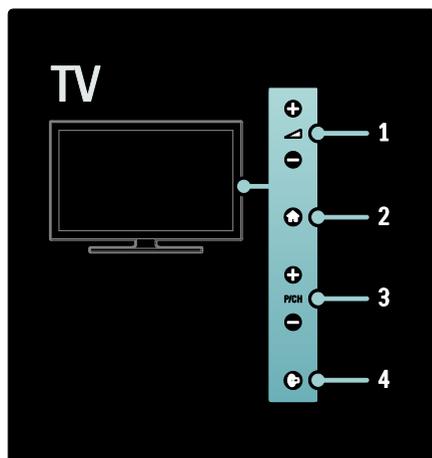


1. **+/-** : Increases or decreases volume. In home menu, these buttons allow you to move horizontally.
2. **Home**: Accesses the home menu. Press again to launch an activity in home menu.
3. **P/CH +/-** : Switches to the next or previous channel. In home menu, these buttons allow you to move vertically.
4. **(Ambilight)** (Available in selected models only): Switches Ambilight on or off. During TV standby, switches Loungelight on or off.

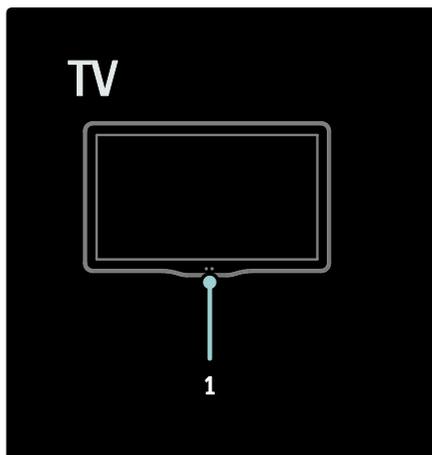

1. Ambient sensor/ remote control sensor.

Remote control


Overview

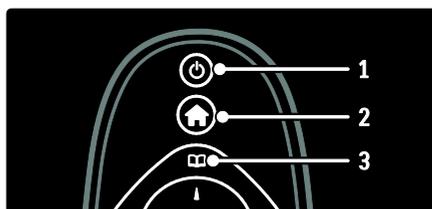


1. **Power** (**Standby**): Switches the TV to standby if it is on. Switches on the TV if it is in standby.
2. **Home** (**Home**): Accesses the home menu.
3. **Browse** (**Browse**): Accesses the browse menu to select TV channel list and the Electronic Program Guide.




4. **Navigation buttons** (**Navigation buttons**): Navigates menus and selects items.
5. **Previous/Next** (**Previous/Next**): Selects the previous or next channel. Skips to the previous or next page of the menu. Also skips to the previous or next track, album or folder.
6. **OK**: Confirms an entry or selection.

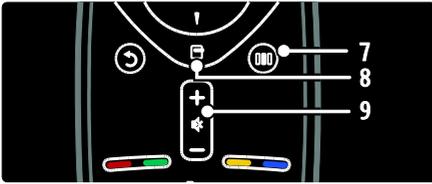

- 7. **⏪ (Experience)**: Accesses the experience menu.
- 8. **⏸ (Options)**: Accesses options for the current activity or selection.
- 9. **+/- (Volume)** and **🔇 (Mute)**: Increases or decreases volume; mutes or restores audio.

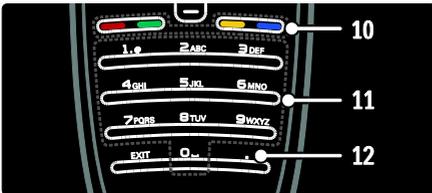

- 10. **Color buttons**: Selects tasks or options.
- 11. **0-9 (Numeric buttons)**: Selects a channel or setting.
- 12. **⬤ (Dot)**: Press the dot (.) for digital channels.

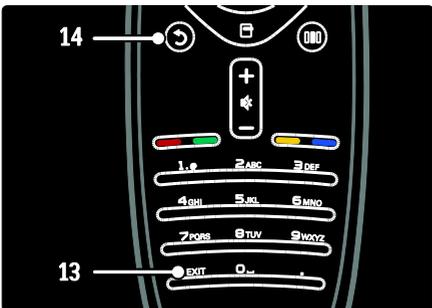


- 13. **EXIT**: Exits a menu..
- 14. **⏪ (Back)**: Returns to a previous menu screen. Press and hold to return to watching TV.


Batteries

Open the battery cover on the back of the remote control to insert the batteries (Type AAA-LR03-1.5V). Make sure the + and - ends of the batteries line up correctly (+ and - are marked inside).

Remove the batteries if you are not using the remote control for a long time. Dispose of batteries according to the end of use directives. Read **Get started > Important > End of use** (Page 10).

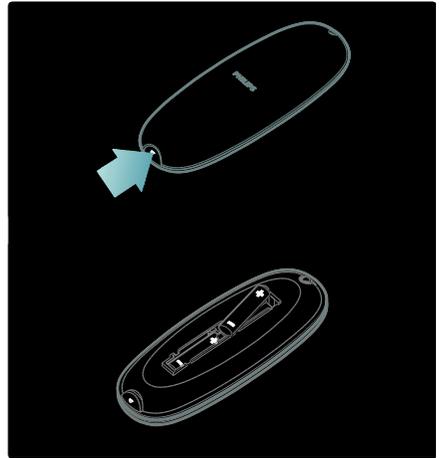

Note: The location of the battery compartment on some remote controls may be as follows:

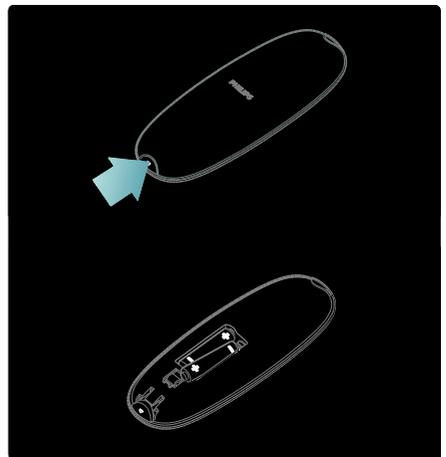

On-screen remote control

Note: Available if the connected device is HDMI-CEC compliant.

An On-Screen Remote Control (OSRC) gives you easy access to commonly used functions. The on-screen buttons available differ depending on your TV setup and features of the connected HDMI-CEC device.

To access the OSRC

1. While watching TV or a connected device, press **[OSRC]**.
2. Select **[Show device keys]**, then press **OK**.
3. Use the **Navigation buttons** and **OK** to select and use an on-screen button.

Basic TV menus

Home

The home menu gives you easy access to connected devices, picture and sound settings, and other useful features.

1. Press **[Home]**.
2. Select an item in the home menu, then press **OK** to access the menu.
3. To exit the home menu, press **[Home]** or **[Back]**.



To start an activity, highlight the desired item with the **Navigation buttons** and press **OK**:

- **[Help]** Accesses the electronic user manual.
- **[Watch TV]** Switches back to the antenna source if another source is selected.
- **[Browse USB]** If a USB storage device is connected, accesses the content browser.
- **[Browse PC]** Accesses the content browser of the connected PC network.
- **[Browse Net TV]** Accesses Net TV.

- **[Scenea]** Switches to the Scenea wallpaper.
- **[Add your devices]** Adds new devices to the home menu.
- **[Setup]** Accesses menus that allow you to change picture, sound and TV settings.

Browse

The browse menu gives you easy access to:

- TV channel list
- Electronic Program Guide

To access the browse menu, while watching TV, press **[OSRC]**.



1. Press the **Navigation buttons** to select an item:

- **[Channel list]:** Accesses the TV channel list.
- **[Programme guide]:** Accesses the Electronic Program Guide.

2. Press **OK** to confirm your choice.

Experience

Press **[OSRC]** to access the experience menu, which provides a range of frequently-used settings.



The experience menu gives you easy access to:

- **[Ambilight]:** Turns Ambilight on or off.
- **[Ambilight dynamic]:** Adjusts the speed of Ambilight response.
- **[Picture format]:** Changes the picture format.

- **[Smart picture]:** Frequently-used picture settings.
- **[Smart sound]:** Frequently-used sound settings.
- **[Speakers]:** Configure TV speakers for Philips EasyLink.
- **[Picture shift]:** Adjusts the position of the picture.

Channel list

The channel list displays the TV channels and possible radio stations installed on your TV.

1. While watching TV, press **□**.
2. Select **[Channel list]**, then press **OK**.
3. Select a channel, then press **OK** to access the channel.
4. Press **↵** to exit the channel list without changing the channel.

Add your devices

After you connect a device to the TV, add this device in the home menu for easy access.

In the home menu, select **[Add your devices]**, then press **OK**. Follow the instructions on-screen to add the device to the home menu.

To remove a device from the home menu, select the item, press **□** and select **[Remove this device]**. Press **OK**.

Setup

[Setup] in the home menu allows you to change most of the TV settings, including:

- Picture or sound settings
- Installation or update of TV channels
- Update of TV software
- Other special features

1. In the home menu, select **[Setup]**, then press **OK**.

2. Select an item with the **Navigation buttons**, then press **OK**:


- **[Quick picture and sound settings]:** Guides you through picture and sound settings.
- **[TV settings]:** Advanced picture and sound settings.

- **[Search for channels]:** Guides you through channel installation.
- **[Channel settings]:** Advanced channel settings.
- **[Connect to network]:** Guides you through the connection to your PC network.
- **[Network settings]:** Advanced network settings.
- **[Update software]:** Guides you through an update of the TV software.
- **[Software settings]:** Advanced TV update settings.
- **[Watch demos]:** Demos of special features available with the TV.

Options


Option menus offer convenient settings related to what is on-screen.

1. Press **□** to see what options are available.
2. To exit, press **□** again.

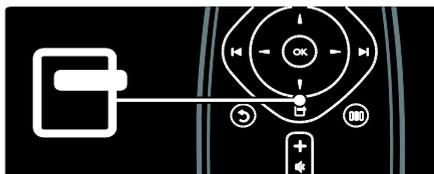

Watch TV

Switch on/off or to standby

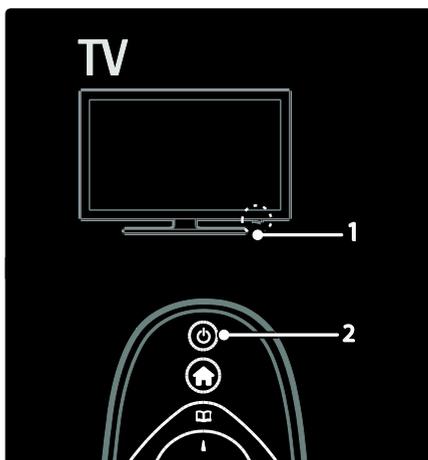

To switch on

- If the front LED indicator is off, press the power switch (1) on the bottom of the TV to the ' | ' position.
- If the front LED indicator is red, press  on the remote control (2). Alternatively, switch on the TV from standby by pressing any key on the side of the TV.

Notes:

- The front LED indicator does not turn on when the TV is switched on.
- The TV requires some time to start up. During this time, the TV will not respond to the remote control or side controls. This is normal behavior.

To switch to standby

Press  on the remote control. The front LED indicator switches to red.

To switch off


Press the power switch on the bottom of the TV to the ' o ' position. The TV switches off.

Though your TV consumes very little power when in standby, energy continues to be consumed. When not in use for an extended period of time, switch off the TV using the power switch on the bottom of the set.

Tip: If you cannot locate your remote control and want to switch on the TV from standby, press **P/CH +/-** on the side of the TV.

Switch channels

- Press  on the remote control or **P/CH +/-** on the side of the TV.

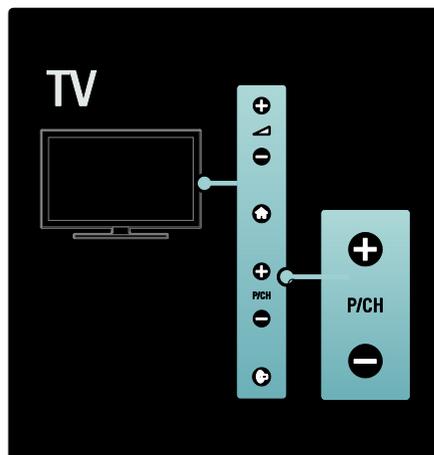

- Press , then select **[Channel list]** to use the channel list.
- Press  to return to the previously-viewed channel.
- Enter a channel number using the **Numeric buttons**.

To view analog or digital channels only

Filter the channel list to access analog or digital channels only.

1. In the channel list, press .
2. Select **[Select list] > [Analogue]** or **[Digital]**, then press **OK**.


Depending on your selection, only digital or analog channels become available.

Adjust volume

To increase or decrease volume

- Press **+/-** on the remote control.

- Press **+**/**-** on the side of the TV.

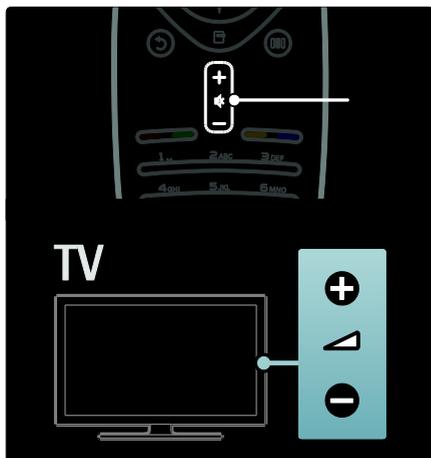

To mute or unmute sound

- Press **MUTE** to mute the sound.
- Press **MUTE** again to restore the sound.

Use the **[Sound]** menu to adjust headphone volume. For more information, see **Setup the TV > Change picture and sound settings > More sound settings** (Page 30).

Use Smart picture settings

Use the **[Smart picture]** experience menu to access frequently-used picture settings.

1. While watching TV, press **HOME**.
2. Select **[Smart picture]**, then select one of the following settings:

- **[Personal]**: Sets the TV to your personal preferences set in the **[Picture]** menus in **[Setup]**.
- **[Vivid]**: Rich and dynamic settings, ideal for daylight use.
- **[Natural]**: A natural picture setting.
- **[Cinema]**: Ideal settings for watching movies.
- **[Game]**: Ideal settings for gaming.
- **[Energy saving]**: The most energy conscious settings.
- **[Standard]**: Adjusts picture settings to suit most environments and types of video. Factory default settings.
- **[Photo]**: Ideal settings for viewing photos.

- **[Custom]**: Allows you to customize and store personal picture settings.

3. Press **OK** to confirm your choice.

4. Press **EXIT** to exit.

Use Smart sound settings

Use the **[Smart sound]** experience menu to access frequently-used sound settings.

1. While watching TV, press **HOME**.

2. Select **[Smart sound]**, then select one of the following settings:

- **[Personal]**: Sets the TV to your personal preferences set in the **[Sound]** menus in **[Setup]**.
- **[Standard]**: Adjusts sound settings to suit most environments and types of audio.
- **[News]**: Applies sound settings ideally suited for spoken audio, such as the news.
- **[Movie]**: Applies sound settings ideally suited for movies.
- **[Game]**: Ideal settings for gaming.
- **[Drama]**: Applies sound settings ideally suited for drama.
- **[Sports]**: Applies sound settings ideally suited for sports.

3. Press **OK** to confirm your choice.

4. Press **EXIT** to exit.

Change picture format

Change the picture format to suit your viewing experience.

1. Press **HOME**.

2. Press **RIGHT** to select **[Picture format]** and press **OK**.

3. Press **DOWN** to select a picture format, then press **OK** to confirm your choice.

Note: Picture formats are also accessible via the **[Setup]** menu.

The following picture formats can be selected:

- **[Auto fill]**: Adjusts the picture to fill the screen (subtitles remain visible). Recommended for minimal screen distortion but not for HD or PC.
- **[Auto zoom]**: Enlarges the picture to fill the screen. Recommended for minimal screen distortion but not for HD or PC.

- **[Super zoom]:** Removes the black bars on the sides of 4:3 broadcasts. Not recommended for HD or PC.
- **[Movie expand 16:9]:** Scales the classic 4:3 format to 16:9. Not recommended for HD or PC.
- **[Wide screen]:** Stretches the classic 4:3 format to 16:9.
- **[Unscaled]:** Provides maximum detail for PC. Only available when **[PC mode]** is enabled in the **[Picture]** menu.
- **[16:9 stretch]:** Stretches to 16:9 format and removes the logos.

Notes:

- Depending on the picture source, some picture formats are not available and will not be seen on-screen.

Watch a connected device

Add new device

Notes:

- Before watching a connected device, you must add it to the home menu.
- HDMI ARC compliant devices connected to the **HDMI ARC** connector on the TV are automatically added to the home menu.

1. Connect and switch on the device.
2. Press **Home**.
3. Select **[Add your devices]**, then press **OK**. Follow the on-screen instructions.

Watch connected device

1. Press **Home**.
2. Select the device from the home menu.
3. Press **OK** to confirm your choice.

Use Ambilight

Switch on Ambilight


Enjoy a more relaxed viewing experience and improved perceived picture quality. Dim the lighting conditions in the room for the best Ambilight effect.

Caution

To avoid bad infrared remote control reception, place your devices out of sight of Ambilight.

1. Press **Experience**.
2. Select **[Ambilight]**, then press **OK**.
3. To switch on or off Ambilight, select **[On]** or **[Off]**.

You can also press **Home** on the TV to switch Ambilight on or off.

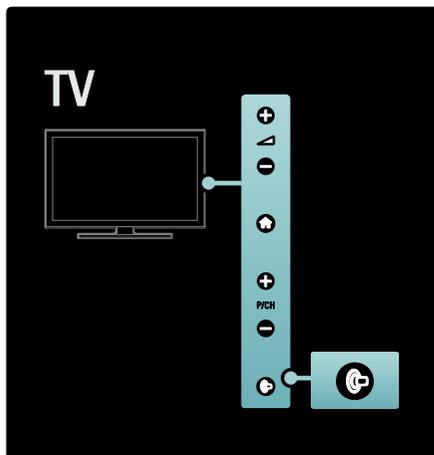

Setup Ambilight

In the Ambilight menu, you can access more Ambilight settings.

While watching TV, press **Home** > **[Setup]** > **[TV settings]** > **[Ambilight]**.

Select a setting to adjust:

- **[Dynamic]:** Adjusts Ambilight between relaxed and dynamic levels. Available only if Ambilight **[Colour]** is set to **[Dynamic]**.
- **[Brightness]:** Adjusts the brightness of Ambilight.
- **[Colour]:** Selects a predefined color.
- **[Custom colour]:** Set your own Ambilight colour. To access this option, set **[Ambilight]** > **[Colour]** > **[Custom]**.
- **[Separation]:** Adjusts the difference in color levels between each side of the TV. Turn off this feature for a dynamic and uniform Ambilight color.

- **[TV switch off]:** Selects how Ambilight switches off when the TV is switched off.
- **[Lounge light mood]:** Selects a lounge light mode. This setting is applied when lounge light is enabled in standby mode.
- **[Scenea lounge light]:** Switch on or off Scenea lounge light when Scenea is enabled.
- **[Wall colour]:** Selects a color to match the wall color. Ambilight will correct its colours to mix best with the colour of the wall behind the TV.

Set Ambilight response

Before you can adjust the speed of Ambilight response, press **Home** > **[Setup]** > **[TV settings]** > **[Ambilight]** > **[Colour]** > **[Dynamic]**.

Set the speed which Ambilight responds to on-screen images.

1. Press **Experience**.
2. Select **[Ambilight dynamic]**, then press **OK**.
3. Move the slider to set Ambilight responsiveness.
4. Press **Back** to exit the slider.
5. Press **OK** to confirm your choice.

Use lounge light

When the TV is on standby, you can switch on Ambilight and create a lounge light effect in your room.

During TV standby, press **Light** on the side of the TV.

Note: It may take more than 5 seconds for the lounge light to switch on.

To select another lounge light colour, see **Use your TV > Use Ambilight > Setup Ambilight** (Page 19).

Enjoy Net TV

What is Net TV?

Koninklijke Philips Electronics N.V. bears no responsibility for content provided by Net TV service providers.

Net TV offers Internet services and websites tailored for your TV. You can visit popular sites for music, videos, and infotainment, directly on your TV.

New services

New services are added regularly. Access the Net TV pages regularly to discover new services.


Notes:

- Net TV services vary in each country.
- With Net TV, you can link up to the Internet or view any website. However, some websites are not tailored to be viewed on a TV screen and certain plug-ins (for example, to view pages or videos) are not available on your TV.
- The number of services available on Net TV can change. The functionality of services can change as well. These changes are updated automatically. You can view the latest services added or changed in the "New" category.
- Net TV displays one page at a time and in full screen.
- You cannot download and save files or install plug-ins on this TV.

What you need

To enjoy Net TV, connect the TV to a router with a high-speed connection to the Internet. Read more at **Setup the TV > Setup network** (Page 31).

Once connected, press **Home** select **[Browse Net TV]** to start the Net TV on-screen setup. Read more at **Use your TV > Enjoy Net TV > First Use** (Page 21).

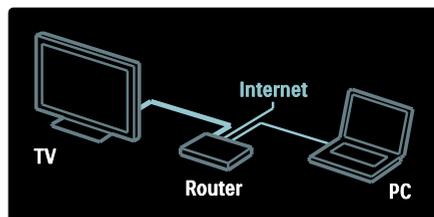

First use

Registration benefits

By registering with Philips, you can enjoy exclusive benefits and receive updates on product information.

Parental control benefits

With Parental control switched on, you can lock and unlock services, and/or categories of services. You can also unlock some services that are not suitable for children. These services are locked from the start.

Parental control specifics

- Only services on the Net TV pages can be locked. Advertisements and Internet websites cannot be locked.
- Services are locked per country. Categories are locked for all countries.

Initial setup

1. Agree to the Terms of Use.
2. Register for Net TV.
3. Switch on parental control.

How to register

To register, you need an email address and a PC connected to the Internet. If you skip the registration during the initial setup, you can register from the Net TV Start page later.

To start the Net TV registration, enter your email address on screen. To open the on-screen keyboard, highlight the text field, then press **OK**. Enter the characters one by one. Select **[Register]** and press **OK**.

A message will appear if a registration email has been sent to your email address. Open the email on your PC and click the link to the registration form. Complete the form and click the button to submit.

On the TV, select **OK** and press **OK** to open the Net TV Start page.

Switch on Parental control

The first time you open the Net TV Start page, you can switch on parental control. If you switch on parental control, you need to enter a personal lock/unlock code.

Enter a 4 digit code as your Net TV lock/unlock code.

Use the **Numeric buttons** on the remote control. Enter the same code again to confirm.

Net TV is ready for use.

Browse Net TV

Access the Net TV home page:

1. Press **Home**.
2. Select **[Browse Net TV]**, then press **OK**. The TV links up to Net TV and opens the start page.

To exit Net TV, press **Home** and select another activity.

The Start page

The Start page shows your favorite services and some recommended services. You can browse Net TV from this page.

To return to the Start page, press **Home** (**Browse**).

Open a Net TV service

Select a Net TV service with the **Navigation buttons**. To open a selected service, press **OK**.

A closing lock animation means that the page you have opened is a secure page.

Navigate a Net TV service

Navigating within a Net TV service can differ from one service to another. You can use the **Navigation buttons** and the **OK** button to browse the service. Some services indicate how to browse their services.

To go back to the previous page, press **Back** (**Back**).

All services

To view the available services for your country, select **[Services]** and press **OK**.

On this page, you can view all services or view them by category, e.g. News or Entertainment. To view the services by category, select a category in the column on the left and press **OK**.

Options

Press **Home** (**Options**) to select the following:

- Lock service
- Mark favorite
- Disable parental control
- Show remote control
- Reload page
- Zoom page
- Security info
- Clear Net TV memory

Lock service

To lock a Net TV service, select its icon and press  (**Options**). Select **[Lock service]** and press **OK**. The service icon is marked with a lock icon.

To open a locked service, you must enter your 4 digit code. Once you have opened a locked service, you can delete the lock.

Mark favourites

To mark a service as a favourite, select the service icon and press  (**Options**). Select **[Mark favourite]** and press **OK**.

You can mark up to 12 services as favourites. All your favourite services are shown in the Net TV Start page.

In Services, favourite services are marked with a star.

Only Net TV services can be marked as favorites. Advertisements and Internet websites cannot be marked.

Unmark favourites

To Unmark a favourite, select the icon of a favourite service and press  (**Options**) and select **[Unmark favourite]**.

Disable parental control

To switch off Parental control, press  (**Options**) and select **[Disable parental control]**. Enter the 4 digit code to disable Parental control.

Show remote control

Keys like Play , Rewind  and Fast Forward  can be called up with **[Show remote control]**.

Press  (**Options**) and select **[Show remote control]**. With these keys on screen, you can operate the connected audio or video player.

Select a key and press **OK** to carry out its function. Press  (**Back**) to hide these on-screen keys.

Reload page

If something went wrong during the loading of a page, you can try and reload it. Press  (**Options**) and select **[Reload page]**.

Zoom page

To zoom in and out on an Internet page, press  (**Options**) and select **[Zoom page]**. Use the slider bar to set the enlargement.

To scroll through an Internet page, use the **Navigation buttons** to jump from highlight to highlight.

Security info

To view a page's security information, press  (**Options**) and select **[Security info]**.

Clear Net TV memory

Warning: this option resets Net TV completely.

To clear the Net TV memory completely, including your favorites, the parental control code, passwords, cookies and history, press  (**Options**) and select **[Clear Net TV memory]**.

Net TV services for another country

Services may differ for each country. To switch to the services of another country, select **[Country : ...]** at the bottom right of the page and press **OK**. Select a country and press **OK**.

Koninklijke Philips Electronics N.V. bears no responsibility regarding the content and the quality of the content provided by the content service providers.

Internet websites

With Net TV you can link up to the Internet. You can view any website you like but remember that most Internet websites are not meant to be viewed on a TV screen and certain plug-ins (e.g. to view pages or videos) are not available on your TV.

Open an Internet site

To go to an Internet page, select **[Internet]** and press **OK**. Use the on-screen keyboard to enter the web address you need. Select a character and press **OK** to enter it in the address line at the top of the page.

Once you have entered the address, select **[Go]** and press **OK** to load the Internet website.

Use the **Navigation buttons** to navigate to the available links on an open Internet page, press **OK** to go to the link.

Internet history

Net TV will automatically add every site you visit to the history list. Later, you can select a site icon in the list and press **OK** to open it.

To scroll through the history list, use the **Navigation buttons**.

Clear Net TV history

With a site icon selected in the history list, you can clear the whole list. Press  (**Options**) and select **[Clear history]**.

3 Use more of your TV

Favorite channels

Add or remove channels

1. Press **OK**.
2. Select **[Channel list:]**, then press **OK**.
3. Press **OK**.
4. Select **[Mark as favourite]** or **[Unmark as favourite]**, then press **OK**.

A star appears in the channel grid, indicating that the channel is added to the favorite list. The star disappears if you remove the channel from the favorite list.

Select a favorite list

View only channels in a favorite list, or view all channels if a favorite list is currently selected.

1. In the channel list, press **OK**.
2. Select **[Select list] > [Favourites]** to display channels in a favorite list; or **[All]** to display all channels.
3. Press **OK** to confirm your choice.

Use EPG

Overview

The Electronic Program Guide (EPG) is an on-screen guide available for digital channels. EPG allows you to:

- View a list of digital programs being broadcast
- View upcoming programs
- Group programs by genre
- Set reminders when programs start
- Setup preferred EPG channels

Note: EPG is not available in all countries.

Switch on EPG

1. Press **OK**.
2. Select **[Programme guide]**, then press **OK**.

EPG options

Use the EPG options menu to set or clear reminders, change day and access other useful EPG options. Depending on the broadcast service, these options are available only for seven or eight days.

1. When in EPG, press **OK**.
2. Press the **Navigation buttons** and **OK** to select and adjust one of the following settings:

- **[Set reminder]:** Sets program reminders.
- **[Clear reminder]:** Clears program reminders.
- **[Change day]:** Sets the EPG day. Select **[Today]**, **[Next day]** or **[Previous day]**.
- **[More info]:** Views program information.
- **[Search by genre]:** Searches TV programs by genre.
- **[Scheduled reminders]:** Lists programs reminders.
- **[Update Programme guide]:** Updates the latest program information.

Display Closed caption text

Display closed caption text

The caption service displays transmitted CC text. The text can be displayed at all times* or only when the TV is muted.

- If you activate DTVi, the CC text is hidden.

Note:

Not all TV programs and commercials include closed caption information. Refer to the TV program listings in your area for information on TV channels and closed caption text. The captioned programs are usually noted in the TV listings with service marks, such as 'CC'.

1. When watching TV, press **OK**.
2. Press **▲▼** to select **[Closed captions]**.
3. Press **▲▼◀▶** to select an option, and then press **OK**.

4. Press .
5. Press  to select **[Caption service]**.
6. Press  to select the correct type of closed caption, and then press **OK**.

Use timers, locks and subtitles

Sleeptimer

Sleeptimer switches the TV to standby after a pre-defined period of time. You can always switch off your TV earlier or reset the sleeptimer during the countdown.

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[Preferences]** > **[Sleeptimer]**.
3. Press the **Navigation buttons** to set the sleeptimer. The sleeptimer can be set up to 180 minutes, in steps of five minutes. The sleeptimer is switched off if it is set to zero minutes.
4. Press **OK** to activate the sleeptimer. The TV switches to standby after the set period of time.

Child lock

To prevent children from watching TV, you can lock the TV or block age rated programmes.

Set or change the child lock code

1. Press .
2. Select **[Setup]** > **[Channel settings]** > **[Child lock]**.
3. Select **[Set code]** or **[Change code]**.
4. Enter the code with the **Numeric buttons**.

Tip: If you forget your code, enter '8888' to override any existing codes.

Age rating

Some digital broadcasters rate their programs according to age. You can set your TV to display only programs with age ratings higher than your child's age.

1. Press .
2. Select **[Setup]** > **[Channel settings]** > **[Child lock]** > **[Age ratings lock]**.

3. Enter the child lock code with the **Numeric buttons**.

4. Select an age rating, then press **OK**. All programs beyond the selected age rating are blocked.

For information on child lock codes, see **Use more of your TV > Use timers and locks > Child lock** (Page 25).

Access multimedia

Browse USB

You can view photos or play music and videos on TV from a USB storage device.

Caution: Philips is not responsible if the USB storage device is not supported nor is it responsible for damage or loss of data from the device.

You can access the USB content browser using one of the following methods:

- When watching TV, connect the USB device to the USB port on the side of your TV.
- Press . Select **[Browse USB]**, then press **OK**.

View slideshow

Press the **Navigation buttons** to select a picture, then press **OK**.

- To pause or stop playback, press **OK** again.
- To jump to the previous or next file, press  or .
- Press  to exit content browser.

Press  to access or exit the following settings:

- **[Show info]:** Displays the file information.
- **[Stop]:** Stops slideshow.
- **[Rotate]:** Rotates the file.
- **[Repeat]:** Repeats the slideshow.
- **[Play once]:** Plays the file once.
- **[Shuffle off] / [Shuffle on]:** Enables or disables random display of pictures in the slideshow.
- **[Slideshow speed]:** Sets the display time for each picture in the slideshow.

- **[Slideshow transition]:** Sets the transition from one picture to the next.
- **[Set as Scenea]:** Sets the selected picture as wallpaper on TV.

Listen to music

Press the **Navigation buttons** to select a music track, then press **OK**.

- Press **◀ / ▶** to fast rewind or fast forward a track.
- Press **⏮** to exit content browser.

Press **⏸** to access or exit the following settings:

- **[Stop]:** Stops audio playback.
- **[Repeat]:** Repeats a song or an album.
- **[Play once]** Plays the file once.
- **[Shuffle on] / [Shuffle off]:** Enables or disables random play of songs.

Watch video

Press the **Navigation buttons** to select a video file, then press **OK**.

- Press **◀** or **▶** to rewind or fast forward a file.
- Press **⏮** to exit the content browser.

During video playback, press **⏸** to access the following settings:

- **[Stop]:** Stops playback.
- **[Repeat]:** Repeats a video.
- **[Shuffle on] / [Shuffle off]:** Enables or disables random play of videos.

Browse PC

View photos, play music and watch videos on TV from a PC or another storage device in your home network. To browse your PC network, first set up the network connection, see **Setup the TV > Set up network** (Page 31).

If the network is not installed the first time you access **[Browse PC]**, the network installation starts. Follow the on screen instructions.

To access the PC network

In the home menu, select **[Browse PC]**, then press **OK**.

With the PC and router switched on, the TV displays the multimedia server content from your PC. With the PC content list open on screen, select the file you want to play and press **OK**.

A song, a slideshow of photos or a video starts playing.

View slideshow

Press the **Navigation buttons** to select a picture, then press **OK**.

- To pause or stop playback, press **OK** again.
- To jump to the previous or next file, press **⏮** or **⏭**.
- Press **⏮** to exit content browser.

Press **⏸** to access or exit the following settings:

- **[Show info]:** Displays the file information.
- **[Stop]:** Stops slideshow.
- **[Rotate]:** Rotates the file.
- **[Repeat]:** Repeats the slideshow.
- **[Play once]:** Plays the file once.
- **[Shuffle off] / [Shuffle on]:** Enables or disables random display of pictures in the slideshow.
- **[Slideshow speed]:** Sets the display time for each picture in the slideshow.
- **[Slideshow transition]:** Sets the transition from one picture to the next.
- **[Set as Scenea]:** Sets the selected picture as wallpaper on TV.

Listen to music

Press the **Navigation buttons** to select a music track, then press **OK**.

- Press **◀ / ▶** to fast rewind or fast forward a track.
- Press **⏮** to exit content browser.

Press **⏸** to access or exit the following settings:

- **[Stop]:** Stops audio playback.
- **[Repeat]:** Repeats a song or an album.
- **[Play once]** Plays the file once.
- **[Shuffle on] / [Shuffle off]:** Enables or disables random play of songs.

Watch video

Press the **Navigation buttons** to select a video file, then press **OK**.

- Press **◀** or **▶** to rewind or fast forward a file.
- Press **⏮** to exit the content browser.

During video playback, press **⏸** to access the following settings:

- **[Stop]**: Stops playback.
- **[Repeat]**: Repeats a video.
- **[Shuffle on]** / **[Shuffle off]**: Enables or disables random play of videos.

Use Scenea

Activate Scenea

You can use Scenea to display a picture as wallpaper on your TV. Make sure that the location of your TV is set to **[Home]** mode.

1. Press **⏠**.
2. Select **[Scenea]**, then press **OK**.

The default or pre-loaded picture is displayed.

Note: If the sleeptimer is off, the wallpaper is displayed for 240 minutes. Otherwise, it is displayed for the duration of the sleeptimer. For more information on the sleeptimer, see **Use more of your TV > Use timers and locks > Sleeptimer** (Page 25).

Set a picture as Scenea

Note: The file size of the picture must not be more than 1MB.

1. Connect the USB storage device to the TV.
2. Press **⏠**.
3. Select **[Browse USB]**, then press **OK**.
4. Select a picture, then press **⏸**.
5. Select **[Set as Scenea]**, then press **OK**.
6. Select **[Yes]**, then press **OK**.
7. Press any key to exit Scenea.

Universal access

Enable universal access

Where supported by your digital TV broadcaster, this TV allows special audio and subtitles for the hearing impaired, as well as special audio for the visually impaired.

To enable these features, you must turn on universal access in the **[Preferences]** menu.

1. Press **⏠**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]** > **[Universal access]** > **[On]**, then press **OK**.

Hearing impaired

Some digital TV channels broadcast special audio and subtitles adapted for people who are hearing impaired.

To switch on hearing impaired audio and subtitles (if available)

1. While watching TV, press **⏸**.
2. Press the red button to select **[Hearing impaired]**.
3. Press the green button to switch on hearing impaired audio and subtitles, press the red button to switch it off.
4. Press **⏮** to exit.

Tip: To verify whether a hearing impaired audio language is available, press **⏸** and select **[Audio language]**. Languages with an ear icon indicate hearing impaired support.

Visually impaired

Some digital TV channels broadcast special audio adapted for people who are visually impaired. The normal audio is mixed with extra commentary.

To switch on visually impaired audio (if available)

1. While watching TV, press **⏸**.
2. Press the green button to select **[Visually impaired]**.
3. Use the following buttons to select:
 - **Red - [Off]**: Turn off visually impaired audio.
 - **Yellow - [Headphones]**: Hear visually impaired audio from headphones only.
 - **Green - [Speakers]**: Hear visually impaired audio from speakers only.

- **Blue - [Speakers + headphones]:** Hear visually impaired audio from speakers and headphones only.

4. Press  to exit.

Note: The green and yellow buttons are not applicable if EasyLink Remote Control is enabled. For more information, see **Connect the TV > Use Philips EasyLink > EasyLink features** (Page 50).

Tip: To verify whether visually impaired audio is available, press  and select **[Audio language]**. Languages with an eye icon indicate visually impaired support.

Adjust volume for the visually impaired

1. In the **[Universal access]** menu, press the yellow button to select **[Mixed volume]**.
2. Press the **Navigation buttons** to move the slider up or down, then press **OK**.
3. Press  to exit.

Audio feedback for the visually impaired

This feature enables audio feedback when buttons are pressed on the remote control or TV.

1. In the **[Universal access]** menu, press the blue button to select **[Key beep]**.
2. Press the green button to turn on audio feedback or press the red button to turn it off.
3. Press  to exit.

With this interactivity, you can respond to DTVi applications, for example:

- Vote.
- Request customized information.
- Answer a quiz, contest, or game.

1. Switch to a channel with DTVi. As the DTVi application begins to load, a blinking symbol is displayed. When the load is complete, a DTVi icon is displayed.
 2. Press the button according to the symbol (for example, the red button, or **OK**). The DTVi application launches.
 3. To use the application, follow the on-screen instructions.
 4. To exit, press  or **EXIT**.
- For more information about the application, contact the broadcaster.

Access DTVi applications

Use DTVi

Available on certain models only

Digital TV broadcasters provide DTVi, an interactive TV service. With DTVi, you can:

- View TV program information
- Play games

If your TV is connected to a home network (with Internet connection)*, you can experience true interactivity and respond directly to DTVi**.

*See **Help > Setup the TV > Setup network** (Page 31)

**For the availability of interactive services, contact your broadcasters.

4 Setup the TV

Change picture and sound settings

Settings assistant

Use the settings assistant to guide you through the picture and sound settings.

1. While watching TV, press .
2. Select **[Setup]** > **[Quick picture and sound settings]**, then press **OK**.
3. Select **[Start]**, then press **OK**.

Follow the on-screen instructions to choose your preferred settings.

Smart picture settings

Use the **[Smart picture]** experience menu to access frequently-used picture settings.

1. While watching TV, press .
2. Select **[Smart picture]**, then select one of the following settings:
 - **[Personal]**: Sets the TV to your personal preferences set in the **[Picture]** menus in **[Setup]**.
 - **[Vivid]**: Rich and dynamic settings, ideal for daylight use.
 - **[Natural]**: A natural picture setting.
 - **[Cinema]**: Ideal settings for watching movies.
 - **[Game]**: Ideal settings for gaming.
 - **[Energy saving]**: The most energy conscious settings.
 - **[Standard]**: Adjusts picture settings to suit most environments and types of video. Factory default settings.
 - **[Photo]**: Ideal settings for viewing photos.
 - **[Custom]**: Allows you to customize and store personal picture settings.
3. Press **OK** to confirm your choice.
4. Press  to exit.

More picture settings

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[Picture]**, then press **OK**.
3. Select a setting to adjust:
 - **[Smart picture]**: Accesses pre-defined smart picture settings.
 - **[Reset]**: Resets to factory default settings.
 - **[Contrast]**: Adjusts the intensity of bright areas, keeping dark areas unchanged.
 - **[Brightness]**: Adjusts the intensity and details of dark areas.
 - **[Colour]**: Adjusts color saturation.
 - **[Hue]**: Compensates color variations in NTSC encoded transmissions.
 - **[Sharpness]**: Adjusts sharpness in the image.
 - **[Noise reduction]**: Filters and reduces noise in an image.
 - **[Colour Temperature]**: Adjusts the color balance in an image.
 - **[Colour Temperature]**: Customizes tint setting.
 - **[Pixel Plus HD]/ [Pixel Precise HD]**: Accesses advanced settings, including **[HD Natural Motion]**, **[120 Hz Clear LCD]**, **[Advanced sharpness]**, **[Dynamic contrast]**, **[Dynamic backlight]**, **[MPEG artefact reduction]**, **[Colour enhancement]**, **[Gamma]**.
 - **[PC mode]**: Enables picture settings adjustment when a PC is connected to the TV via HDMI. If enabled, you can select **[Picture format]** > **[Unscaled]** which provides maximum detail for display of PC content.
 - **[Light sensor]**: Adjusts settings dynamically to match lighting conditions.
 - **[Picture format]**: Changes the picture format.
 - **[Screen edges]**: Changes the picture size.
 - **[Picture shift]**: Adjusts the position of the picture. Not applicable if selected picture format is **[Auto zoom]** or **[Wide screen]**.

Smart sound settings

Use the **[Smart sound]** experience menu to access frequently-used sound settings.

1. While watching TV, press **[Smart sound]**.
2. Select **[Smart sound]**, then select one of the following settings:
 - **[Personal]**: Sets the TV to your personal preferences set in the **[Sound]** menus in **[Setup]**.
 - **[Standard]**: Adjusts sound settings to suit most environments and types of audio.
 - **[News]**: Applies sound settings ideally suited for spoken audio, such as the news.
 - **[Movie]**: Applies sound settings ideally suited for movies.
 - **[Game]**: Ideal settings for gaming.
 - **[Drama]**: Applies sound settings ideally suited for drama.
 - **[Sports]**: Applies sound settings ideally suited for sports.
3. Press **OK** to confirm your choice.
4. Press **⏪** to exit.

More sound settings

1. Press **🏠**.
2. Select **[Setup]** > **[TV settings]** > **[Sound]**, then press **OK**.
3. Select a setting to adjust:
 - **[Smart sound]**: Accesses pre-defined smart sound settings.
 - **[Reset]**: Resets to factory default settings.
 - **[Bass]**: Adjusts the bass level.
 - **[Treble]**: Adjusts the treble level.
 - **[Surround]**: Enables spatial sound.
 - **[Headphones volume]**: Adjusts headphone volume.
 - **[Auto volume leveling]**: Automatically reduces sudden volume changes, for example, when switching channels.
 - **[Balance]**: Adjusts the balance of the left and right speakers to best suit your listening position.

Reset to factory settings

Resetting your TV to factory settings restores default picture and sound settings. Channel installation settings remain the same.

1. While watching TV, press **🏠**.
2. Select **[Setup]** > **[TV settings]** > **[Factory settings]**, then press **OK**.

TV settings are reset back to the factory default.

Start a TV demo

Start a demo to find out more about your TV's features.

Note: Demos are not supported on MHEG channels.

1. While watching TV, press **🏠**.
2. Select **[Setup]** > **[Watch demos]**, then press **OK**.
3. Select a demo, then press **OK**.
4. Press **⏪** to exit the demo.

Change channel settings

Rename channels

After installation, you may want to rename channels to suit your preference.

1. While watching TV, press **[Channel list]**.
2. Select **[Channel list]**, then press **OK**.
3. In the channel list, press **[Enter]**.
4. Select **[Rename]**, then press **OK**.
5. In the entry screen that appears, press the **Navigation buttons** or **Numeric buttons** to edit the name, then press **OK**.
6. Once complete, press the **Navigation buttons** to select **[Done]**.
 - To clear the entry, select **[Clear]**.
 - To cancel, select **[Cancel]**.
7. Press **OK** to confirm your choice.
8. Press **⏪** to exit.

Hide or unhide channels

Hide channels

Hide channels from the channel list, to prevent unauthorized access.

1. While watching TV, press **[Channel list]**.
2. Select **[Channel list]**, then press **OK**.

- In the channel list, select the channel to hide, then press **[]**.
- Select **[Hide channel]**, then press **OK**. The channel is hidden.

Unhide channels

- While watching TV, press **[]**.
- Select **[Channel list]**, then press **OK**.
- In the channel list, press **[]**.
- Select **[Show hidden channels]**, then press **OK**. Hidden channels appear in the channel list, but without channel information displayed.
- Select the channel to unhide, then press **[]**.
- Select **[Unhide channel]**, then press **OK**.

Repeat steps 5 and 6 to unhide other channels.

Install channels

Automatic install

When the TV was switched on for the first time, a full installation of channels was performed. You can redo this full installation again to set your language, country and install all available TV channels.

- Press **[Home]**.
- Select **[Setup] > [Search for channels]**, then press **OK**.
- Follow the on-screen instructions to complete the channel installation.
- Once complete, select **[Finish]**, then press **OK**.

Tip: Press **[]** to see the channel list.

Notes

- During installation, leave **[Settings]** unchanged unless your digital provider provides you with the specific values to enter.
- When digital TV channels are found, the list of installed channels may display empty channel numbers. You can rename, reorder or uninstall these channels.

Setup network

Benefits

PC network

If the TV is connected to your PC network, you can play photos, music and movies from a computer or storage device in that network.

Once the network is installed, select **[Browse PC]** in the home menu to view PC content.

Net TV

If the TV is connected to the PC network, which is connected to the internet, you can link up your TV to Net TV. The Net TV start page offers you movies, pictures, music, infotainment, games and many more, all fit for your TV screen.


Once the network is installed, select **[Browse Net TV]** in the home menu to open the Net TV start page.

What you need

To connect the TV to a PC network and internet, you need a router in your PC network. Set the router to DHCP On. Connect the router to the TV with a network (Ethernet) cable.

To enjoy Net TV, connect the TV to a router with a high speed connection to the internet.

You can also connect this TV to a PC network wirelessly via an optional wireless USB adaptor. Check with your local retailer for purchase details.

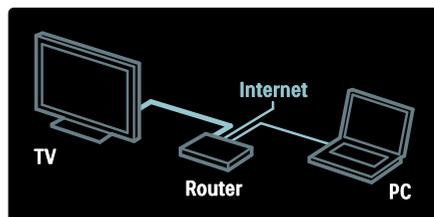

The PC network feature is DLNA 1.5 certified. You can use Microsoft Windows XP or Vista, Intel Mac OSX or Linux on your computer.

To share PC content on your TV, you need recent media server software on your computer. Windows Media Player 11 or similar.

The media server software needs to be set to share files with your TV.

For the list of supported media server software, read **Technical data > Multimedia** (Page 57).

Note: In case the apparatus does not recover in DLNA mode due to external electrical disturbances (e.g. electrostatic discharge), user intervention is required.

Wired installation

Connect the router to the TV using a network cable and switch on the router before you start the network installation.

To start the wired network installation, close the user manual, press **Home** > **[Setup]** > **[Connect to network]** and press **OK**.

Follow the instructions on screen to install the wired network.

The TV constantly searches for a network connection.

If asked for, agree to the End User License Agreement. Find the latest End User License Agreement at www.philips.com.

Wi-Fi Ready

Project your PC: Introduction

This TV is Wi-Fi Ready*. With the Wireless USB adapter PTA01 accessory (sold separately), you can connect the TV to your network wirelessly. With the free Wi-Fi MediaConnect software, you can project your PC screen on the TV. Video, music, or presentations that you play on your PC can be projected.

*Available on certain models only.

What you need

To use Wi-Fi MediaConnect, you need to connect the TV to your home network. You need a wireless router.

Read more about connecting to a network in **Help > Setup the TV > Setup network** (Page 31).

Project your PC: Install Wi-Fi MediaConnect

1. Find the Wi-Fi MediaConnect CD-ROM that comes bundled with the PTA01 adapter.
2. Insert the CD-ROM in your PC.
3. Your PC starts your Internet browser and opens the Wi-Fi MediaConnect download page - www.wifimediaconnect.philips.com. On the website, you can check the necessary PC system requirements.
4. Enter the code printed on the CD-ROM envelope.
5. Click the 'Download now' button to download the free Wi-Fi MediaConnect software.
6. Once downloaded, start the file 'Wi-Fi MediaConnect_setup.exe'.
7. Follow the on-screen instructions.

Project your PC: Name your TV

If you have two or more TVs in your home network, differentiate them with unique names.

1. Press **Home**, then select **[Setup]** > **[Network settings]** > **[TV network name]**.
2. Press **OK** to open the on-screen keyboard.
3. Enter the TV name with the on-screen keyboard, then press **OK**.

Project your PC: Help

To read the Wi-Fi MediaConnect Help, right click the program icon in the notification tray of the PC and select Help.

Specifics

- You can project high definition (HD) or standard definition (SD) video, depending on the processing power of your PC.
- Certain commercial DVD/Blu-ray discs may not be projected to the TV due to output content protection.
- The TV shows PC media files with a small delay.
- Wi-Fi MediaConnect is only available for PC.

Project your PC: PC requirements

Minimum specifications

- Windows XP, Vista, Windows 7 (PC only)
- Intel Pentium Core 2 Duo 1.8GHz
- 512MB RAM
- 200MB free hard disk space
- Wi-Fi 802.11g
- Internet connection

Project your PC: PC requirements

Recommended specifications

- Windows XP, Vista, Windows 7 (PC only)
- Intel Pentium Core 2 Duo 2.1GHz
- 1GB RAM
- 200MB free hard disk space
- Wi-Fi 802.11n
- Internet connection

Network settings

The TV's network settings that are used to connect to your router are standard and set to automatic. This ensures easy connection with any available network.

If you have problems with the network connection, you might want to adjust the settings so that they are appropriate for your home network.

If you are unsure, ask someone with knowledge of network settings to help you.

To set specific network settings, press **Home** > **[Setup]** > **[Network settings]** and press **OK**.

For more information on (Page 33), access the PDF version of this user manual on the internet at www.philips.com/support.

PC media server settings

Enable media sharing

In Microsoft Windows, start TVersion. Click the **Settings** tab and click the **Start Sharing** button.



A pop-up window tells you that the media server service is started. Click **OK**.

Set folders for media sharing

In TVersion, click the **Sharing** tab.



Click the green plus icon and select **Add folder**.



In the **Add** media pop-up window, click **Browse** button.



In the **Browse for Folder** window, select a folder with music, photos or videos which you you want to share and click **OK**.

Enable media sharing

In Mac OS X, start **Twonky Media**. Twonky Media appears.

In the **Basic Setup** box, click **Clients/Security**. **Clients/Security** settings appear.

Click **Enable sharing for new clients automatically**, then click **Save Changes**. Media sharing is enabled.

Add folders for media sharing

In the **Basic Setup** box, click **Sharing**. **Sharing** settings appear.



Click **Browse** to add a folder location. Click **Add new content directory** to add more folders.

When all folders are added, click **Save changes** then click **Rescan content directories**. Media files are ready to be accessed from the TV.

Note: The instructions are applicable to both Microsoft Windows XP and Vista.

Enable media sharing

In Microsoft Windows, start Windows Media Player 11. Windows Media Player appears.



In the Media Sharing window, check the **Share my Media** and click **OK**.



If no network connection is found, and you are unable to check this box, click the **Networking** button to show the **Network and Sharing Center** window,...



Set **Network discovery** to **On**.

Set **File sharing** to **On**.

Go back to the **Media Sharing** window in **Windows Media Player** and check the **Share My Media** box. Click **OK**.

When the TV is connected by the router to the PC and everything is switched on, the **Media Sharing** window will detect the TV as an **Unknown Device**. Select the device and click **Allow**.



To change particular settings on media sharing, open the **Settings** window. When the device icon (the TV) is checked with a green tick, click **OK**.

Set folders for sharing

In Windows Media Player, select **Library** from the menu and select **Add to Library**.



In the **Add to Library** window, select **My folders and those of others that I can access**, and click the **Advanced Options** button.



With **Advanced Options** open, you can add specific folders to the list to share and click **Add**.



In the **Add Folder** window, select a folder with music, photos or videos which you want to share with other devices and click **OK**.

In the **Add To Library** window, the newly added folder is shown. You can add more folders to share. Click the **OK** button to add the files to the library.



You can now enjoy music, photos and videos on your TV.

Change other settings

Energy efficient settings

1. While watching TV, press the green button.
2. Select one of the following settings, then press **OK**:
 - **[Energy saving]**: Applies a combination of picture settings to reduce energy consumption.
 - **[Mute screen]**: Turns off the TV display. 'Muting' the screen saves energy if you just want to listen to audio from the TV.
 - **[Light sensor]**: To save energy, the built-in ambient light sensor lowers the brightness of the TV screen when the surrounding light darkens.

Audio lipsync

Turn on digital audio lipsync to automatically sync the image on your TV to audio from a connected Home Theatre System.

1. While watching TV, press **Home**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]** > **[Audio Out delay]** > **[On]**, then press **OK**.

TV clock

You can display a clock on the TV screen. The clock displays the current time using time data received from your TV service operator.

Display the TV clock

1. When watching TV, press **Home**.
 2. Select **[Status]**, then press **OK**.
- The clock displays on the lower right hand corner of the TV screen.

Change the clock mode

By default, the clock mode is set to **[Automatic]**, syncing the TV clock to Coordinated Universal Time (UTC). If your TV cannot receive UTC transmissions, set the clock mode to **[Manual]**. **[Country dependent]** applies UTC and gives you the option of setting **[Daylight saving]**.

1. While watching TV, press **Home**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]** > **[Clock]** > **[Auto clock mode]**.
3. Select **[Automatic]**, **[Manual]** or **[Country dependent]**, then press **OK**.

Enable or disable daylight saving

If clock mode is set to **[Country dependent]**, enable or disable daylight saving if required for your time zone.

1. In the **[Clock]** menu, select **[Daylight saving]** > **[Daylight saving time]** or **[Standard time]**, then press **OK**. Daylight saving is enabled or disabled for your time zone.

Set the clock manually

If clock mode is set to **[Manual]**, set the date and time manually.

1. In the **[Clock]** menu, select **[Date]** or **[Time]**, then press **OK**.
2. Use the **Navigation buttons** to make your selection, then select **[Done]**.

TV location

A range of TV settings are applied to suit the location of the TV.

Shop or home mode

The flexibility to change settings is limited if the TV location is set to **[Shop]** mode. Set the TV location to **[Home]** mode to access all TV settings.

1. While watching TV, press .
2. Select **[Setup]** > **[TV settings]** > **[Preferences]** > **[Location]** > **[Home]** or **[Shop]**, then press **OK**.
3. Restart the TV.

Stand mount or wall mount

Specific TV settings are applied to suit the mounting location of the TV.

1. In the **[Preferences]** menu, select **[TV placement]** > **[On a TV stand]** or **[Wall mounted]**, then press **OK**.

Update software

TV software

1. Press .
2. Select **[Setup]** > **[Software settings]** > **[Current software info]**, then press **OK**.

The version of the current software is displayed.

To update the software, use one of these options:

- a. update from digital broadcast.
- b. update with USB.
- c. update from the Internet.

For more information, see the following pages.

If available, your TV can receive software updates via digital broadcasts.

If an update is available, a message appears prompting you to update the software. We strongly recommend that you update the software when prompted.

Before performing this procedure be sure to:

- Set aside some time to complete the entire update.
- Have available a USB flash drive with at least 256MB of storage space.
- Have access to a computer with a USB port and internet access.

1. Press .
2. Select **[Setup]** > **[Update software]**, then press **OK**. The update assistant starts. Follow the on-screen instructions to complete the update.

Note: If you already have the upgrade file downloaded onto a USB flash drive, connect it to the TV. Then, select **[Setup]** > **[Software settings]** > **[Local updates]**.

If the TV is connected to a router, which is connected to the Internet, you can update the TV software directly from the Internet. You need a high speed Internet connection.

1. Press  > **[Setup]** > **[Update now]** and press **OK**.

2. Select **[Internet]** and press **OK**. Follow the instructions on screen.

When the update is done, the TV switches off and back on again automatically. Wait for the TV to switch back on; do not use the **Power switch** on the TV.

If the TV is connected to the Internet, the TV displays a message about the availability of new software at start up.

On-screen Help

Before updating the on-screen Help, ensure you have the following:

- An empty USB flash drive. The USB flash drive must be FAT or DOS-formatted.
- Do not use a USB hard drive.
- A PC with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip for Microsoft Windows or Stuffit for Macintosh).

Before updating Help, check the current version installed on your TV. If the version of Help on your TV is lower than the version available at www.philips.com/support, download and install the latest Help file.

1. Press .
2. Select **[Help]**, then press **OK**. On-screen Help is displayed.

3. Select **Technical data > Dimensions**.

Navigate to the last page of this section, and note the version number.

Note: The version number is a 12 digit number, where the last digit indicates the version of Help installed in your TV. For example, if the version in the TV is '3139 137 03583', '3' represents the version of Help currently installed.

1. Insert the empty USB flash drive into a USB connector on your PC.
2. On your PC, create a folder named 'upgrades' in the root directory of the USB flash drive.
3. In your web browser, navigate to www.philips.com/support.
4. At the Philips Support site, find your product and locate the Help file for your TV. The Help file (a *.upg file) is compressed into a *.zip archive.

5. If the Help file at the Philips Support site is a later version than the file in your TV, click it to save the file to the USB flash drive.

6. Using the archive utility, extract the *.zip file to the 'upgrades' folder in the USB flash drive.

7. The *.upg Help file is extracted.

8. Disconnect the USB flash drive from the PC.

- Do not switch off the TV or remove the USB flash drive during the update.
- If a power failure occurs during the update, do not remove the USB flash drive from the TV. The TV will continue the update as soon as power is restored.
- If an error occurs during the update, retry the procedure. If the error reoccurs, contact Philips Consumer Care.

1. Switch on the TV.

2. Connect the USB flash drive containing the *.upg Help file to the USB connector on the TV. Disconnect all other USB devices from the TV.

3. Press .

4. Select **[Setup] > [Software settings] > [Local updates]**.

The updates screen appears.

5. Select the '*.upg' Help file and press **OK**.

A message will display the update status.

Follow the on-screen instructions to complete the update and restart your TV.

Reinstall the TV

Reinstalling your TV resets all picture and sound settings, and reinstalls all TV channels.

1. Press .

2. Select **[Setup] > [TV settings] > [Reinstall TV]**, then press **OK**.

3. Follow the on-screen instructions.


5 Connect the TV

First connections

Power


Be sure that the power plug in the wall socket is accessible at all times. When disconnecting the power cable, always pull the plug, never the cable.

Although this TV has a very low standby power consumption, switch off the TV using the power switch on the bottom of the TV if you do not use the TV for a long time.

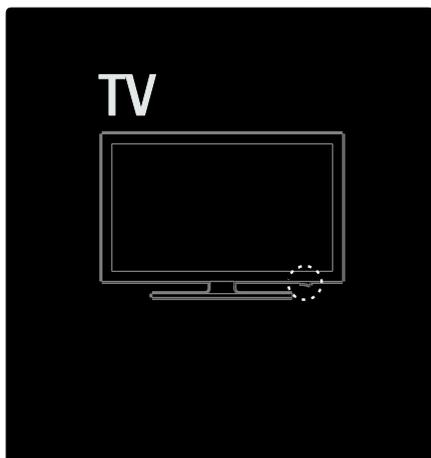

Antenna

Locate the antenna connector at the back of the TV. Insert the antenna cable securely into the antenna connector.

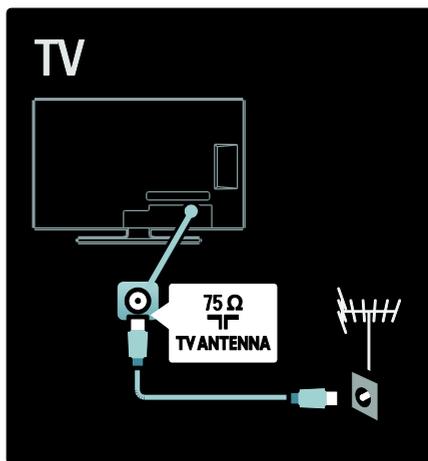

About cables

Overview

Before you connect devices to the TV, verify which connectors are available on the device. Connect the device to the TV with the highest quality connection available. Good quality cables ensure a good transfer of picture and sound.


The connections shown in this user manual are recommendations only. Other solutions are possible.

HDMI

An HDMI connection has the best picture and sound quality.

- One HDMI cable combines video and audio signals. Use HDMI for High-Definition (HD) TV signals, and to enable EasyLink.
- The HDMI ARC connector on the TV features HDMI ARC functionality. This allows output of TV audio to a HDMI ARC compliant device.


- Do not use an HDMI cable longer than 5 meters/16.4 feet.

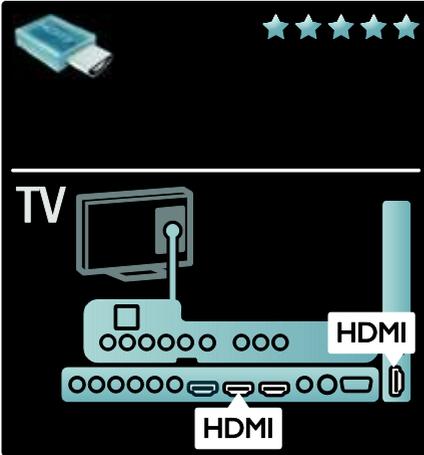

Y Pb Pr


Use the Component Video Y Pb Pr connection together with an Audio Left and Right connection for sound.

Match the Y Pb Pr connector colours with the cable plugs when you connect. Y Pb Pr can handle High Definition (HD) TV signals.

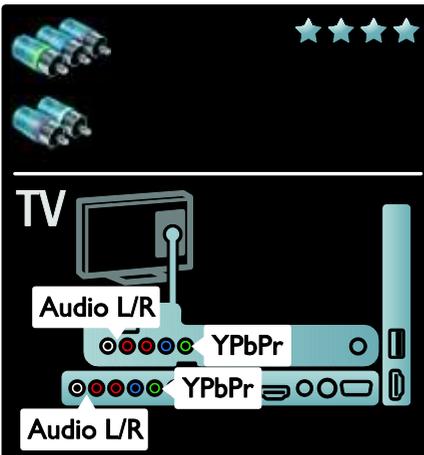


TV connectors overview

Rear connectors

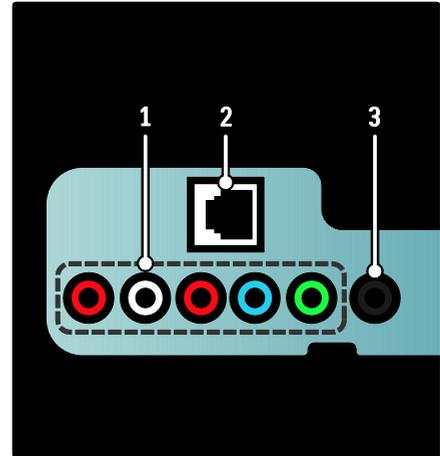


1. **CVI 2:** Analog audio and video input from analog or digital devices such as DVD players or game consoles.
2. **NETWORK:** Data input from a network.
3. **SERV. U:** For use by service personnel only.

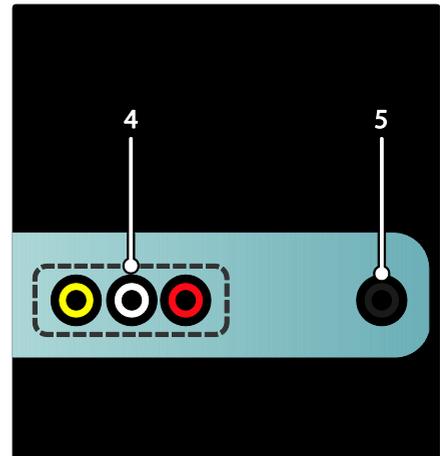


4. **AV IN :** Analog audio and video input from analog or digital devices such as DVD players, satellite receivers and VCRs.
5.  (Available in selected models only): Stereo audio output to headphones or earphones.

Bottom connectors

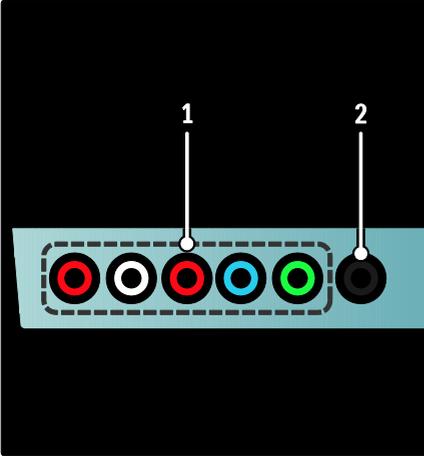


1. **CVI 1** (Audio L/R and YPbPr): Video input from analog devices such as DVD, receiver, game console, etc. This connector is used with audio input.

2. **DIGITAL AUDIO OUT**: Digital audio output to home theaters and other digital audio systems.

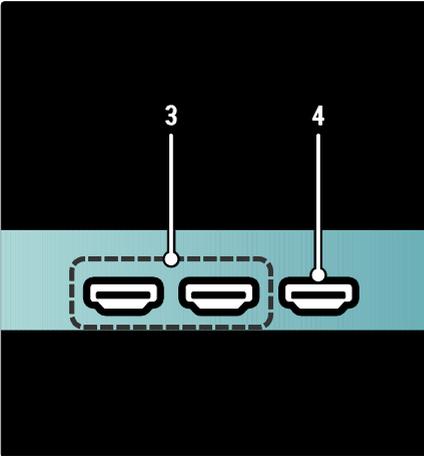

3. **HDMI** (Your TV may have one or two HDMI connectors depending on your model): Digital audio and video input from high-definition digital devices such as Blu-ray players.

4. **HDMI ARC**: In addition to regular HDMI functionality, outputs TV audio to HDMI ARC compliant device, such as a home theatre system.

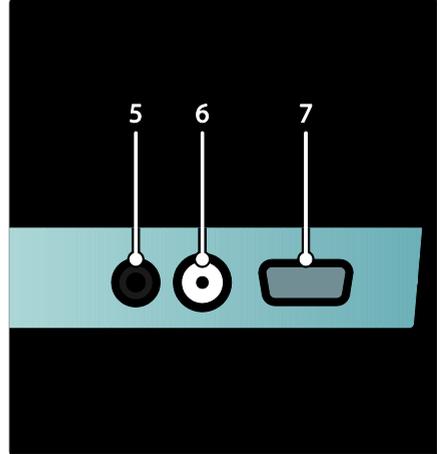


5. **AUDIO IN**: Audio input from devices that require a separate audio connection, such as a computer.

6. **ANTENNA**: Signal input from an antenna, cable or satellite.

7. **VGA**: Video input from a computer.

Side connectors

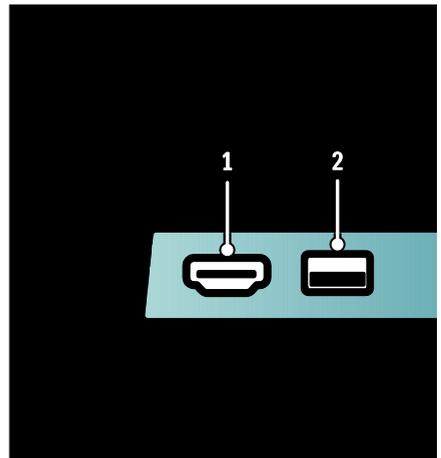


1. **HDMI**: Digital audio and video input from high-definition digital devices such as Blu-ray players.

2. **USB**: Data input from USB storage devices.

Connect devices


Blu-ray disc player

Use an HDMI cable to connect the Blu-ray disc player to an HDMI connector on the bottom of the TV.

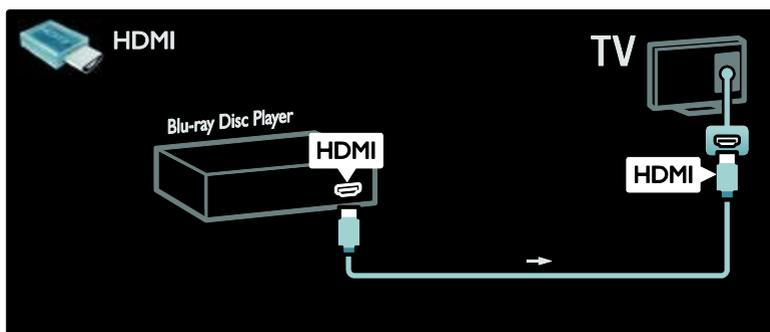


DVD player

Use an HDMI cable to connect the DVD player to an HDMI connector on the bottom of the TV.

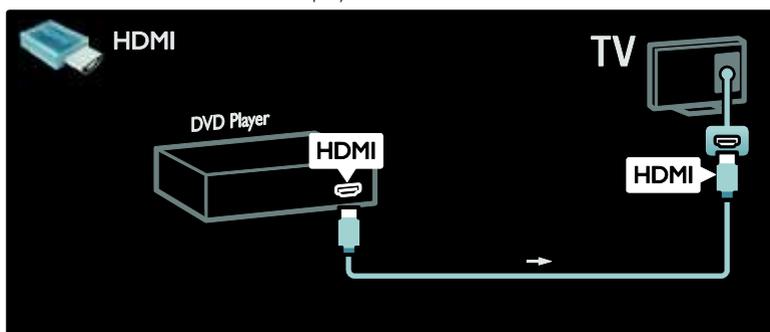


DVD-Recorder

First, use two antenna cables to connect the antenna to the DVD recorder and the TV.

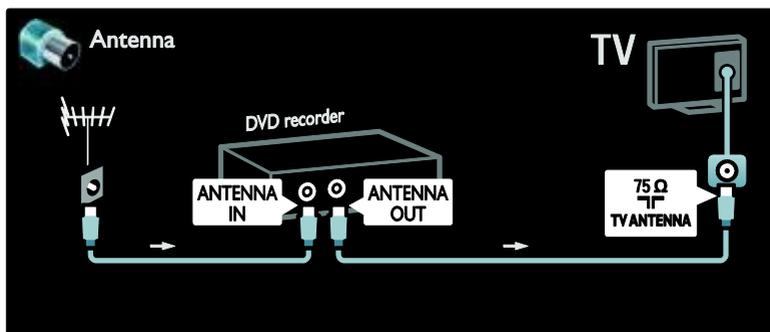


Finally, use YPbPr cable to connect the DVD Recorder to a YPbPr connector on the bottom of the TV.

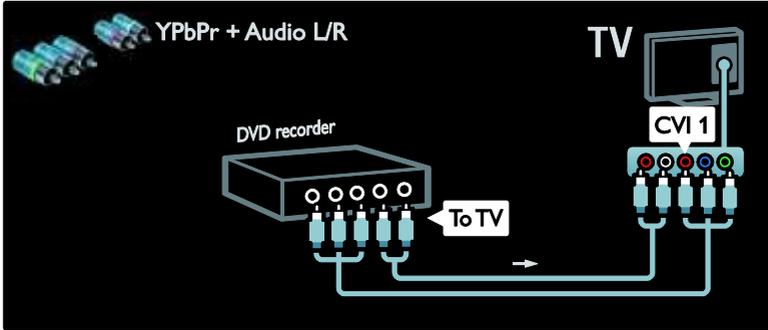


Home Theatre System

First, use an HDMI cable to connect the device to the TV.

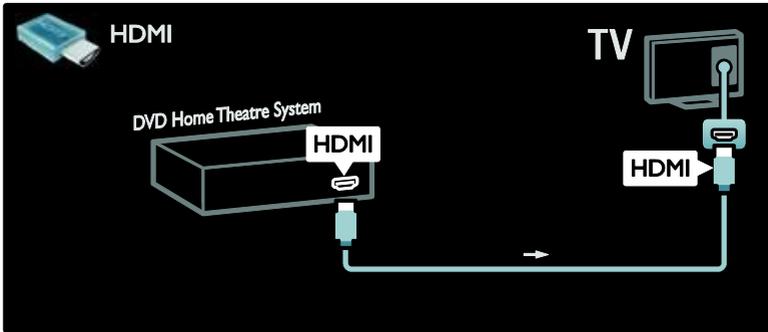

Then, use a digital audio cinch cable to connect the device to the TV.

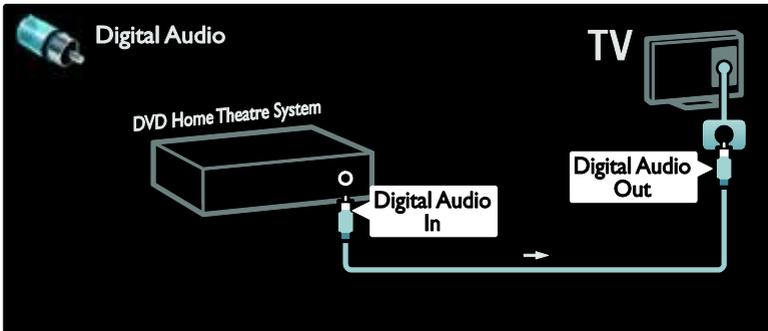

Audio Out L/R

If there is no digital audio output on the home theatre, you can use the TV's analogue Audio Out L/R connection.

Audio and Video synchronisation (sync)


If the sound does not match with the video on screen, you can set a delay on most home theatres to match the sound and video.

Do not connect the audio signal from a DVD player or other device directly to the


home theatre. Always lead the sound through the TV first.

Dig. receiver/satellite

First, use two antenna cables to connect the antenna to the receiver and the TV.

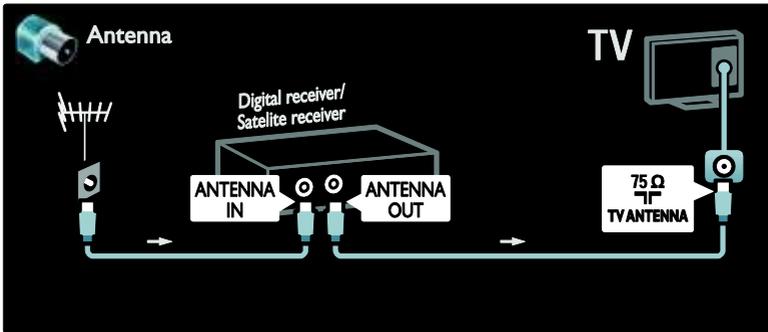


Use a YPbPr cable to connect the receiver to the TV.

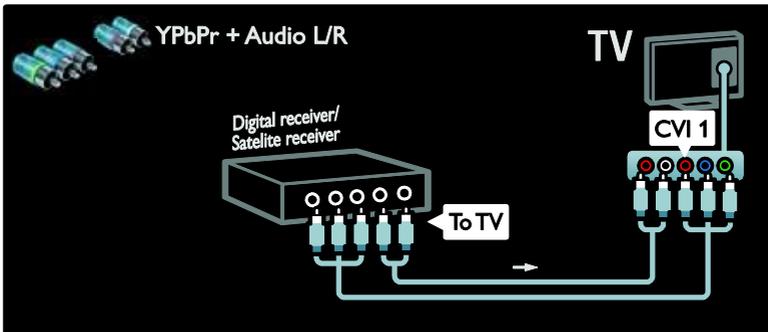


Dig. receiver and DVD-R


First, use three antenna cables to connect the digital receiver and the DVD Recorder to the TV.

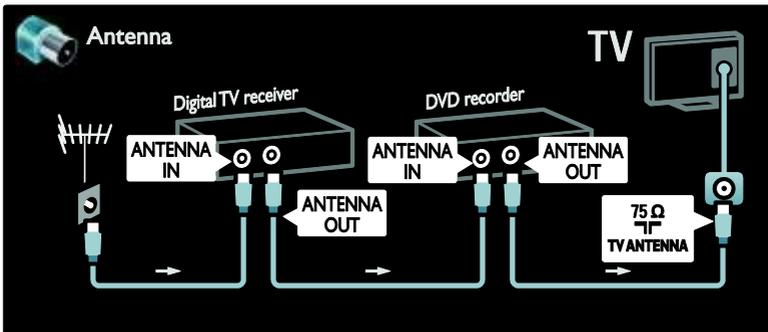

Finally, use a YPbPr cable to connect the receiver to the TV.

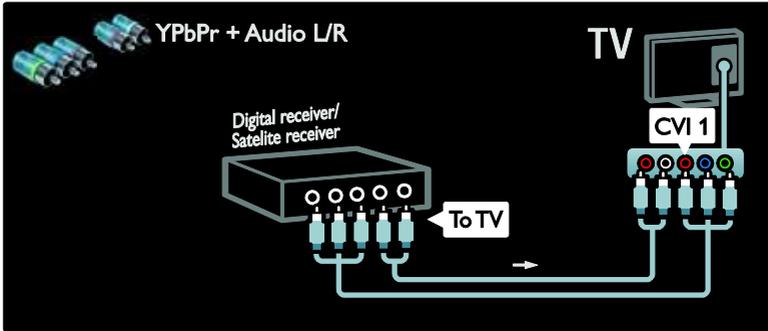


Finally, use two YPbPr cables to connect the two devices and the TV.

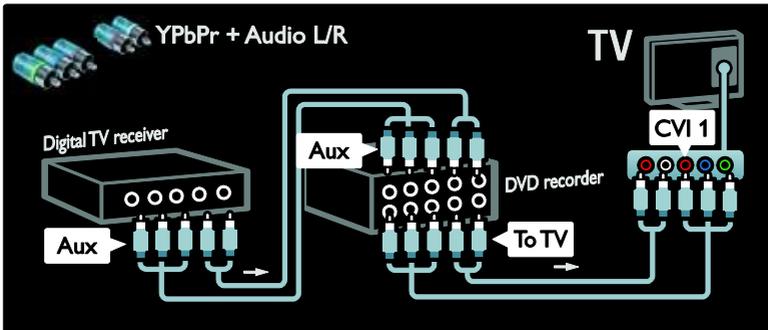


Dig. receiver, DVD-R and HTS


First, use three antenna cables to connect the two devices and the TV.

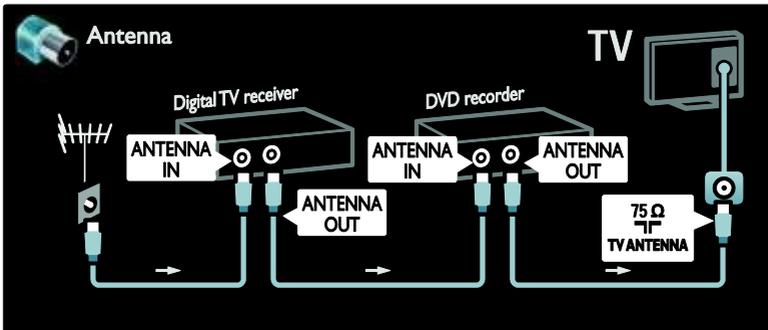


Then use two YPbPr cables to connect the digital receiver to the DVD Recorder and the DVD Recorder to the TV.

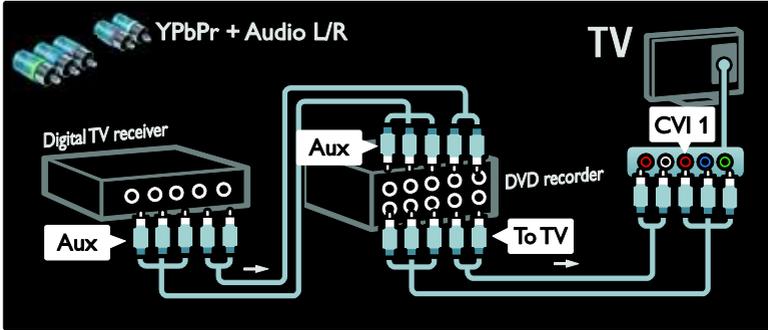

Then use an HDMI cable to connect the Home Theatre System to the TV.

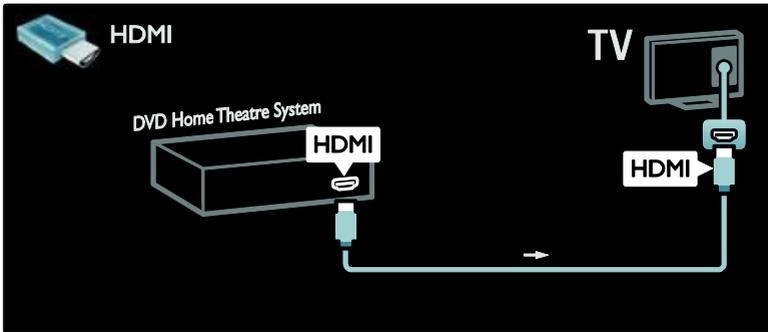


Finally, use a digital audio cinch cable to connect the Home Theatre System to the TV.

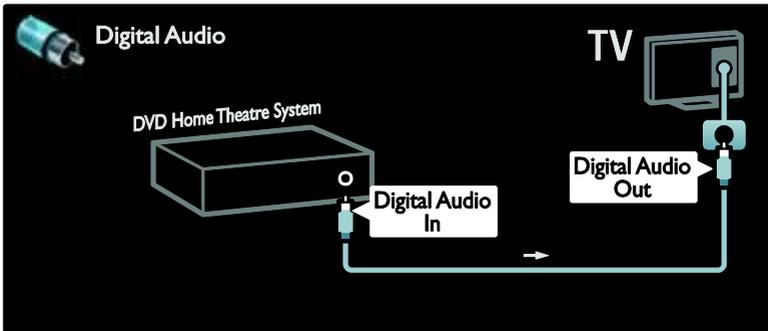


Dig. HD receiver

First, use two antenna cables to connect the Digital HD receiver to the TV.

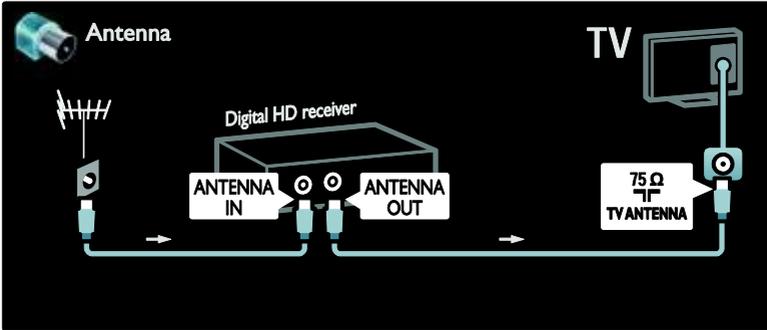

Use an HDMI cable to connect the Digital HD receiver to the TV.

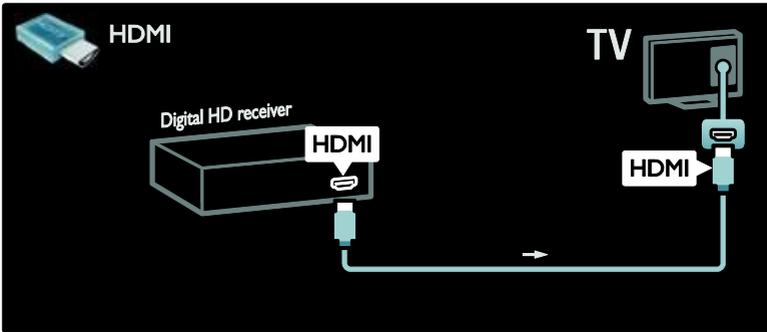

Connect more devices

Game console


The most practical connections for a game console are at the side of the TV. However, more connectors are available at the back of the TV if needed.

The most practical connections for a game console are at the side of the TV.


Enable game mode

To prevent picture delay, set the TV to **[Game]** mode.

1. Press **||||**.
2. Select **[Smart picture] > [Game]**, then press **OK**.
3. Press **↶** to exit.

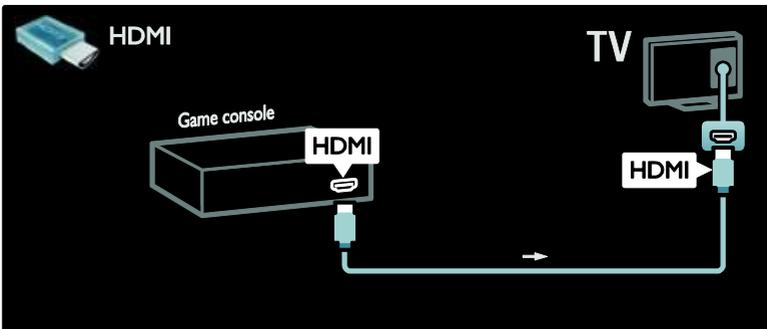


Otherwise, connect the game console to the HDMI or the EXT2 (YPbPr and Audio L/R cables) connectors on the bottom of the TV. (On certain models, EXT2 is labelled EXT3).

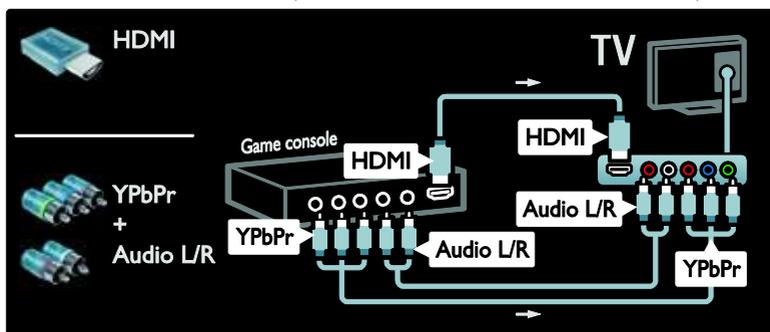


Dig. camera

To view pictures on your digital camera, connect it to the USB connector at the side of the TV. Switch on the digital camera. If the content of your camera does not appear automatically, you may need to enable Picture Transfer Protocol (PTP) on the camera. Refer to the camera's user manual for instructions.

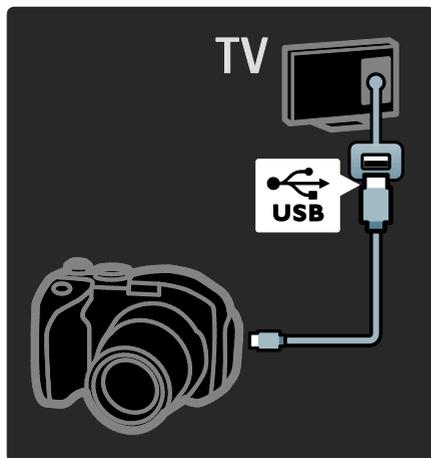


Dig. camcorder

The most practical connection for a camcorder is at the side of the TV.

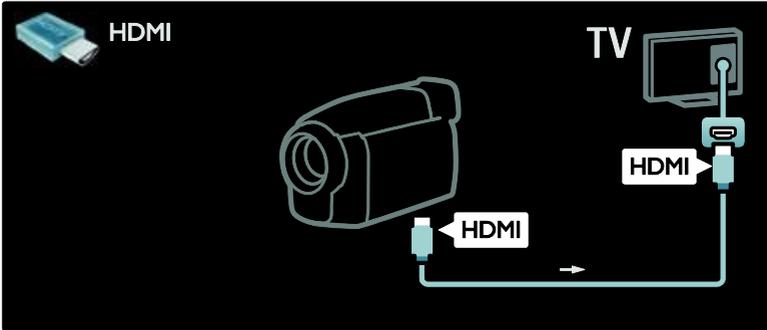


Otherwise, use an HDMI or the component video and audio cable (YPbPr and Audio L/R) to connect the camcorder to the back of the TV.

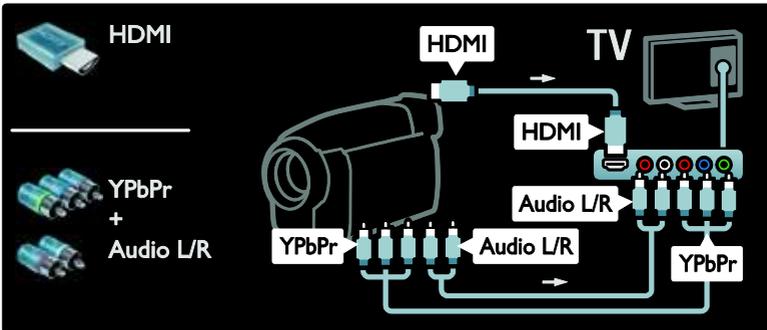


PC

Connect a computer using one of the following cables:


HDMI cable

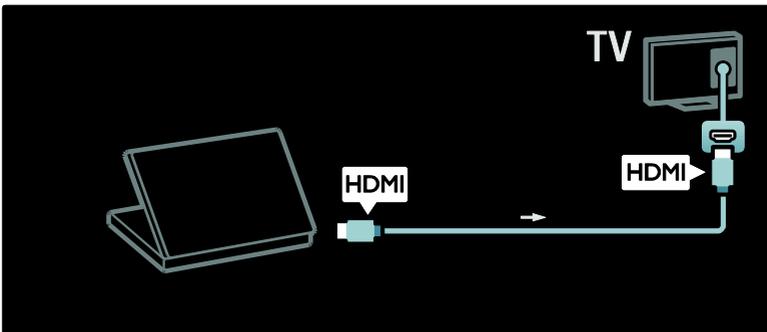


DVI-HDMI cable

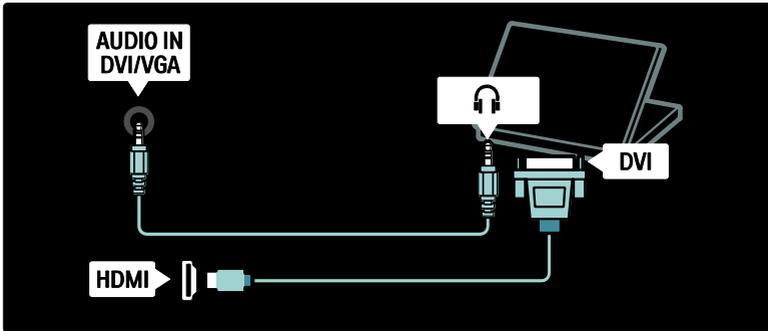

HDMI cable and HDMI-DVI adaptor

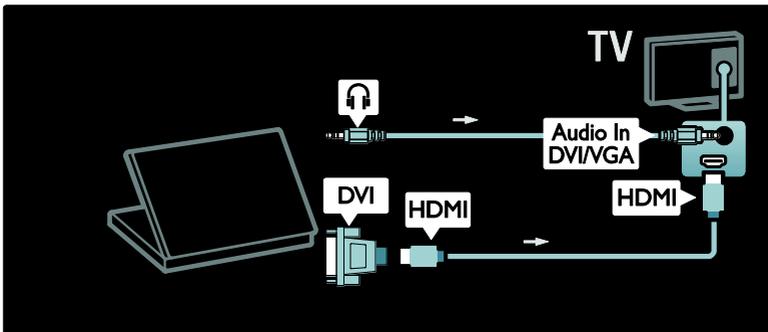

VGA cable

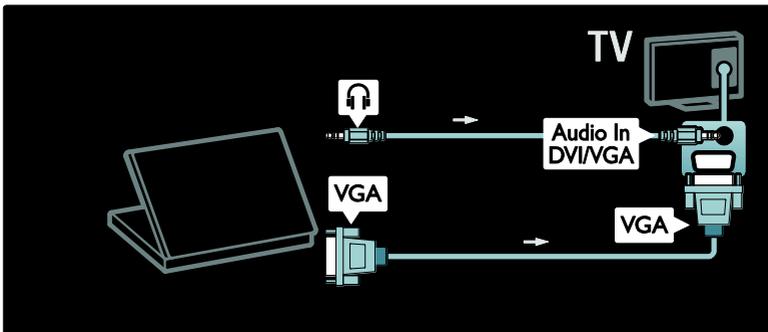

Use Philips EasyLink

Enable or disable EasyLink

Philips EasyLink provides several features that enable you to control devices that are connected via HDMI. Connected devices must support the HDMI-CEC standard, and must be properly configured for EasyLink to work.

Note: HDMI-CEC functionality is known by other names on other brands. Some examples are Anynet (Samsung), Aquos Link (Sharp) or BRAVIA Sync (Sony). Not all brands are fully compatible with Philips EasyLink.

To enable or disable EasyLink

Note: Do not enable Philips EasyLink if you do not intend to use it.

1. Press .
2. Select **[Setup] > [TV settings] > [EasyLink] > [On]** or **[Off]**, then press **OK**.

EasyLink features

With Philips EasyLink enabled, the following features are available:

One-touch play

When you play content from a HDMI-CEC compliant device, the TV switches on from standby, and switches to the correct source.

One-touch standby

When you connect your TV to a HDMI-CEC compliant device, pressing  on the TV remote control switches the TV and all connected HDMI devices to standby mode.

System audio control

When you connect your TV to, for example, a HDMI-CEC compliant Home Theatre System (HTS), your TV speakers automatically mute and audio from the TV plays through the HTS.

For more information about system audio control and other types of TV speaker configurations, see **Connect the TV > Use Philips EasyLink > TV speakers** (Page 51).

EasyLink Remote Control

EasyLink Remote Control allows you to control HDMI-CEC compliant devices using your TV remote control.

To enable EasyLink Remote Control, see **Connect the TV > Use Philips EasyLink > Enable or disable EasyLink Remote Control** (Page 51).

Pixel Plus Link

Connected Philips EasyLink devices may apply their own picture quality processing to a video, before streaming it to the TV. This may interfere with the image processing of the TV. Enable Pixel Plus Link to discard picture quality processing from connected Philips EasyLink devices.

To enable Pixel Plus Link

1. Press .
2. Select **[Setup] > [TV settings] > [EasyLink] > [Pixel Plus link] > [On]**.
3. Press **OK** to activate.

Auto subtitle shift

Auto subtitle shift displays subtitles from Philips EasyLink compliant Home Theatre Systems over the video image on your TV. The video image is thus stretched across the whole of your TV display, without the need to create a separate subtitle bar at the bottom of the screen.

To enable auto subtitle shift

1. Press .
2. Select **[Setup] > [TV settings] > [EasyLink] > [Auto subtitle shift]**.
3. Select **[On]**, then press **OK** to activate.

Audio only mode

Audio only mode enables you to play audio from a connected Philips EasyLink device through the TV speakers while the TV is in standby.

Press  to receive audio from the connected Philips EasyLink device. If available, audio only mode is enabled. Accept the prompt on the TV to enable audio only mode.

- Control the audio playback with the TV remote control.

Enable or disable EasyLink Remote Control

Caution: This is an advanced setting. Verify that all connected HDMI-CEC compliant devices support this setting. Devices that do not support this setting will not respond to commands from the TV remote control.

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[EasyLink]** > **[EasyLink Remote Control]** > **[On]** or **[Off]**.
3. Press **OK** to activate.

Notes:

- If you cannot exit from the connected device's menu, press .
- To switch back to TV control, press  and select **[Watch TV]**.
- To control another device, press  and select the device from the home menu.
- A summary of EasyLink buttons you can use with the TV remote control is available at **Connect the TV > Use Philips EasyLink > Use HDMI ARC** (Page 52)).

EasyLink buttons

Control HDMI-CEC compliant devices with the following buttons on the TV remote control.

- **OK:** Starts, pauses or resumes playback on the connected device. Also activates a selection or accesses the menu of the device.
- **⏮ (Previous) / ⏭ (Next):** Searches backwards and forwards on the connected device.
- **Numeric buttons:** When EasyLink is enabled, selects a title, chapter or track.
- **☰ (Options):** Displays the menu of the connected device. When  is pressed, the TV menu is displayed.
- **⏻ (Standby):** Press to enable one-touch standby. This switches the TV and the connected device to standby.

Other EasyLink buttons are available via On-Screen Remote Control (OSRC).

To access the OSRC

1. While watching a connected device, press .
2. Select **[Show remote control]**, then press **OK**.
3. Use the **Navigation buttons** and **OK** to select and use an on-screen button.
4. Press  to exit.

Configure TV speakers

You usually connect the TV to a HDMI-CEC compliant device such as a HTS using both a HDMI cable for video and a digital audio cable for audio. You can output TV audio through the HDMI cable solely, provided both the TV and device are HDMI ARC compliant (see **Connect the TV > Use Philips EasyLink > Use HDMI ARC** (Page 52)).

Configure TV speakers

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[EasyLink]** > **[TV speakers]**.
3. Select one of the following options, then press **OK**:
 - **[Off]:** Turn off TV speakers.
 - **[On]:** Turn on TV speakers.
 - **[EasyLink]:** TV audio continues to be streamed through the TV speakers. Switch the TV audio to the connected HDMI-CEC audio device through the experience menu.
 - **[EasyLink autostart]:** Turn off TV speakers automatically and streams TV audio to the connected HDMI-CEC audio device.

Switch TV audio in experience menu


If **[EasyLink]** or **[EasyLink autostart]** are selected, access the experience menu to switch the TV audio.

1. While watching TV, press .
2. Select **[Speakers]**, then press **OK**.
3. Select one of the following, then press **OK**:

- **[TV]:** On by default. Streams TV audio through TV speakers until the connected HDMI-CEC audio device switches to system audio control. Thereafter, TV audio is streamed through the connected device.
- **[Amplifier]:** Streams audio through the connected HDMI-CEC device. If system audio mode is not enabled on the device, audio will continue to stream from TV speakers if **[EasyLink]** was selected. If **[EasyLink autostart]** was enabled, the TV prompts the connected device to switch to system audio mode.

Use HDMI ARC

The HDMI 1 connector is HDMI Audio Return Channel (ARC) compliant. Use it to output digital audio to a HDMI Home Theatre System.

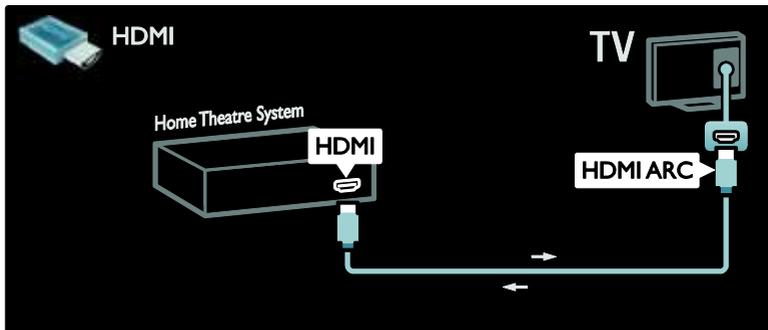

HDMI ARC allows you to use Philips EasyLink to output TV audio directly to a connected audio device, without the need for an additional digital audio cable. Be sure that the device is HDMI-CEC and ARC compliant, and that the TV is connected to the device using a HDMI cable attached to HDMI ARC connectors.

Enable or disable HDMI ARC

Note: Enabling HDMI ARC automatically adds the device to the home menu.

1. Press **Home**.
2. Select **[Setup] > [TV settings] > [EasyLink] > [HDMI 1 - ARC] > [On]** or **[Off]**.
3. Press **OK** to activate.

6 Troubleshooting

Contact us

If you cannot resolve your problem, refer to the FAQs for this TV at

www.philips.com/support.

If the problem remains unresolved, contact Philips Consumer Care in your country as listed in the leaflet accompanying your product.

Make a note of your TV model and serial number before you contact Philips. These numbers are printed on the back of the TV and on the packaging.

Warning: Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.

General TV issues

The TV does not switch on:

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Check that the power cable is securely connected.
- Check that the **power switch** at the bottom/back of the TV is switched on.

The TV does not respond to remote control or side controls when switched on

The TV requires some time to start up. During this time, the TV will not respond to the remote control or side controls. This is normal behavior.

The standby light on the TV blinks red:

Disconnect the power cable from the power outlet. Wait until the TV cools down before reconnecting the power cable. If the blinking reoccurs, contact Philips Consumer Care.

You forgot the code to unlock the child lock feature:

Enter '8888'.

The TV menu is in the wrong language:

Change the TV menu to your preferred language.

For more information, see **Set up the TV > Change language settings > Menu language**.

When turning the TV on/off/to standby, you hear a creaking sound from the TV chassis:

No action is required. The creaking sound is normal expansion and contraction of the TV as it cools and warms up. This does not impact performance.

When the TV is in standby mode, a startup splash screen is displayed, then returns to standby mode:

This is normal behavior. The startup screen is displayed when the TV is disconnected from the mains and reconnected.

To switch on the TV from standby, press  on the remote control or press any key on the side of the TV.

TV channel issues

Previously installed channels do not appear in the channel list:

Check that the correct channel list is selected.

No digital channels were found during the installation:

Check that the TV supports SBTVD-T or SATVD-T in your country. See the listed countries on the back of the TV.

Picture issues

The TV is on, but there is no picture or the picture is distorted:

- Check that the antenna is properly connected to the TV.
- Check that the correct device is selected as the TV source.
- Check that the external device or source is properly connected.

There is sound but no picture:

Check that the picture settings are correctly set.

There is poor TV reception from an antenna connection:

- Check that the antenna is properly connected to the TV.
- Loud speakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality. If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine tune this channel.

There is poor picture quality from connected devices:

- Check that the devices are connected properly.
- Check that the picture settings are correctly set.

The TV did not save your picture settings:

Check that the TV location is set to the home setting. This mode offers you the flexibility to change and save settings.

The picture does not fit the screen; it is too big or too small:

Try using a different picture format.

The picture position is incorrect:

Picture signals from some devices may not fit the screen correctly. Check the signal output of the device.

The picture from broadcasts is scrambled:

You may need to use a Conditional Access Module to access content. Check with your operator.

An "e-sticker" banner displaying information appears on the TV display:

The TV is in **[Shop]** mode. Remove the e-sticker by setting the TV to **[Home]** mode, then restarting the TV. See **Setup the TV > Change other settings > TV location** (Page 35) for more information.

The computer display on the TV is not stable:

- Check that your PC uses the supported resolution and refresh rate.
- Set the TV picture format to unscaled.

Sound issues

There is picture but no sound from the TV:

If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.

- Check that all cables are properly connected.
- Check that the volume is not set to 0.
- Check that the sound is not muted.
- Check that the TV speakers setting is on in the sound menu.
- Check that the TV audio output is connected to the audio input on the HDMI CEC enabled/EasyLink-compliant HTS device. Sound should be heard from the HTS speakers.

There is picture but sound quality is poor:

Check that the sound settings are correctly set.

There is picture but sound comes from one speaker only:

Verify that sound balance is set to the center.

HDMI connection issues

There are problems with HDMI devices:

- Note that HDCP (High-bandwidth Digital Content Protection) support can delay the time taken for a TV to display content from a HDMI device.
- If the TV does not recognize the HDMI device and no picture is displayed, try switching the source from one device to another and back again.
- If there are intermittent sound disruptions, check that output settings from the HDMI device are correct.

- If you use an HDMI-to-DVI adapter or HDMI to DVI cable, check that an additional audio cable is connected to AUDIO L/R or AUDIO IN (mini-jack only).

You cannot use EasyLink features:

Check that your HDMI devices are HDMI-CEC compatible. EasyLink features only work with devices that are HDMI-CEC compatible.

If a HDMI-CEC compliant audio device is connected to the TV and the TV does not display any mute or volume icon when the volume is muted, increased or decreased.

This behavior is normal when a HDMI-CEC audio device is connected.

Browse PC or Net TV access is slow.

Refer to your router's user manual for information on transfer rate and other factors of signal quality.

You need a high-speed Internet connection for your router.

USB connection issues

USB device content is not displayed:

- Check that the USB storage device is set to 'Mass Storage Class' compliant, as described in the storage device's documentation.
- Check that the USB storage device is compatible with the TV.
- Check that the audio and picture file formats are supported by the TV.

Audio and picture files do not play or display smoothly:

The transfer performance of the USB storage device may limit the data transfer rate to the TV, causing poor playback.

Network connection issues

(Applicable to certain models only.)

Net TV does not work

If the connection to the router is properly set up, check the router connection to the Internet.

7 Technical data

Overview

Product information is subject to change without notice. For detailed product information, go to www.philips.com/support.

Power and reception

Power

- Mains power : AC 110-240V~, 50-60Hz
- Standby power : <0.15W
- Ambient temperature : 5 to 40 degree Celsius
- For power consumption, see the product specifications at ().

Reception

- Antenna input: 75ohm coaxial (F-type)
 - TV system: PAL M, PAL N, NTSC M, SATVD-T, SBTVD-T
 - Video playback: NTSC, PAL
-

Display and sound

Picture / Display

- Display type: LCD Full HD W-UXGA
- Diagonal size:
 - 32 inch / 81 cm
 - 40 inch / 102 cm
 - 46 inch / 117 cm
 - 52 inch / 132 cm
- Aspect ratio: Widescreen 16:9
- Panel resolution: 1920x1080p, 100Hz
- 1080p 24/25/30/50/60Hz processing
- 120 Hz LCD

Sound

- Output power (RMS) : 20W
- Incredible Surround
- Clear Sound
- Dynamic Bass Enhancement
- Mono/Stereo

Display resolutions

Computer formats - HDMI (Resolution - refresh rate)

640 × 480 - 60Hz
800 × 600 - 60Hz
1024 × 768 - 60Hz
1360 × 768 - 60Hz
1280 × 1024 - 60Hz
1600 × 1200 - 60Hz
1920 × 1080 - 60Hz

Computer formats - VGA (Resolution - refresh rate)

640 × 480 - 60Hz
800 × 600 - 60Hz
1024 × 768 - 60Hz
1360 × 768 - 60Hz
1280 × 1024 - 60Hz
1600 × 1200 - 60Hz
1920 × 1080 - 60Hz

Video formats

(Resolution - refresh rate)

480i - 60Hz
480p - 60Hz
576i - 50Hz
576p - 50Hz
720p - 50Hz, 60Hz
1080i - 50Hz, 60Hz
1080p - 24Hz, 25Hz, 30Hz, 50Hz, 60Hz

Multimedia

Supported multimedia connections

- USB (FAT or DOS-formatted; Mass Storage Class compliant only)
- Ethernet UTP5

Supported image files

- JPEG (*.jpg)

Supported audio/video files*

AVI (*.avi):
video: MPEG-4 SP, MPEG-4 ASP
audio: MPEG Layer 2/3, AC3
MPEG (*.mpg, *.mpeg, *.vob):
video: MPEG-1, MPEG-2

MPEG (*.mp2, *.mp3, *.mpg, *.mpeg, *.vob):
 audio: MPEG-1 Layer 2, MPEG-1 Layer 3,
 LPCM, AC3

MPEG-4 (*.mp4):
 video: MPEG-4 AVC (H.264, L2-CIF, L4-HD)
 audio: AAC-LC, HE-AAC

***Multimedia file names must not exceed
 128 characters.**

Supported audio/video files *

WMV (*.wmv):
 video: WMV9/VC1

WMA (*.wma):
 audio: WMA (v2 to v9.2)

MKV (*.mkv):
 video: H.264
 audio: HE-AAC, AC3

***Multimedia file names must not exceed
 128 characters.**

Supported DLNA-compliant media server software

- Windows Media Player (for Microsoft Windows)
- Twonky Media (for Microsoft Windows and Mac OS X)
- Sony Vaio Media Server (for Microsoft Windows)
- TVeristy (for Microsoft Windows)
- Nero MediaHome
- DiXiM (for Microsoft Windows XP)
- Macrovision Network Media Server (for Microsoft Windows)
- Fuppes (for Linux)
- uShare (for Linux)

Supported DLNA audio/video files

WMV (*.wmv):
 video: WMV9/VC1

MPEG (*.mp2, *.mp3, *.mpg, *.mpeg, *.vob):
 audio: MPEG-1 Layer 2, MPEG-1 Layer 3,
 LPCM, AC3

MPEG-4 (*.mp4):
 video: MPEG-4 AVC (H.264, L2-CIF),
 MPEG-4 AVC (H.264, L4-HD)
 audio: AAC-LC, HE-AAC

MKV (*.mkv):
 video: H.264
 audio: HE-ACC, AC3

Connectivity

Rear

- AV IN (VIDEO and Audio L/R)
- CVI 2: Component Video (Y Pb Pr), Audio L/R
- Headphones: Stereo 3.5mm mini-jack*
- SERV.U: Service port
- Network: Ethernet

Bottom

- CVI 1: Component video (YPbPr), Audio L/R
- HDMI (1) ARC: HDMI Audio Return Channel
- HDMI (2) and HDMI (3)*: HDMI

*: Available in selected models only.

- DIGITAL AUDIO OUT: Coaxial
- AUDIO IN: DVI/VGA stereo 3.5mm mini-jack
- Antenna: 75 ohm coaxial
- VGA: PC input

Side

- HDMI
- USB

Dimensions

Note: Dimensions and weights are approximate values only. Design and specifications are subject to change without notice.

The legends used to indicate the TV dimensions are as follows:

() : 32 inch / 81 cm TV

{ } : 40 inch / 102 cm TV (For PFL56x5D/
 PFL66x5D)


[] : 46 inch / 117 cm TV

(()) : 40 inch / 102 cm TV (For PFL86x5D)


{{ }} : 52 inch / 132 cm TV

Make a note of the legend that corresponds to your TV. Then, navigate to the next page to view the dimensions.


Use your TV legend to note the dimensions of your TV (with and without the stand).

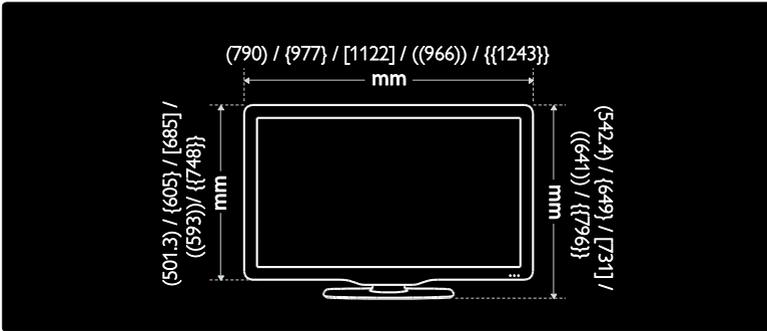


Use your TV legend to note the thickness of your TV (with and without the stand).

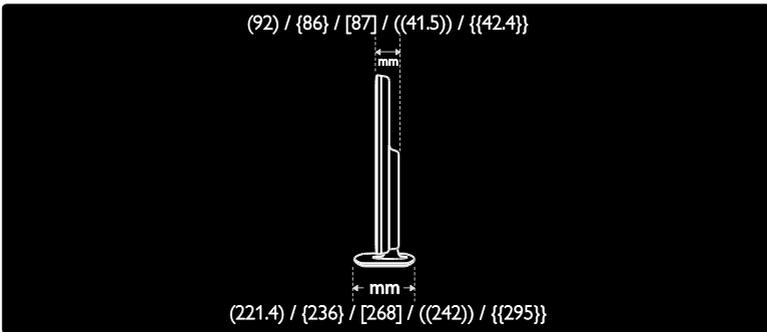

Use your TV legend to note the weight of the TV with stand.

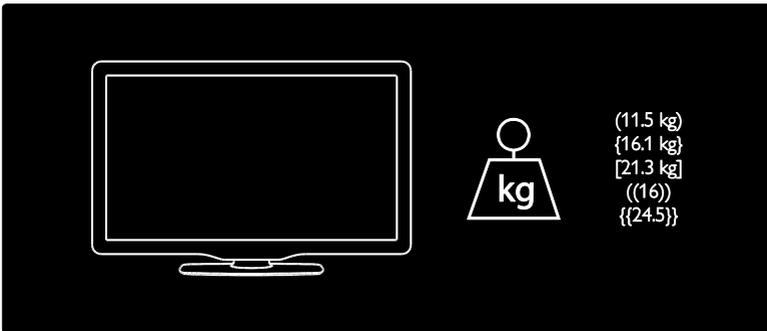

Use your TV legend to note the weight of the TV without the stand.

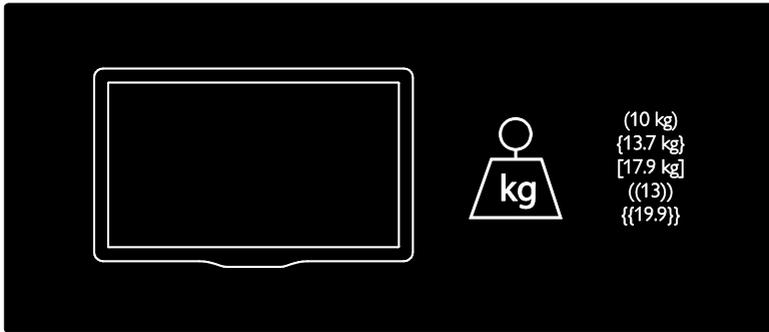

UMv 3139 137 04054 - 20100823

8 Index

A

Age rating	24
Ambilight	12
Ambilight settings	19
Ambilight, response speed	20
Ambilight, switch on	19
audio lip sync	33

C

care	10
channel list	16
channels, favorites	23
channels, hide or unhide	28
channels, rename	28
clock	33
closed caption text	23
connect, PC network	29
connect, power	37
connect, USB	24
connectors, bottom	39
connectors, rear	38
connectors, side	39
controls, side	14

D

default settings	28
demo	28
devices, add	19
devices, watch	19
dimensions	53
display resolution	52
DTV <i>i</i>	26

E

EasyLink, buttons	48
EasyLink, enable	47
EasyLink, features	47
EasyLink, RC key forward	48
EasyLink, TV speakers	48
end of use	10
EPG, enable	23
EPG, menu	23
EPG, overview	23

F

factory settings	28
favorites list, add	23
favorites list, select	23

H

hearing impaired	26
home menu	16
home mode	33

I

information, on Internet	13
information, on-screen	13

L

location, home or shop	33
location, stand or wall mount	33
Lounge light	20

M

menu, add device	16
menu, channel list	16
menu, home	16
menu, options	17
menu, setup	16
multimedia, overview	52

multimedia, play files	24
mute TV speakers	18

N

Net TV, browse	21
Net TV, clear history	22

O

options menu	17
--------------	----

P

pc network settings	31
pc network, media server	31
pc network, wired	29
picture format	18
picture settings	27
position TV	12
power	52

R

recycle	10
register product	9
remote control, batteries	15
remote control, on-screen	15
remote control, overview	14
rename channels	28

S

safety	9
Scenea, enable	25
Scenea, lounge light	20
Scenea, upload picture	25
screen care	10
settings, assistant	27
settings, picture	27
settings, sound	28
shop mode	33

sleeptimer	24
smart picture	18
smart sound	18
software, digital update	35
software, Internet update	35
software, version	35
sound settings	28
specifications	52
standby	17

T

technical specifications	52
--------------------------	----

U

universal access, enable	25
--------------------------	----

V

visually impaired	26
volume, adjust	18
volume, mute	18

W

websites	21
----------	----

