






# PHILIPS

50PUD6654/43 50PUD6654/54  
58PUD6654/43 58PUD6654/54  
50PUD6654/44 50PUD6654/55  
58PUD6654/44 58PUD6654/55


## Guía Rápida

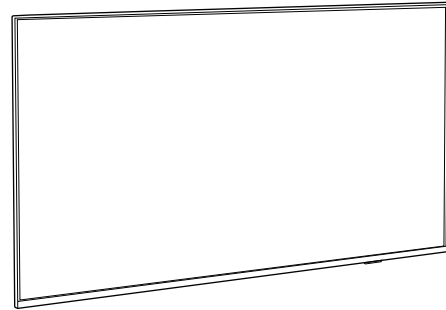

 
x4

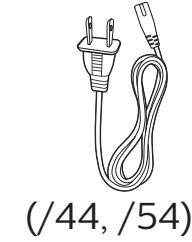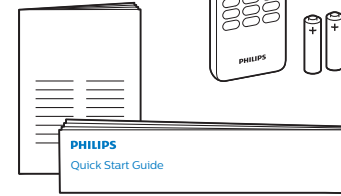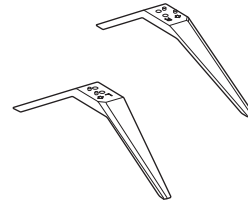


A

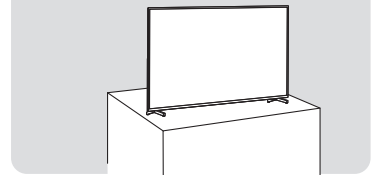


B

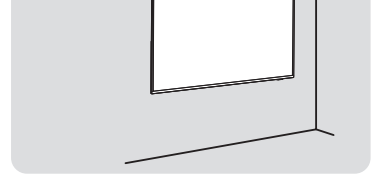


A

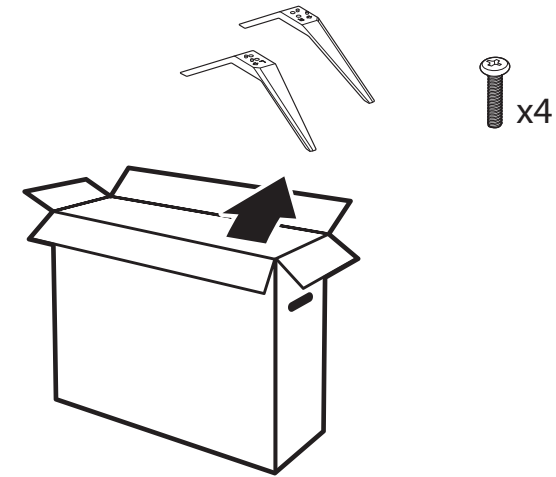


1

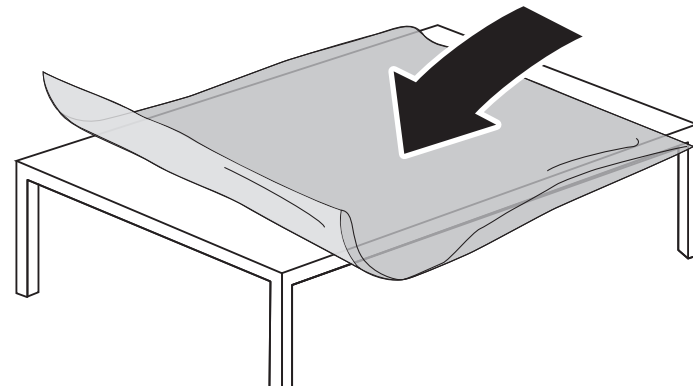


2

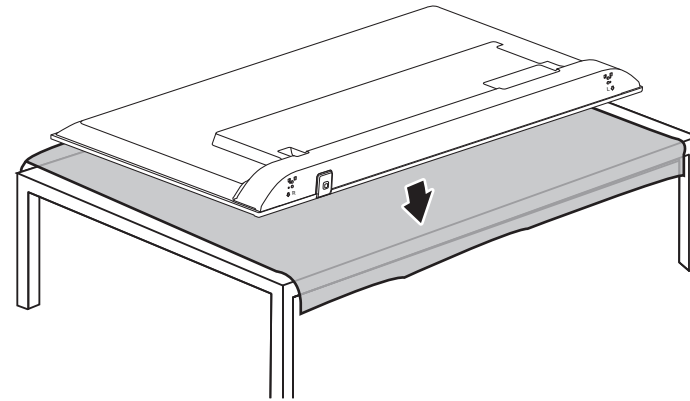


3

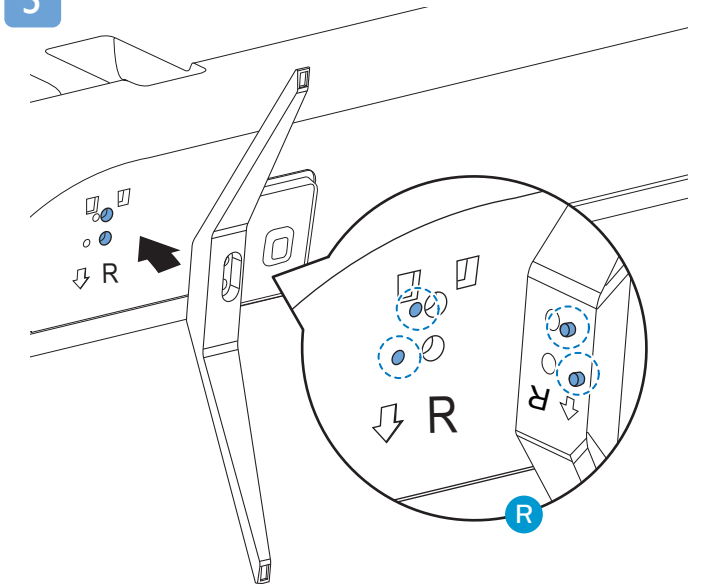


4

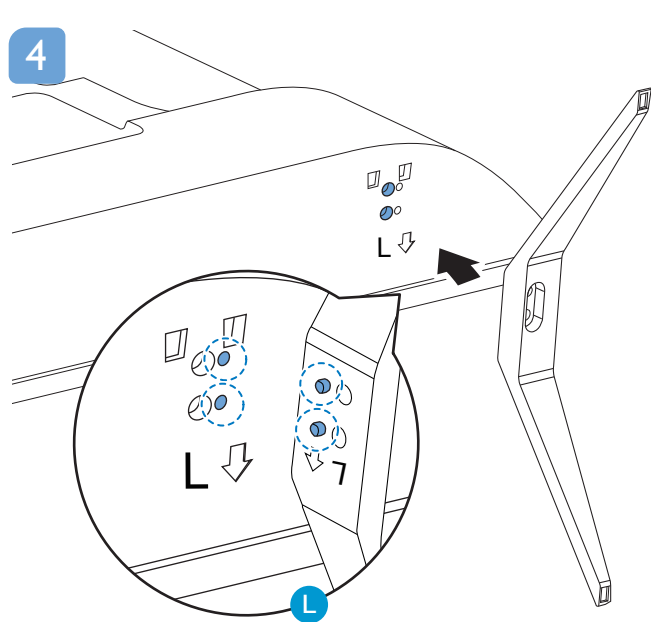


5

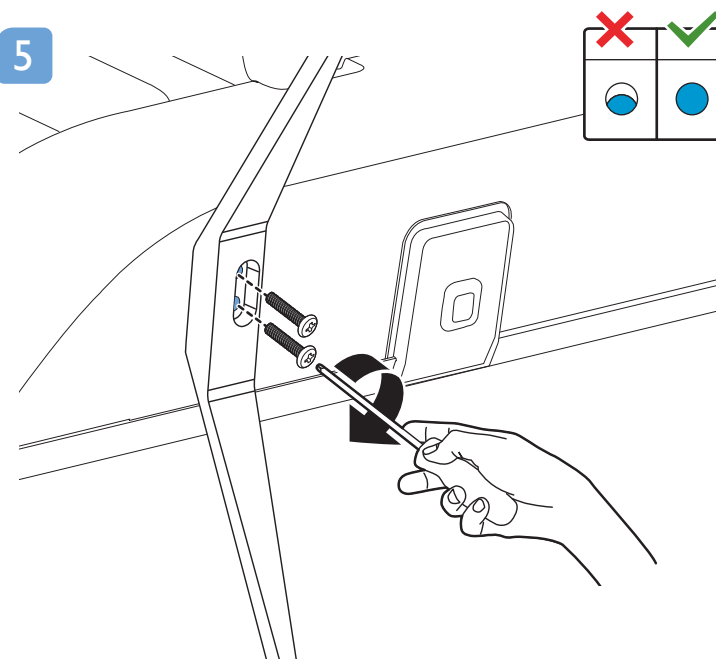

6

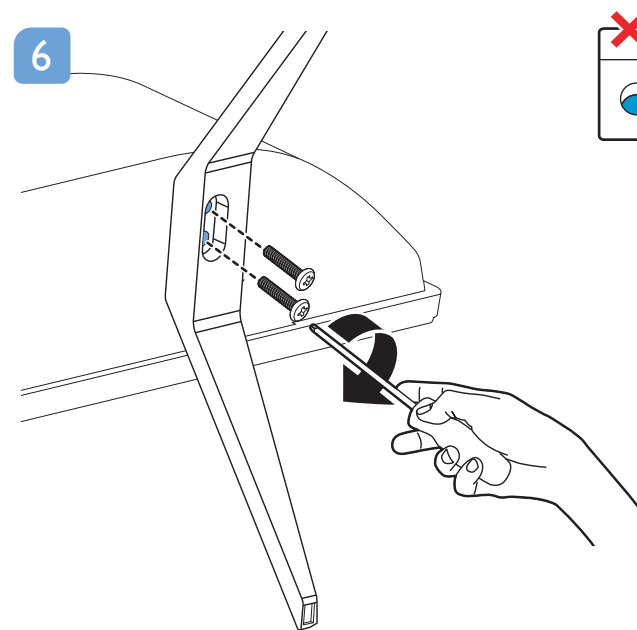

7

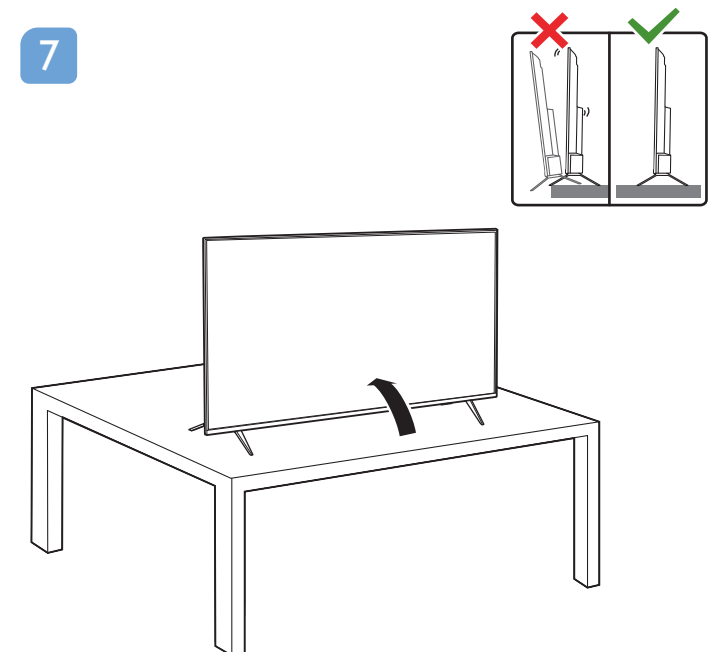





English Read the safety instructions.

Español Lea la información de seguridad.



Registre su producto y obtenga asistencia en [www.philips.com/TVsupport](http://www.philips.com/TVsupport)

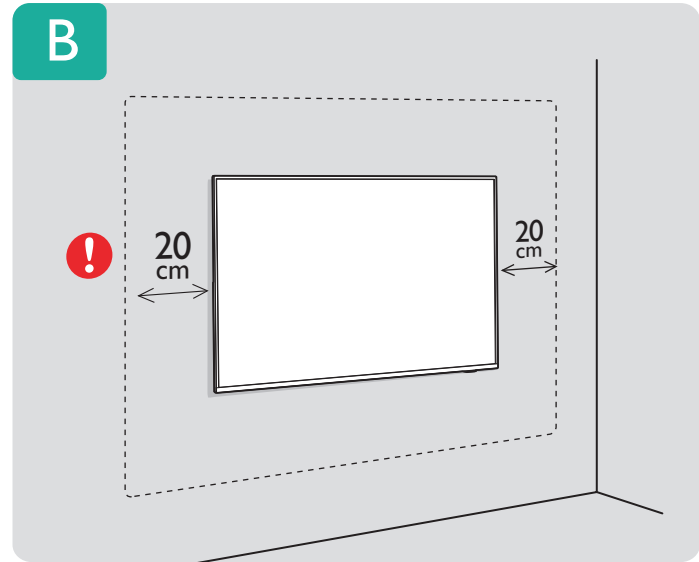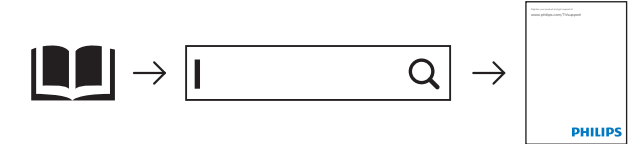

VESA (x, y)

50" 200x200mm M6 126 cm  
58" 300x200mm M6 146 cm

