

Update the TV software


Philips continuously tries to improve its products and we recommend that you update the TV software when updates are available.

What you need

To update with a USB storage device, you need:

- An empty USB flash drive. The USB flash drive must be FAT or DOS-formatted.
Do not use a USB hard drive.
- A computer with Internet access
- An archive utility that supports the ZIP file format (for example, WinZip® for Microsoft® Windows® or StuffIt® for Macintosh®).

Step 1: Check the current software version

- 1 Press .
- 2 Select [All Settings] > [Update Software] > [Current Software Info], then press OK.
→ The current software information is displayed.
- 3 Write down the software version number.
- 4 To return, press OK.

Step 2: Download the latest software



Caution

- Do not install a lower version of software than the current version installed on your product. Philips cannot be held liable or be made responsible for problems caused by a software downgrade.


- 1 Insert the USB flash drive into a USB port on your PC.
- 2 From your PC, navigate to www.philips.com/support.
- 3 Find your product and locate the software and drivers available for your TV set.
→ The software is available as a zip file.
- 4 If the software version is higher than the version on your TV, click the software update link.
- 5 Accept the license agreement and save the ZIP file to the USB flash drive.
- 6 Create a Folder "upgrades" in the root of the USB.
- 7 Using the archive utility, extract 'autorun.upg' in folder 'upgrades' on root of USB flash drive.
- 8 Disconnect the USB flash drive from the PC.

Step 3: Update the TV software



Warning

- Do not switch off the TV or remove the USB flash drive during the software update.
- If a power failure occurs during the update, do not remove the USB flash drive from the TV. The TV will continue the update as soon as power is restored.
- If an error occurs during the update, retry the procedure. If the error reoccurs, contact Philips Consumer Care.

- 1 Connect the USB flash drive (containing the software update) to the USB connector on the TV.
- 2 Switch on the TV.
- 3 Find the software in the USB flash drive.
 - Press , select [All Settings] > [Update Software] > [Local Updates], then press OK.
 - Select the file that you downloaded.



Note

- If the USB flash drive is not detected, disconnect it and reconnect again.

- 4 Follow the on-screen instructions to update the TV software.
 - Click [Next] to start Programming
 - Press [Continue] and press [Start] at the bottom of the screen
 - Now the set screen will go black and start again
 - [Installing system update...] will appear on the screen
 - Again the set screen will go black and start again
- 5 Once complete, disconnect the USB flash drive from the TV.



Note

- To prevent accidental updates to the TV software, delete all files from the USB flash drive.