



PhotoFrame Firmware Upgrade Instructions

Applicable models	7FF2FPA
Firmware version	1.0.14
Release date	December 12, 2008
Release notes	



Important notice before updating

 The firmware upgrade process will remove all photos currently stored on PhotoFrame. Please make sure all photos on PhotoFrame are properly backed up before updating. 

Please follow the steps below to upgrade the PhotoFrame firmware.

- 1 Format SD (Secure Digital) card
- 2 Copy all files from the 'Firmware' folder into the root folder of the SD card (The root folder is the 'highest' folder in hierarchy, for example F:\)
- 3 Make sure PhotoFrame is powered Off
- 4 Insert SD into PhotoFrame with the new firmware into the PhotoFrame
- 5 Push the Power button to power on the PhotoFrame
- 6 The firmware upgrade will start automatically

Warning: Upgrade takes about 1 minute.

 During the upgrade do not disconnect power, remove the memory or make new connections. Otherwise this may harm your PhotoFrame. 

- 7 When "System will reboot after replugging out of the memory card" shows, firmware upgrade has finished
- 8 Remove the memory card from the PhotoFrame, PhotoFrame will reboot.
- 9 The upgrade has completed

You can check the new firmware version via [Setup](#) → [Status](#) → [Firmware](#).