


PHILIPS **NORELCO**



**Rechargeable Tripleheader®
Cordless/Cord Razor**

8270XL

Register your product and get support at
www.philips.com/norelco

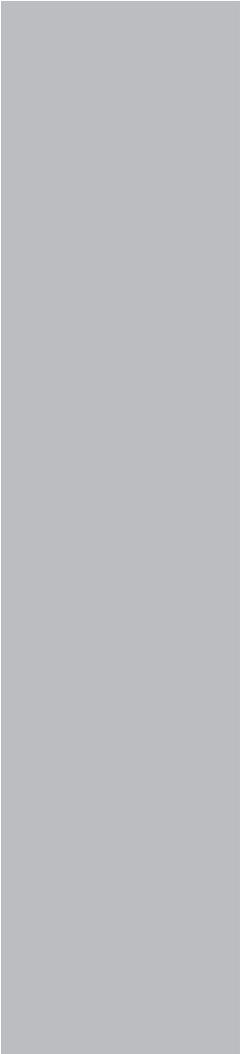

ENGLISH 4

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at www.philips.com/norelco

8270XL

IMPORTANT SAFETY INSTRUCTIONS

When using an electric razor, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a corded razor/charging stand that has fallen into water. Unplug immediately.
2. Use razor only in dry condition. Do not use a razor/charging stand while bathing or in a shower.
3. Do not submerge razor in water.
4. Do not place or store a razor or charging stand where it can fall or be pulled into a tub or sink. Do not place or drop a razor or charging stand into water or other liquid.
5. Always unplug this razor/charging stand from the electrical outlet immediately after use, except when razor is (re)charging.
6. Remove power supply cord from razor before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this razor is used by, on, or near children or invalids.
2. Use this razor for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this razor/charging stand if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-3050.

4. Keep the razor, charging stand, cord and charging plug away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not charge or plug in razor/charging stand outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this razor with a damaged or broken comb, as facial injury may occur.
8. For corded use, always attach plug to razor first, then to outlet. Be certain that plug is inserted firmly into razor, up to mark indicated on plug. For stand use, always put razor in stand first, attach cord to stand, then plug into outlet. To disconnect, turn razor off then remove charging plug from outlet.
9. Never put the razor in direct sunlight or store in a pouch at a temperature above 140°F.
10. Razor can be rinsed under running tap water. Do not operate razor corded until fully dried.
11. To prevent possible damage to the cord, do not wrap cord around the razor or charging stand.

SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug, as this will cause a hazardous condition.

PHILIPS

45 - DAY MONEY-BACK GUARANTEE

To enjoy the closest and most comfortable shave from your new Philips Norelco Men's Razor, the razor should be used exclusively for 3 weeks. This allows your hair and skin enough time to adapt to the Philips Norelco Shaving System. If, after that period of time, you are not fully satisfied with your Philips Norelco Men's Razor, send the product back along with dated sales receipt and we'll refund you the full purchase price. **The razor must be shipped prepaid by insured mail, insurance prepaid, and have the original sales receipt, indicating purchase price and the date of purchase, enclosed. We cannot be responsible for lost mail.** The razor must be postmarked no later than 45 days from the date of purchase. Philips Norelco reserves the right to verify the purchase price of the razor and limit refunds not to exceed suggested retail price.

To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance.

Table of Contents

Features8-9

LED Indicators 10

Before First Use 10-11

Charging 11-13

Recharging 13

Quick Charge 14

Put It To The Test & Shaving Tips 14

How to Shave With An
 Electric Razor 15

Trimming 16

Travel Lock 16-17

Cleaning 17-22

Replacing Razor Heads 22

Storage 22-23

Assistance 23

Accessories 24

Warranty 25

Features

Speed-XL
Shaving Heads

Razor Head
Assembly

Protective Razor
Head Cap

Individually Floating
Heads



Razor Head
Release Button
• Hair Chamber
captures shaven hair

Electronic
On/Off Button

Travel Lock

LED Charge
Indicators
• Indicates the amount
of charge remaining
in batteries

Low Battery
Indicator Light

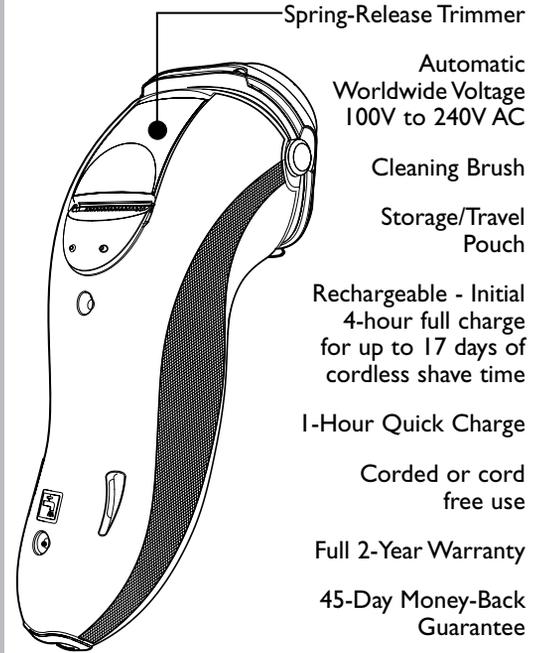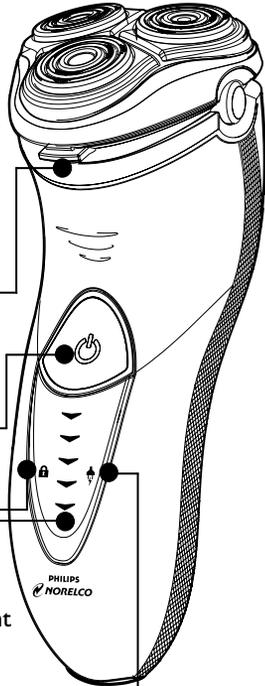

Automatic
Worldwide Voltage
100V to 240V AC

Cleaning Brush

Storage/Travel
Pouch

Rechargeable - Initial
4-hour full charge
for up to 17 days of
cordless shave time

1-Hour Quick Charge

Corded or cord
free use

Full 2-Year Warranty

45-Day Money-Back
Guarantee

How the Unique Philips Norelco  Lift and Cut[®] Shaving System Makes Close Comfortable:



Groove channels
beard closer to cutting
system


Lifter raises hair

Slots to cut long
hairs

Holes to cut short
hairs even closer


LED Battery Level Indicators

The meter provides the following information:

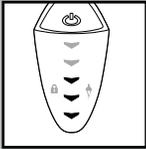

▶ Charging Indicator

As you charge razor, more and more lights of the display meter will light up to indicate what level the batteries have been charged. When the battery contains enough power for one shave, the plug symbol goes out.

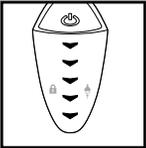


▶ Full Charge Indicator

When the batteries have been fully charged, all battery level lights on the display light up continuously. After 4 hours of charging, the battery level lights go out automatically and charging stops.



▶ Low Battery Indicator

When the battery is almost empty (5 or less shaving minutes left), the plug symbol lights up. When you turn the razor OFF the plug symbol blinks for a few seconds.

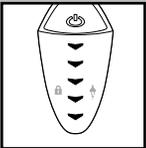

▶ Remaining Battery Capacity

The remaining battery capacity is shown when you unplug the razor or when you switch it on or off.

- When all lights are lit, the battery is 100% charged.

Before First Use

- ▶ Charge the razor before you start using it (see 'Charging'). Make sure the razor is switched off before you start charging it.

Important

- ▶ Only use the power cord and charging stand provided to charge the razor.
- ▶ The power plug transforms 100-240V AC to less than 24V DC.

Travel Lock


The razor is equipped with a travel lock function. You can use the travel lock function when you are going to store the razor for a longer period or if you are going to take the razor with you when traveling. See 'Travel Lock' section for instructions on how to use this function.

Charging

- ▶ Battery performance is best if you recharge only when the batteries are (almost) completely empty.
- ▶ Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifetime of batteries.
- ▶ Continuously recharging or continuously using as a corded razor will reduce life of batteries.
- ▶ You may also shave using the charging plug provided. This razor will not recharge while being used corded.
- ▶ Do not charge razor in a pouch.
- ▶ Recharge only when the plug symbol on the display lights up.

- Do not charge/recharge or use razor corded until fully dried.

Placing or removing razor from charging stand:

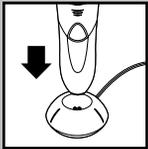


- Always place razor in stand in an upright position making sure charging contacts in bottom of stand fit into recess in bottom of razor.
- Always remove razor from stand by lifting straight up. Do not tilt razor.
- Do not leave the charging stand with the razor in it continuously plugged into outlet as it would reduce life of batteries. If storing razor in stand, remove the plug from outlet as soon as the razor is fully charged.



- Connect cord directly to razor or place razor in charging stand and connect the small plug of cord to charging stand. Connect the charging plug into any 100V to 240V AC outlet. Use only the charging plug provided.
- Do not leave the razor continuously plugged into outlet charging as it would reduce life of batteries. Remove the plug from outlet as soon as the razor is fully charged.
 - An adaptor plug may be necessary for charging plug usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for the power outlet.

The charging plug will automatically convert to work on 100V to 240V AC systems.

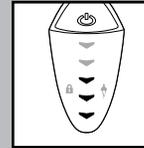

- As you charge razor, more and more lights of the display meter will light up to indicate what level the batteries have been charged.
- First time charging and recharging after non-use for 1 month or more requires a full 4 hours. After initial charge, recharging requires 1 hour. A fully charged razor has a cordless shaving time of up to 17 days.
- When batteries are fully charged, all the battery level lights in the display will light up. A few hours after charging, all lights go out.

Recharging

- First time charging requires 4 hours. After initial charge, recharging requires 1 hour. Recharge only when the plug symbol on the display lights up.
- When razor is fully charged, disconnect the charging plug from outlet. Do not keep razor or charging stand permanently plugged into outlet. If using charging stand, always remove razor from stand by lifting straight up. Do not tilt razor.

Quick Charge

When batteries are totally depleted, recharging the razor for approximately 3 minutes gives enough energy for a 3-minute cordless shave.


When the plug symbol on the razor display goes out, the battery contains enough energy for a 3-minute cordless shave.

Put It To The Test & Shaving Tips

- ▶ **21 Day Trial and Conversion Process.** It is a fact that your skin and beard need time to adjust to a new shaving system.
- ▶ Use your new razor exclusively for 3 weeks to fully enjoy the closeness of a Philips Norelco shave.
- ▶ At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new razor.
- ▶ Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Philips Norelco shaving system.
- ▶ If you are still not convinced after 21 days, Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

How To Shave With Razor

- ▶ Use this razor for its intended household use as described in this manual.
- ▶ Shaving with a clean, dry face gives the best results.

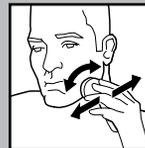


- 1** Turn razor ON by pressing the on/off button once. The power-on symbol in the ON/OFF button lights up. Shave against the direction of beard growth using both straight and circular movements.
- 2** Stretch your skin with your free hand so blades can lift and cut whiskers. Gently press razor to skin so the floating heads can follow the contours of your face. DO NOT press too hard. Too much pressure can pinch the skin into the combs.
- 3** Turn razor OFF by pressing the on/off button once.
- 4** Put the Protective Razor Head Cap on the razor to protect razor heads.



Trimming

To groom sideburns and moustache:

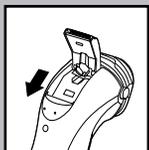

1 Turn razor ON.

The power-on symbol in the ON/OFF button lights up.



2 Push down spring-release trimmer switch.

The trimmer can be activated while the razor is running.



3 Hold trimmer as shown and move in downward strokes with gentle pressure.


4 Close trimmer by pressing trimmer down.

5 Turn razor OFF.

Travel Lock

If you are going to store the razor for a longer time period or if traveling, it is possible to lock the razor. The travel lock prevents the razor from being switched on by accident.

Activating the travel lock

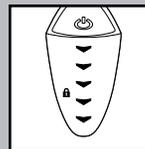

1 Press the ON/OFF button for 4 seconds. The lock symbol appears on the display and the power-on symbol lights up for a few seconds.

2 The travel lock has now been activated.

Deactivating the travel lock

1 Press the ON/OFF button for 4 seconds.

2 The lock symbol goes out and the razor turns ON to indicate that the razor has been unlocked. The razor is now ready for use.

▶ The razor unlocks automatically when charging.

Cleaning




- ▶ The tap symbol on the back of the razor indicates that the razor can be rinsed under running tap water.
- ▶ Regular cleaning guarantees better shaving results.
- ▶ Always switch Razor OFF, unplug and remove power cord before cleaning.
- ▶ Never clean, remove or replace head assembly while motor is on.

- ▶ Do not apply pressure to combs. Do not touch razor heads with hard objects as this may dent or damage precision-made slotted combs.
- ▶ Do not use razor if combs are damaged or broken. Facial injury may occur.
- ▶ Unplug the charging stand. The charging stand may be wiped clean using a damp cloth.


Cleaning: Razor Heads

The quickest and easiest way to clean the razor heads is to rinse them after each use or at least once a week with hot water: Water from the tap should be on a hot setting, BUT BE CAREFUL TO TEST WATER FIRST SO AS NOT TO BURN OR SCALD HANDS.

- ▶ Regular cleaning guarantees better shaving results.
- ▶ Do not immerse razor in water.
- ▶ While rinsing razor heads, water may drip out of the base of razor. This is a normal occurrence.

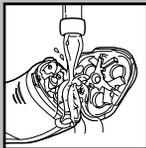


- 1** Always turn razor OFF, unplug from outlet and remove cord from razor or charging stand before cleaning.
- 2** Press the Razor Head Release Button, flip open the Razor Head Assembly.
- 3** Clean inside razor heads and hair chamber by running under hot water.

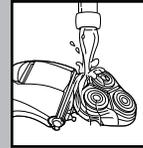

- 4** Clean outside of Razor Head Assembly by running under hot water.
- 5** Close the Razor Head Assembly and shake off excess water.
- 6** Open Razor Head assembly again and leave open to air dry.

NOTE: Do not wipe or dry the shaving heads with a towel or tissue. This could damage the shaving heads.

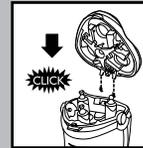


- 7** If the shaving unit becomes detached from the razor, you can easily reattach it.
- 8** You may also clean the hair chamber without water by using the supplied brush.

Once A Month: Razor Heads


Do not mix up the cutters and combs as the shaving performance may be adversely affected for several weeks before optimal shaving performance is restored.




- 1** Turn razor OFF, remove the charging plug from the outlet and cord from the razor or charging stand.
- 2** Press the razor head release button to open the Razor Head Assembly.

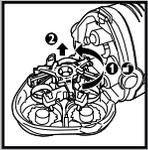


- 3** Turn the black 3-pronged locking bracket counterclockwise to unlock (1) and remove the retaining frame (2).

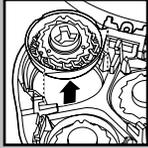

- 4** Remove and clean one set of cutters and combs at a time.

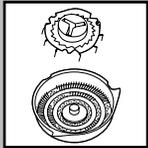

- 5** Separate the cutter from the comb and rinse clean under hot water.

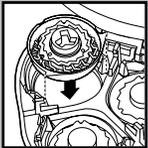


- 6** Replace the set back into the Razor Head Assembly so that the 'wings' on the comb fit within the brackets located towards the center of the Assembly.

The set will only fit into the Razor Head Assembly if the 'wings' are between the brackets. Make sure that the two pointy edges of the head fit exactly into the recesses.

- 7** Repeat the process for the other two sets of cutters and combs.

- 8** Replace the frame.

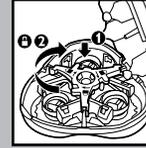

- 9** Press down (1) and turn the black 3-pronged locking bracket clockwise (2) until it locks into place.


- 10** Close the Razor Head Assembly.

Once A Month: Razor Head


For optimum performance, razor cutters and combs should be cleaned in a degreasing liquid (e.g. rubbing alcohol) and lubricated with one drop of mineral oil (in the center of the head). This helps prevent wear of the shaving heads.

After Each Use: Trimmer

- 1** Turn razor OFF.

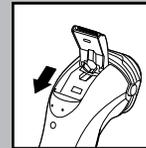

- 2** Push down spring-release trimmer switch.

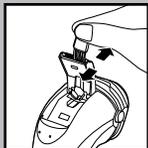

- 3** Clean trimmer with the brush every time you use it.




- 4** Lubricate the trimmer teeth with one drop of mineral oil every 6 months.
- 5** Close trimmer by pressing trimmer down.

This razor has no other user-serviceable parts.
For assistance call 1-800-243-3050.

Replacing the Razor Heads

- ▶ Replace the razor heads once a year for optimal shaving results.
- ▶ Replace damaged or worn razor heads with model HQ9 Philips Norelco razor heads only.

Storage

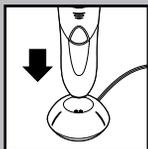

- ▶ The razor can be placed in the charging stand for safe storage. If storing razor in stand, remove the plug from outlet as soon as the razor is fully charged.
- ▶ Be sure razor is turned off. Remove cord from outlet and razor or charging stand before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.



- ▶ Do not wrap cord around razor or charging stand when storing.
- ▶ Store cord in a safe location where it will not be cut or damaged.
- ▶ Do not keep razor or charging stand permanently plugged into outlet.
- ▶ Do not place or store razor or charging stand where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
- ▶ Put the Protective Razor Head Cap on razor to protect heads.

Assistance

- ▶ For assistance, call toll free:

1-800-243-3050

or visit our website:

www.philips.com/norelco

- ▶ Information is available 24 hours a day, 7 days a week.

Accessories

- Replacement Heads**
Model HQ9 - For maximum razor performance, replace your Philips Norelco razor heads once a year.
- Car Cord Adaptor Cable**
HQ8010 - Charges razor from a 12V battery in your car, truck, van, boat or camper.
- Philips Norelco Razor Accessories** may be purchased at a store near you, or on our website www.philips.com/norelco

FULL TWO YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Philips Norelco Product, Model 8270XL (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.* Use of unauthorized replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE. NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/norelco or call 1-800-243-3050 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

* Read enclosed instructions carefully.

Manufactured for:
 Philips Consumer Lifestyle
 A Division of Philips Electronics North America Corporation
 1600 Summer Street – 5th Floor, Stamford, CT 06905-5125



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco, Tripleheader, Lift and Cut and  are Registered Trademarks of Philips Electronics North America Corporation.



is a Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips Electronics N.V.

© 2008 Philips Electronics North America Corporation. All Rights Reserved.