
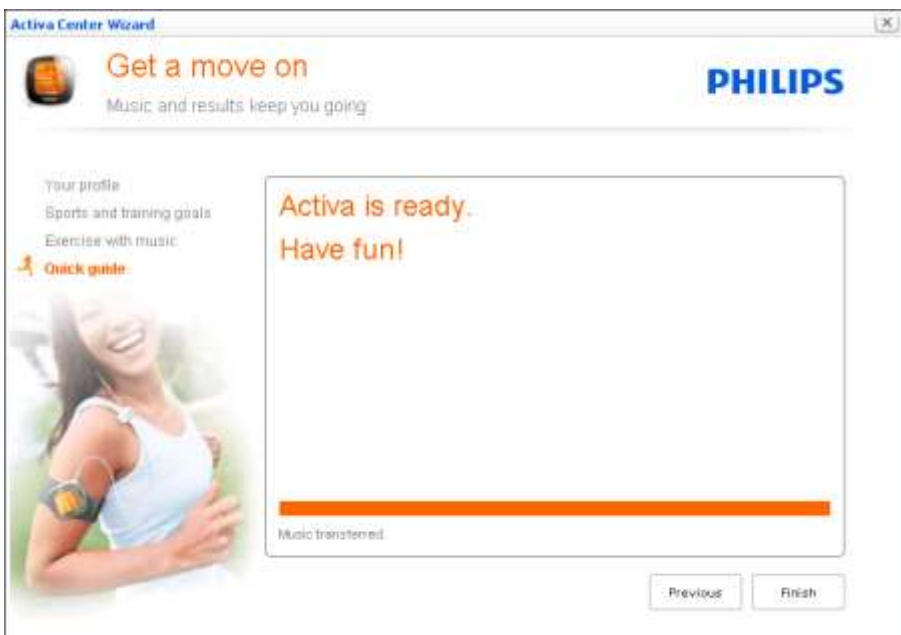


Steps for upgrading your Philips Songbird.


Important: Please ensure your computer can connect to Internet before go through the following steps.

Step 1: Please ensure you have gone through the Activa Center Wizard.

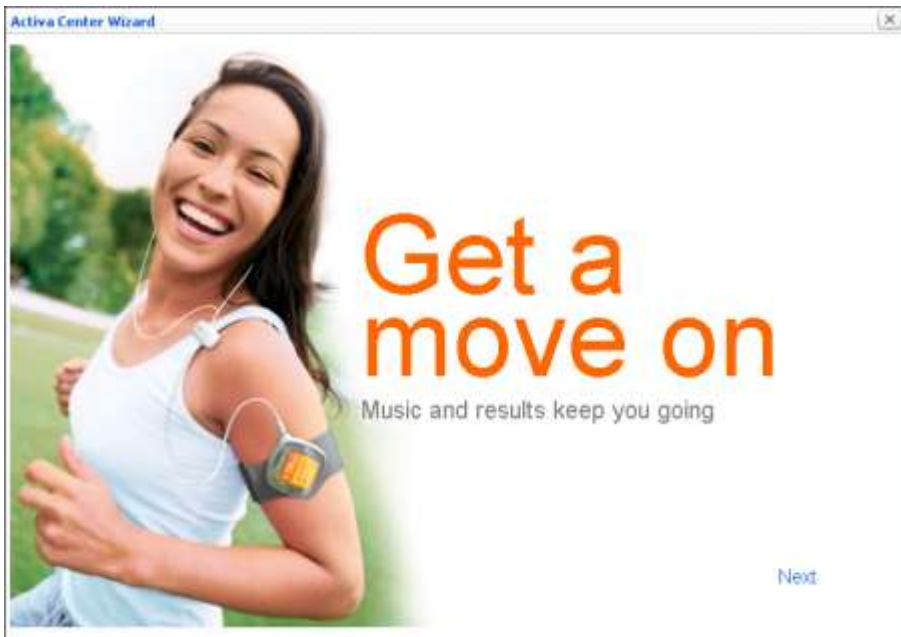


Step2: Add-ons update:


In order to upgrade the songbird successfully, please perform the following steps to get all your Add-ons to the most updated version.

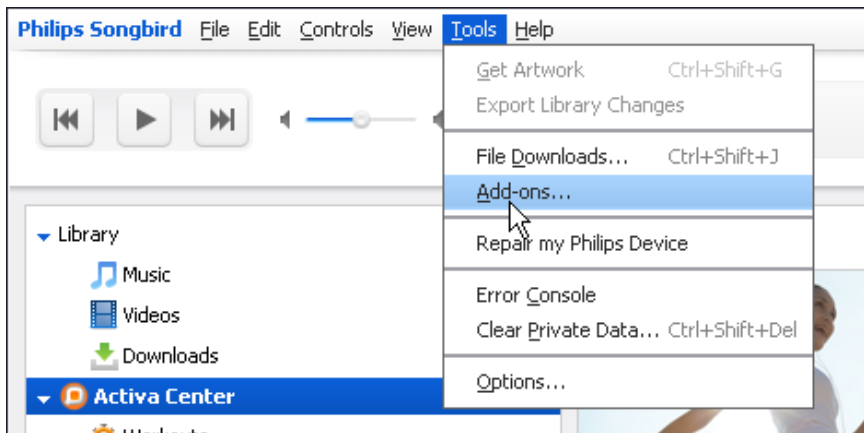


2.1 To simply upgrade your add-ons, under <Tools> and select <Add-ons...>.

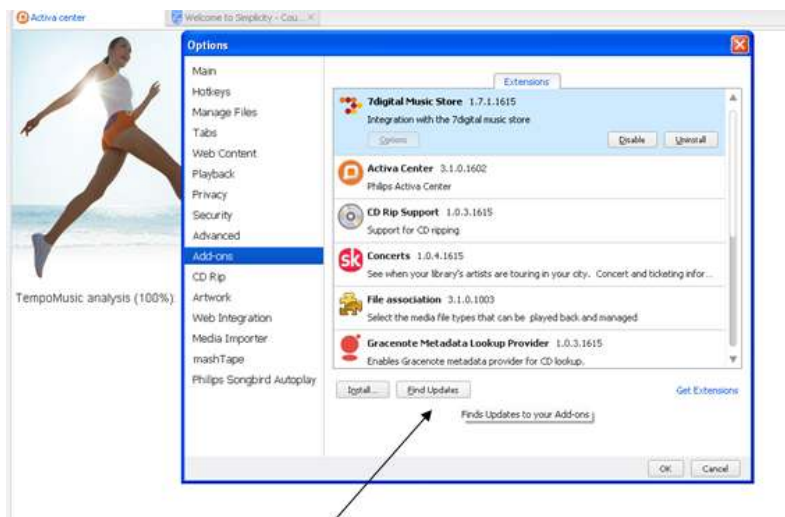

2.2 The <Option> windows will display. Click <Find Updates> to look for the latest add-ons update from Philips Songbird

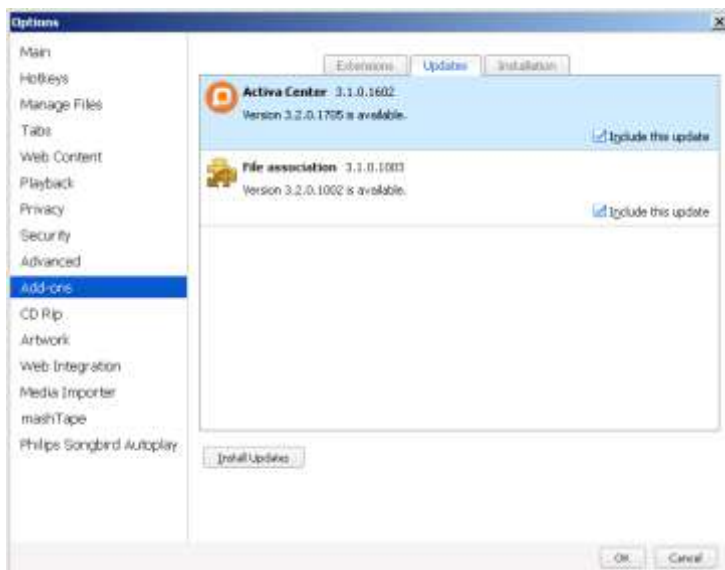


2.3 If there is a latest add-on, it will display under the <Updates> tab. Click <Install Updates> to install.

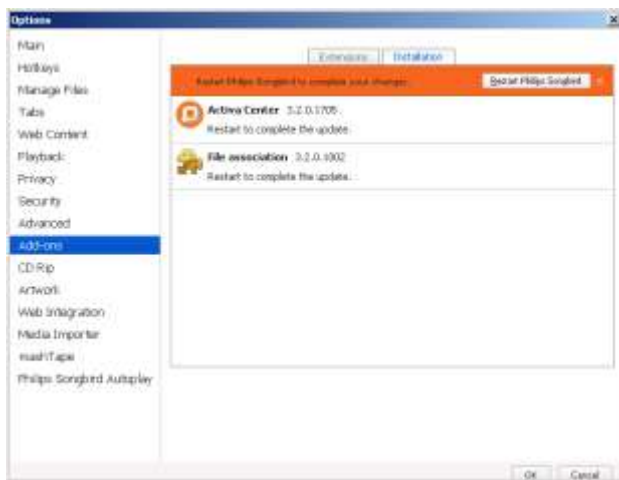

2.4 Once the installation is complete, click <Restart Philips Songbird>. The Songbird will start up automatically.

Step 3: Update your Philips Songbird


After finished the Add-ons update process, now you can move on to Philips Songbird update as follows:

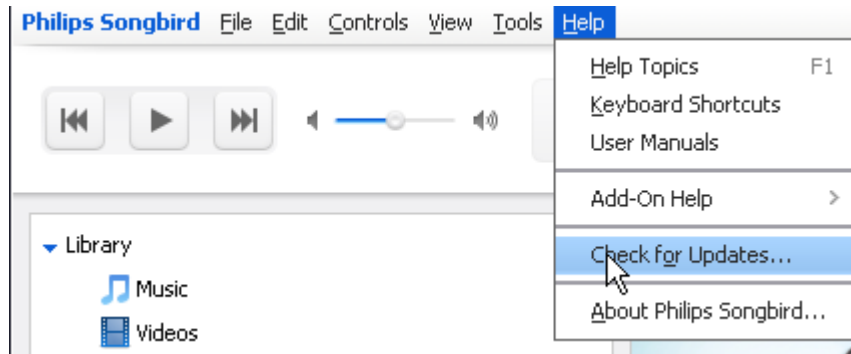


3.1 Under <Help>, select <Check for Updates...>. ***In case you cannot see the update, please wait for around 10 minutes and follow step 2 and try again.***




3.2 The Software Update pop-up windows will display. Click <Download & Install Now> to start downloading and the update installation.

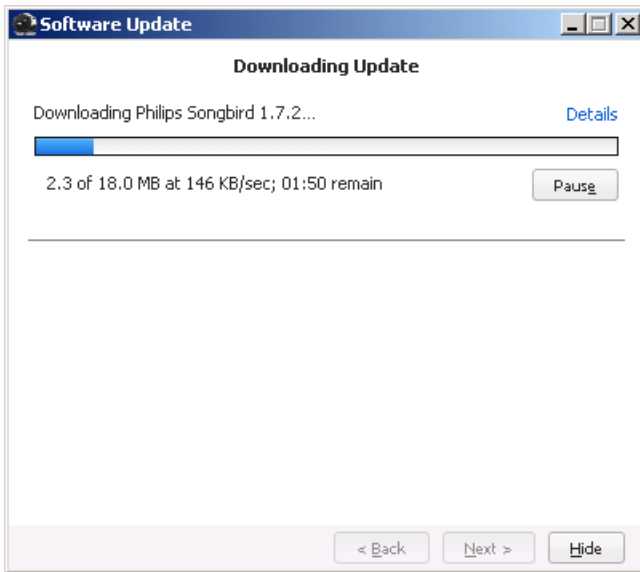


3.3 The software will automatically download the updates.

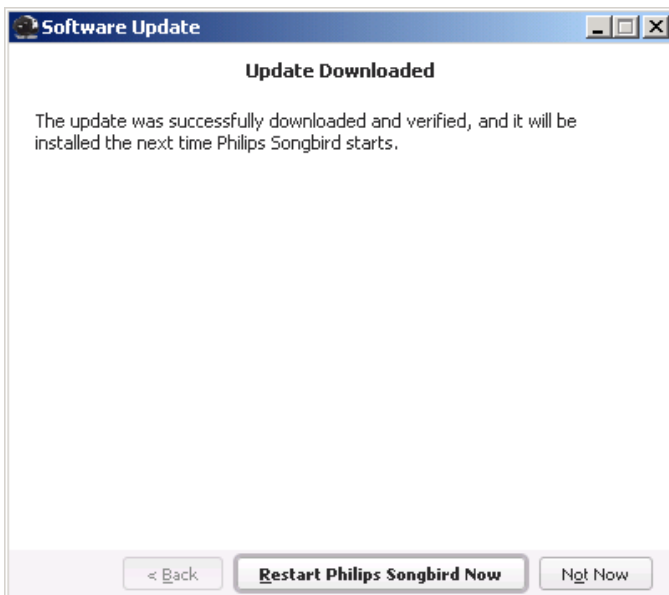

3.4 Once the download is completed, click <Restart Philips Songbird Now>.

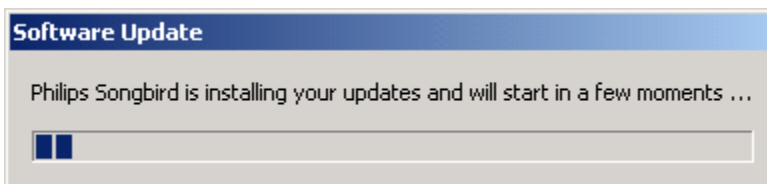

3.5 Please wait for the installation to complete, the Philips Songbird will restart automatically.

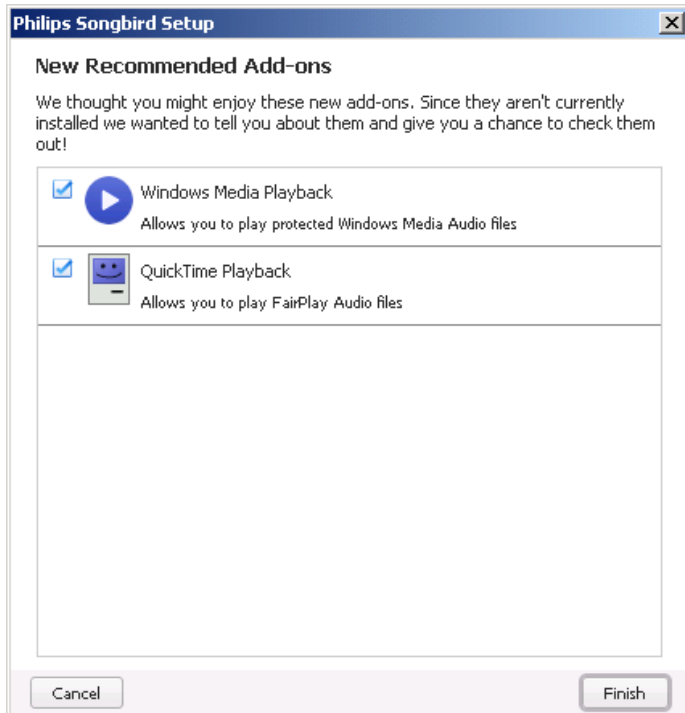


3.6 After Philips Songbird restarted, please click on the “Finish” button to finalize the new recommended Add-ons.

3.7 Your Philips Songbird is now up to date and ready to use.


Step 4: Activa Firmware upgrade:



4.1 Connect Activa to your PC, then click the “OK” button.

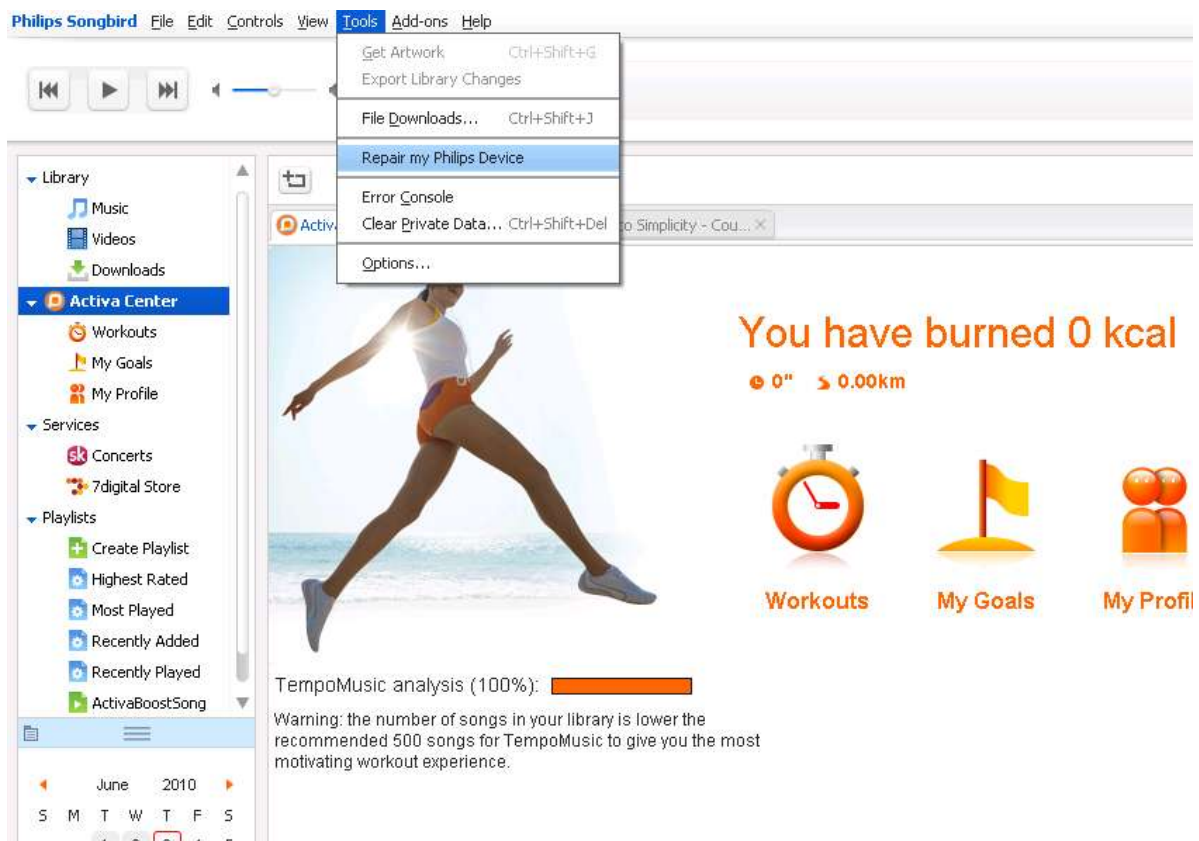


4.2 To upgrade the device firmware, under the “Tools” menu click on the “Repair my Philips Device”.

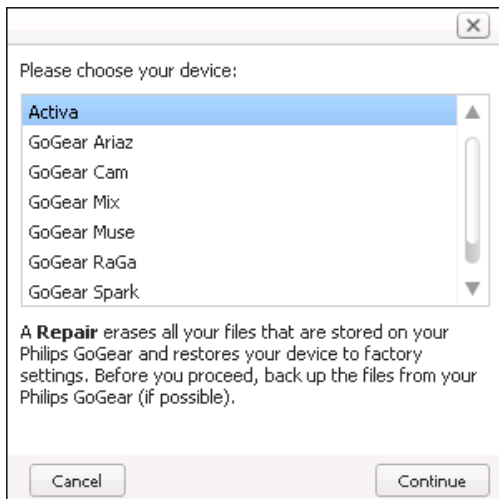


4.3 You are now going to the repair mode, and this process will erase all your files which stored on your Activa. Once you backup your data (if possible). Please select the "Continue" button.


fg

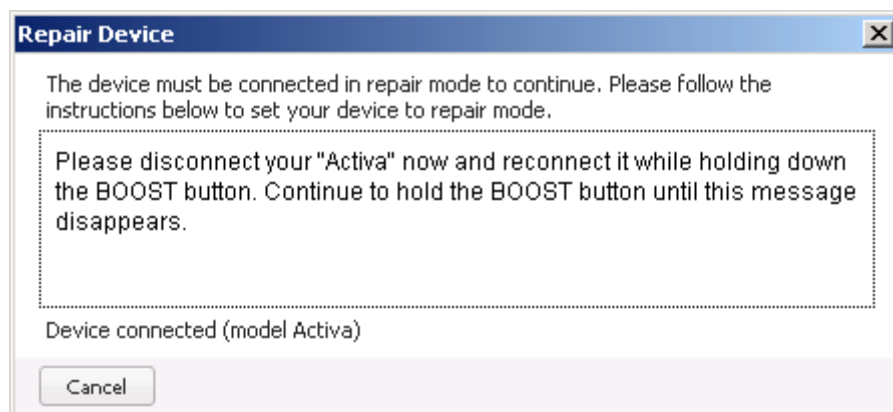


4.4 Please follows the onscreen instruction.

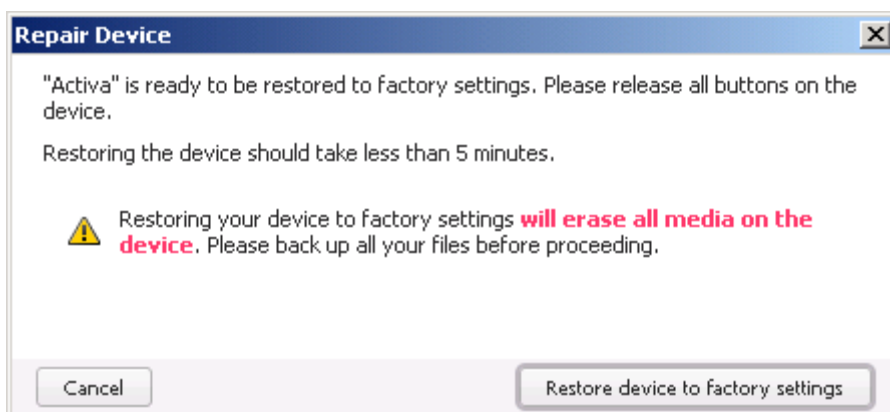


4.5 Please click the "Restore device to factory settings" button.

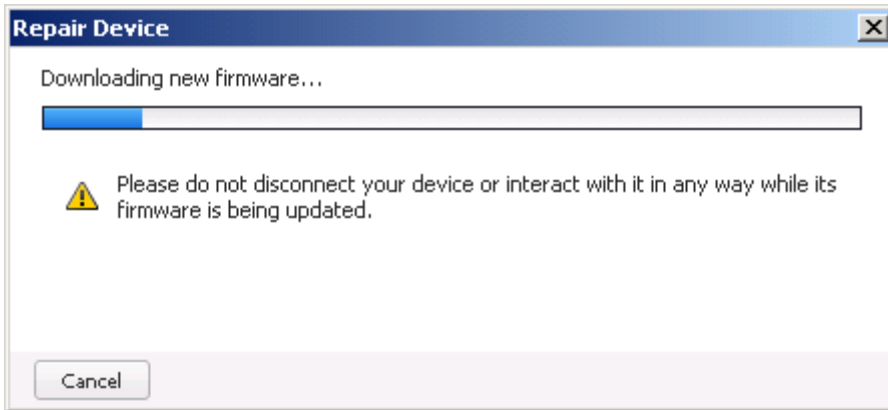


4.6 Please wait for the Firmware to download completely.

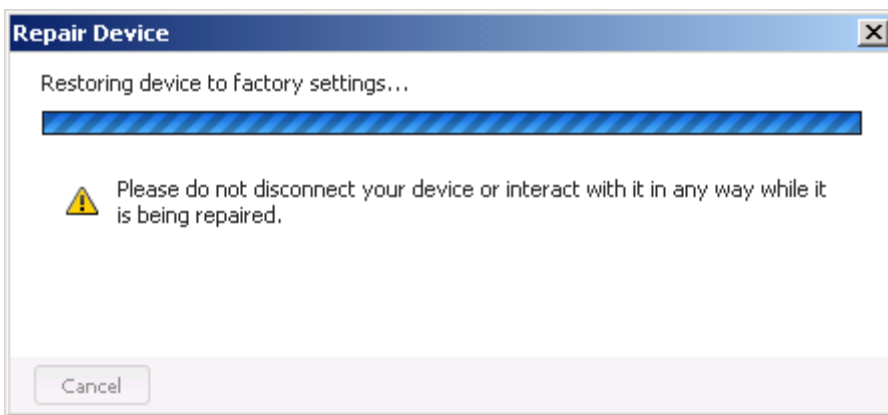

4.7 Please do not disconnect your Activa from the PC, as this will take up around 20 minutes. Once your device is repaired successfully, it will reconnect to Philips Songbird automatically.

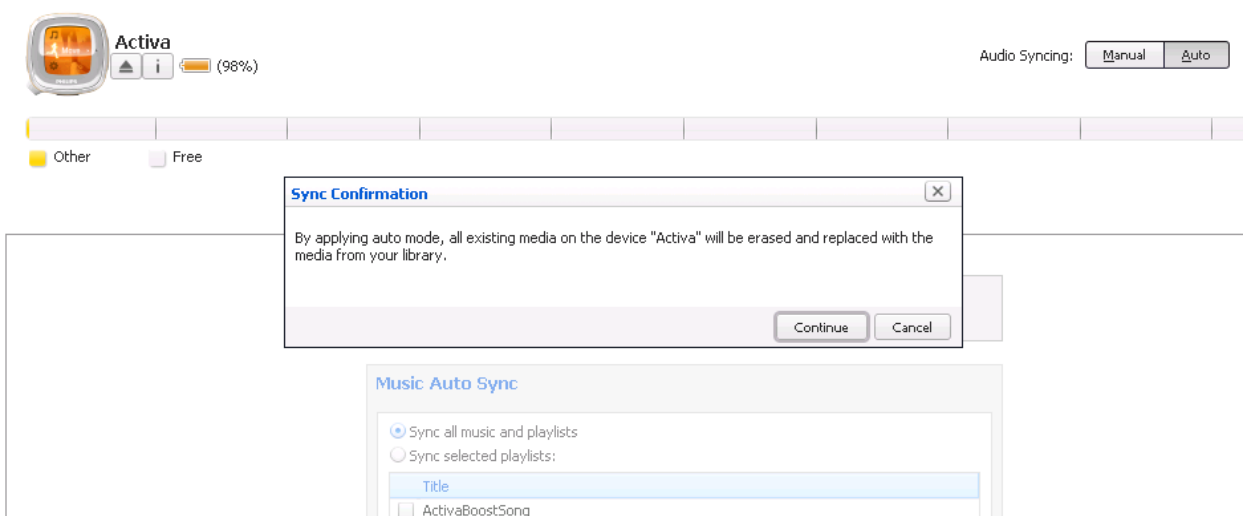

4.8 Please click the "Activa" on the side bar, then click the "Auto" at the audio syncing selection. Press "Continue" to confirm the sync selection.

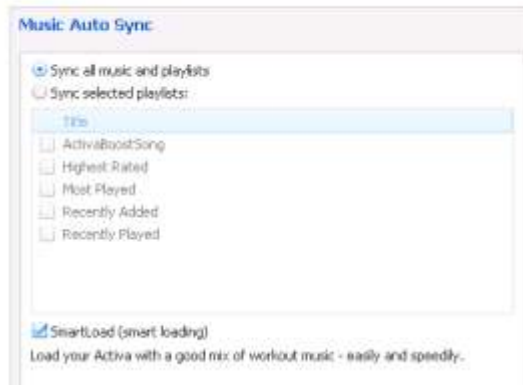

4.9 Click the “Apply” button to sync back your profile and music to your Activa.

4.10 Please wait for the sync process to complete. Once completed your device is ready to use.