

Pocket Radio

AE1530

Register your product and get support at www.philips.com/welcome

User Manual 用戶手冊




PHILIPS

Meet Philips at the Internet
<http://www.philips.com>



AE1530

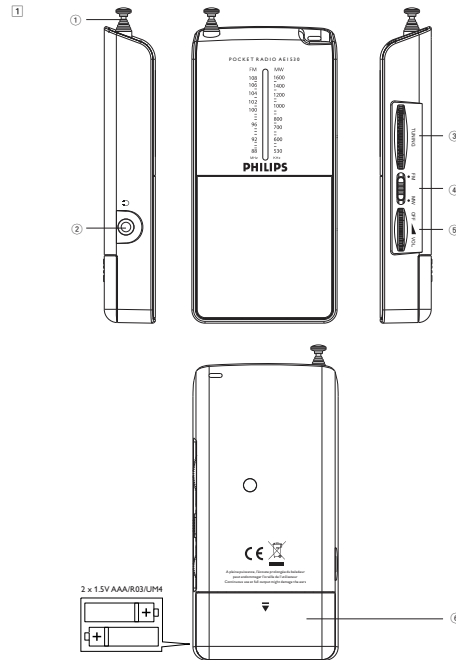

RADIO RECEPTION

- 1 Turn the **OFF ▲ VOL** control to switch on the set.
- 2 Set the band selector to **FM** or **MW**.
- 3 Select your station using the **TUNING** control.
- 4 Adjust the sound with the **OFF ▲ VOL** control.
- 5 To switch off the radio, turn the **OFF ▲ VOL** control to **OFF**.

SAFETY & MAINTENANCE

- Do not expose the set, batteries to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- The apparatus shall not be exposed to dripping or splashing.
- Do not cover the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

English

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Controls (see 1)

- ① **Telescopic antenna**
– improves FM reception.
- ② – 3.5 mm stereo headphone socket.
- ③ **TUNING**
– in FM/MW mode, fine tunes a station.
- ④ **Band selector**
– selects the waveband: FM or MW.
- ⑤ **OFF ▲ VOL**
– switches on/off the set.
– adjusts the sound level.
- ⑥ **Battery compartment**

POWER SUPPLY

Batteries (not included)

- Open the battery door and insert two alkaline batteries, type AAA, R03 or UM4, as indicated in the battery compartment.
- Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.
 - Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.

Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

WARNING: Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.

Problem

– Possible cause

• Remedy

No sound /power

– Volume not adjusted

• Adjust the VOLUME.

– Batteries dead/ incorrectly inserted

• Insert (fresh) batteries correctly

– Headphones connected to the set

• Disconnect headphones.

Poor radio reception

– Weak radio signal

• For FM, extend, incline and turn the telescopic antenna for best reception. Reduce its length if the signal is too strong.

• For MW, the set uses a built-in antenna. Direct this antenna for best reception by turning the whole set.

- When inserting new batteries, do not try to mix old batteries with the new ones.
- Remove the batteries if the set is not to be used for a long time. Batteries contain chemical substances, so they should be disposed of properly.

Batteries contain chemical substances, so they should be disposed of properly.

This set complies with the radio interference requirements of the European Union.

General information

Antennas

- For FM, extend, incline and turn the telescopic antenna for best reception. Reduce its length if the signal is too strong.
- For MW, the set uses a built-in antenna. Direct this antenna for best reception by turning the whole set.

Connecting headphones

- You can connect headphones to the headphone socket.
→ The loudspeakers will then be switched off.

