

QUICK START

MISE EN SERVICE RAPIDE

INICIO RÁPIDO




Thanks for buying **Philips AJ130 clock radio**.

Our **Quick Start** guides you through just some of the features on the set.

Please read our instruction booklet to really rise & shine!

# PHILIPS

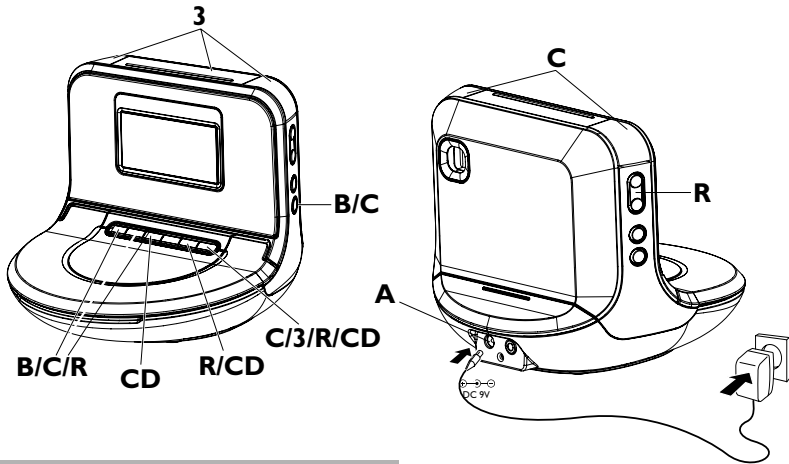

## ENGLISH

### Step A

- Connect the supplied mains adapter to the set's 9V DC jack and the plug into a wall outlet.

### Step B

#### How to set the Clock time

1. In standby mode, press and hold **PROGRAM/ SET TIME** until the time digits flash.
2. Press and hold **HOUR/MIN** to adjust time.
3. Press **PROGRAM/ SET TIME** to confirm.

### Step C

#### How to set the Alarm mode and Alarm time

1. In standby mode, press **AL1** or **AL2** once or more to select alarm mode (radio mode, CD mode or buzzer mode).
2. Press and hold **HOUR/MIN** to adjust time.
3. Press **PROGRAM/ SET TIME** to confirm.

#### Helpful hints:

- If you have selected **RADIO**, make sure you have properly tuned to a station before turning off the set.

### 3 ways to switch off the alarm

- Either press briefly: **AL1/AL2/POWER** or **REPEAT ALARM**.

### Radio

1. Press **POWER** to switch on from standby.
2. Press **SOURCE** to select **TUNER**.
3. Press and hold **PROGRAM/ SET TIME** to program all available stations.
4. Press **PRESET ▼ ▲** until the desired preset station is displayed.

### CD playback

This CD clock radio can play audio discs including CD-R, CD-RW, and MP3.

1. Press **POWER** to switch on from standby.
2. Press **SOURCE** to select **CD**.
3. Lift the CD door to open.
4. Insert a CD with the printed side facing up, and close the CD door.
5. Press to **▶II** start playback.