



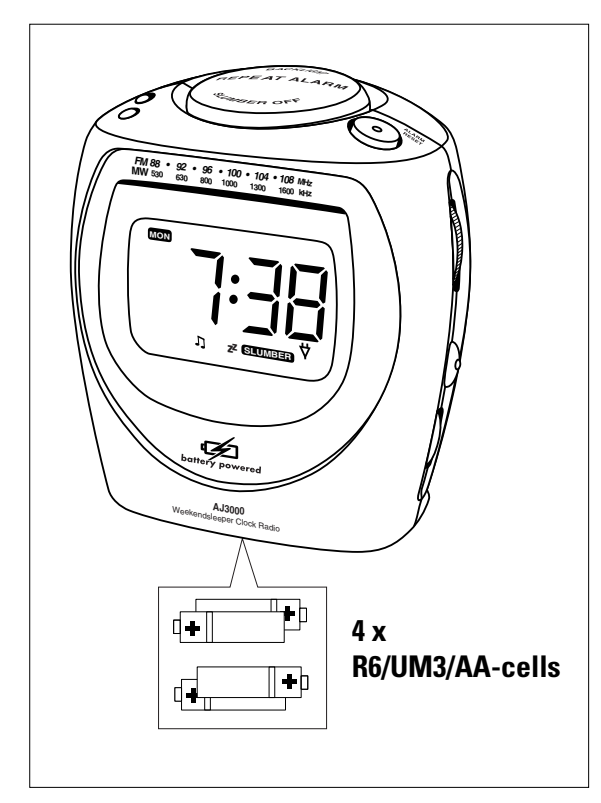

English, Français, Español, Deutsch, Nederlands, Italiano. Let's make things better. PHILIPS. AJ 3000 family - Clock radio.

3140 115 2567 1 Printed in Hong Kong TC text/RR/9843

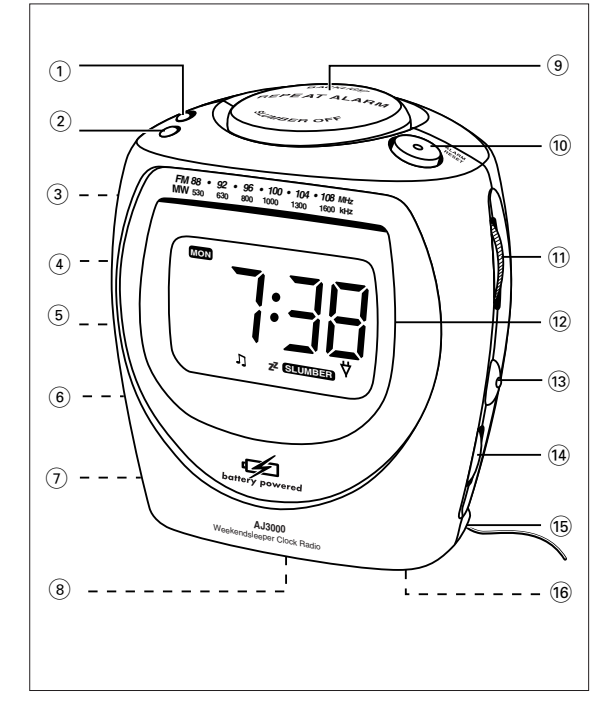

English. FUNCTIONAL OVERVIEW. Batteries (not included). 1 SLUMBER - to play the radio for a preset period of time. 2 RADIO ON/OFF - to switch on/off radio. 3 ALARM MODE/OFF - to switch on/off alarm(s) by buzzer, radio or both. 4 WEEKENDSLEEPER Z MODE/OFF - to switch off the alarm function during the weekend. 5 ALARM/TIME/DAY SET - to set time for the buzzer alarm; to set time for the radio alarm; to set clock time; to set the day. 6 UP DOWN - to adjust both the hours and minutes for clock/alarm times; to select the alarm mode; to select the alarmweekend sleeper mode. 7 Socket for AC/DC 7.5 V adapter. 8 Battery compartment. 9 REPEAT ALARM - to switch off the alarm for a 5 minute period; to switch display backlight on/off; to switch off slumber. 10 24-hour ALARM RESET - to automatically reset the alarm for the same time next day. 11 TUNING - to tune to radio stations. 12 Display - to show the clock/alarm times and status of the set. 13 BAND - to select FM/MW (LW) waveband. 14 VOLUME - to adjust the sound level. 15 Pigtail - aerial for FM reception. 16 RESET - to reset the clock data.

SELF-POWERED BACK-UP. The self-powered back-up conveniently allows your day, alarm and clock time settings to be stored for up to 3 minutes when there is a power interruption... GENERAL FEATURES. Reset. Demo mode. Display backlight. RADIO. Setting the time & day. MEMOIRE AUTONOME. REGLAGE DE L'HEURE ET DU JOUR. RADIO. EMPLOI DU REVEIL. MISE HORS SERVICE DU SIGNAL DE REVEIL. SLUMBER (Arrêt programmé).

USING THE ALARM. General. Setting the alarm by radio or buzzer. To review the alarm time. SWITCHING OFF THE ALARM. There are three ways of switching off the alarm. 24-hour alarm reset. SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

English. FUNCTIONAL OVERVIEW. Batteries (not included). 1 Open battery door and insert four batteries... 2 Remove the batteries from the set if they are exhausted... 3 ALARM/TIME/DAY SET... 4 WEEKENDSLEEPER Z MODE/OFF... 5 ALARM/TIME/DAY SET... 6 UP DOWN... 7 Socket for AC/DC 7.5 V adapter... 8 Battery compartment... 9 REPEAT ALARM... 10 24-hour ALARM RESET... 11 TUNING... 12 Display... 13 BAND... 14 VOLUME... 15 Pigtail... 16 RESET.

SETTING THE TIME & DAY. The clock and alarm times and the day need to be entered separately. MEMOIRE AUTONOME. REGLAGE DE L'HEURE ET DU JOUR. RADIO. EMPLOI DU REVEIL. MISE HORS SERVICE DU SIGNAL DE REVEIL. SLUMBER (Arrêt programmé).

USING THE ALARM. General. Setting the alarm by radio or buzzer. To review the alarm time. SWITCHING OFF THE ALARM. There are three ways of switching off the alarm. 24-hour alarm reset. SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

Français. APERÇU DES FONCTIONS. Batteries (non comprises à la livraison). 1 SLUMBER - mise en marche de la radio avec arrêt programmé... 2 RADIO ON/OFF - marche/arrêt de la radio. 3 ALARM MODE/OFF - marche/arrêt de l'alarme par ronfleur, radio ou les deux. 4 WEEKENDSLEEPER Z MODE/OFF - arrêt de la fonction de réveil pendant les week-ends. 5 ALARM/TIME/DAY SET... 6 UP DOWN... 7 Prise pour adaptateur AC/DC 7,5 V... 8 Compartiment piles... 9 REPEAT ALARM... 10 ALARM RESET 24 heures... 11 ALARM RESET 24 heures... 12 Afficheur... 13 BAND... 14 VOLUME... 15 Antenne... 16 RESET.

REGLAGE DE L'HEURE ET DU JOUR. Les heures d'horloge et de réveil ainsi que le jour doivent être introduits séparément. RADIO. EMPLOI DU REVEIL. MISE HORS SERVICE DU SIGNAL DE REVEIL. SLUMBER (Arrêt programmé).

USING THE ALARM. General. Setting the alarm by radio or buzzer. To review the alarm time. SWITCHING OFF THE ALARM. There are three ways of switching off the alarm. 24-hour alarm reset. SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

Français. APERÇU DES FONCTIONS. Batteries (non comprises à la livraison). 1 SLUMBER - mise en marche de la radio avec arrêt programmé... 2 RADIO ON/OFF - marche/arrêt de la radio. 3 ALARM MODE/OFF - marche/arrêt de l'alarme par ronfleur, radio ou les deux. 4 WEEKENDSLEEPER Z MODE/OFF - arrêt de la fonction de réveil pendant les week-ends. 5 ALARM/TIME/DAY SET... 6 UP DOWN... 7 Prise pour adaptateur AC/DC 7,5 V... 8 Compartiment piles... 9 REPEAT ALARM... 10 ALARM RESET 24 heures... 11 ALARM RESET 24 heures... 12 Afficheur... 13 BAND... 14 VOLUME... 15 Antenne... 16 RESET.

REGLAGE DE L'HEURE ET DU JOUR. Les heures d'horloge et de réveil ainsi que le jour doivent être introduits séparément. RADIO. EMPLOI DU REVEIL. MISE HORS SERVICE DU SIGNAL DE REVEIL. SLUMBER (Arrêt programmé).

USING THE ALARM. General. Setting the alarm by radio or buzzer. To review the alarm time. SWITCHING OFF THE ALARM. There are three ways of switching off the alarm. 24-hour alarm reset. SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

Español. FUNCIONES. 1 SLUMBER - para poner la radio durante un tiempo preseleccionado. 2 RADIO ON/OFF - para encender/apagar la radio. 3 ALARM MODE/OFF - para activar/desactivar la alarma de zumbido, la radio o ambas. 4 WEEKENDSLEEPER Z MODE/OFF - para desactivar la función de la alarma durante el fin de semana. 5 ALARM/TIME/DAY SET... 6 UP DOWN... 7 Entrada para el adaptador AC/DC 7,5 V... 8 Compartimento de las pilas... 9 REPEAT ALARM... 10 24 horas ALARM RESET... 11 TUNING... 12 Pantalla... 13 BANDA... 14 VOLUMEN... 15 Antena... 16 RESET.

REGLAJE DE LA HORA Y EL DÍA. Las horas d'horloge et de réveil ainsi que le jour doivent être introduits séparément. RADIO. EMPLOI DU REVEIL. MISE HORS SERVICE DU SIGNAL DE REVEIL. SLUMBER (Arrêt programmé).

USING THE ALARM. General. Setting the alarm by radio or buzzer. To review the alarm time. SWITCHING OFF THE ALARM. There are three ways of switching off the alarm. 24-hour alarm reset. SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

Español. FUNCIONES. 1 SLUMBER - para poner la radio durante un tiempo preseleccionado. 2 RADIO ON/OFF - para encender/apagar la radio. 3 ALARM MODE/OFF - para activar/desactivar la alarma de zumbido, la radio o ambas. 4 WEEKENDSLEEPER Z MODE/OFF - para desactivar la función de la alarma durante el fin de semana. 5 ALARM/TIME/DAY SET... 6 UP DOWN... 7 Entrada para el adaptador AC/DC 7,5 V... 8 Compartimento de las pilas... 9 REPEAT ALARM... 10 24 horas ALARM RESET... 11 TUNING... 12 Pantalla... 13 BANDA... 14 VOLUMEN... 15 Antena... 16 RESET.

REGLAJE DE LA HORA Y EL DÍA. Las horas d'horloge et de réveil ainsi que le jour doivent être introduits séparément. RADIO. EMPLOI DU REVEIL. MISE HORS SERVICE DU SIGNAL DE REVEIL. SLUMBER (Arrêt programmé).

USING THE ALARM. General. Setting the alarm by radio or buzzer. To review the alarm time. SWITCHING OFF THE ALARM. There are three ways of switching off the alarm. 24-hour alarm reset. SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

SLUMBER. This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. Setting the Slumber. MAINTENANCE. ENVIRONMENTAL INFORMATION. Troubleshooting. WARNING: Under no circumstances should you try to repair the set yourself...

