


## QUICK START



Thanks for buying **Philips AJ300D Docking Entertainment System**.  
Our **Quick Start** guides you through just some of the features on the set.  
Please read our instruction booklet to really rise & shine!

# PHILIPS

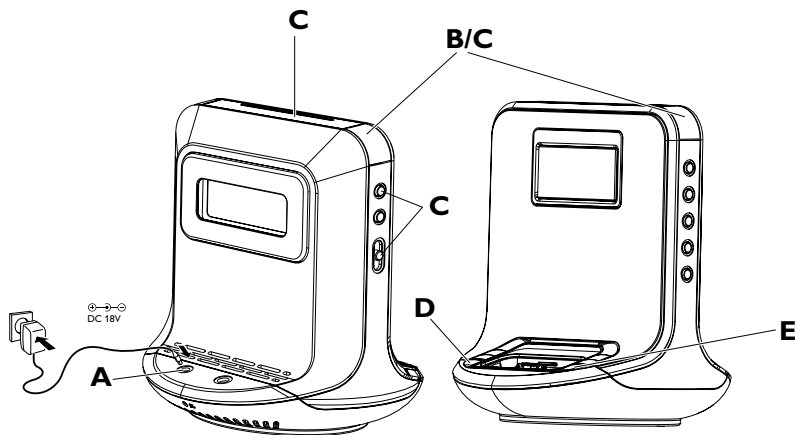

## ENGLISH

### Step A

- Connect the supplied mains adapter to the set's 18V DC jack and the plug into a wall outlet.

### Step B

#### How to set the Clock & Alarm time

1. Press and hold **TIME SET** or **ALM1 / ALM2** until the hour digits flash.
2. Press and hold **◀▶** to adjust time.
3. Press **TIME SET** or **ALM1 / ALM2** to confirm.
4. Repeat the **steps 2~3** to complete all the other time items setting.

### Step C

#### Selecting the Alarm mode

In standby mode, slide the **DOCK/BUZZER/TUNER** to select desired mode.

#### Helpful hints:

- If you have selected **TUNER** alarm mode, make sure you have properly tuned to a station before turning.
- If you have selected **DOCK** alarm mode (only for Apple iPod and Philips SA9100, SA9200), make sure you have docked the compatible player, or buzzer mode will be selected automatically.

### 3 ways to switch off the alarm

- Either press briefly: **POWER** or **REPEAT ALARM/BRIGHTNESS CONTROL**.
- Press **ALM1** or **ALM2**.

### Step D

#### Tuning to radio station

1. Press **TUNER/AUX** once to switch on the radio.
2. Press **◀▶** one second or more to tune to your station.

- To store a preset, hold down briefly on a **PRESET** button **1-5** until you hear a double beep.

### Step E

#### Playing Apple iPod/Philips GoGear using AJ300D

1. Make sure that the inserted dock is compatible with the player to be played.
- The iPod connector is pre-installed with the AJ300D main unit. For Philips GoGear users, change to the supplied GoGear connector before use.
2. Select the correct dock adaptor from the supplied, then snap the adaptor into the dock to provide a snug fit for the player.
  - For the iPod adaptors, the indication on the adaptor's back fits specific iPod player.
  - For the Philips adaptors, a number marked on the adaptor's back fits specific Philips GoGear player.
3. Snap the compatible iPod/GoGear player into the dock connector.
  - Press **DOCK** to select the dock mode.
  - Make sure that you have powered on Philips GoGear before selecting **DOCK** source.
5. For iPod, the connected player will play automatically.
  - For Philips GoGear, press **▶||** to start playback if the playback doesn't start.

#### Helpful hints:

- Refer to the user manual supplied for detailed descriptions of "Compatible portable player", "Changing the dock", "Selecting the correct dock adaptor" and the important notes for dock operation.

