 




CONSUMER ELECTRONICS

PHILIPS

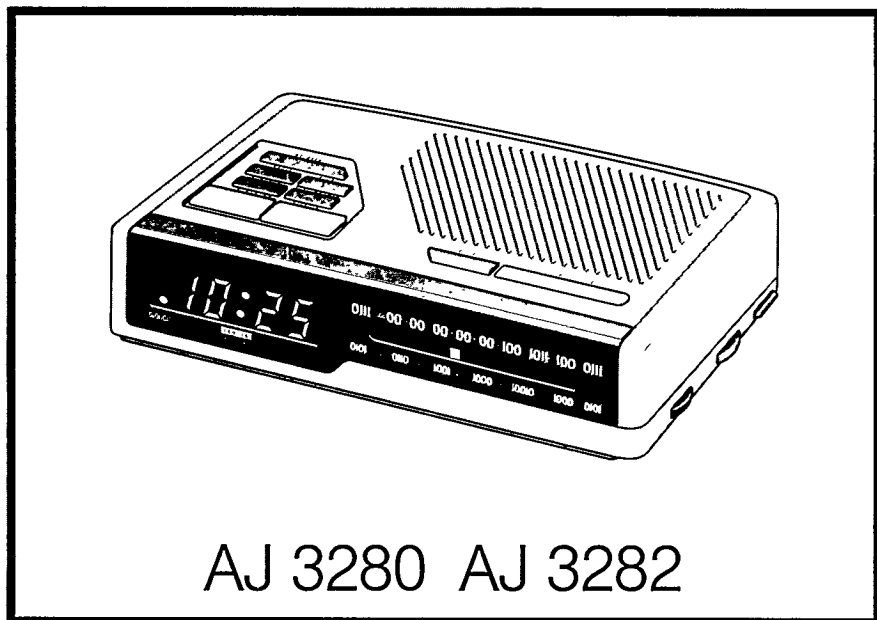

AJ 3280 AJ 3282



GB

Clock radio

F

Radio réveil

D

Radio-Wecker

NL

Klokradio

E

Radio reloj

I

Radio a sveglia

S

Klockradio

SF

Kelloradio

English	page 4
Illustrations	page 3
Français	page 8
Illustrations	page 3
Deutsch	Seite 12
Abbildungen	Seite 3
Nederlands	pagina 16
Afbeeldingen	pagina 3
Español	página 20
Ilustraciones	página 3
Italiano	pagina 24
Illustrazioni	pagina 3
Svenska	sida 28
Figurer	sida 3
Suomi	sivu 32
Kuvat	sivu 3

Dansk

Typeskiltet findes på undersiden af apparaten.

 
Dette produkt overholder kravene til radio-interferens, som overholdes i EF-regulativerne (Europæisk Fællesmarked).

Bemærk: Netafbryderen er sekundært indkoblet og afbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lysnettet så længe netstikket sidder i stikkontakten.


Norsk

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundært innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

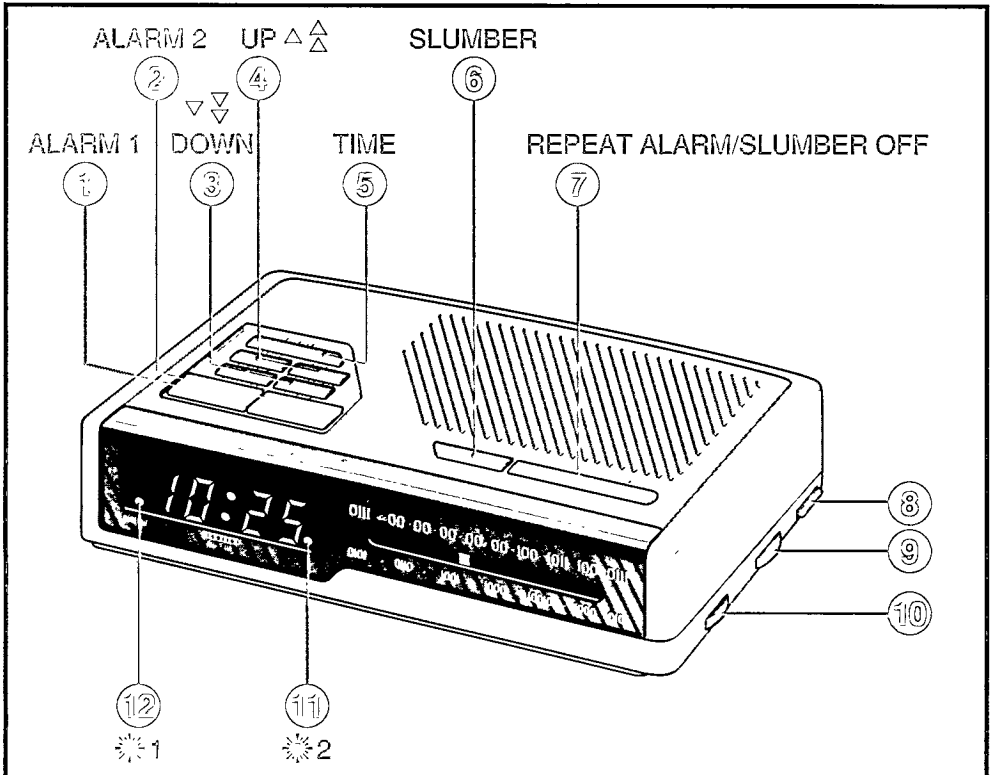

9V BATTERY 6F 22

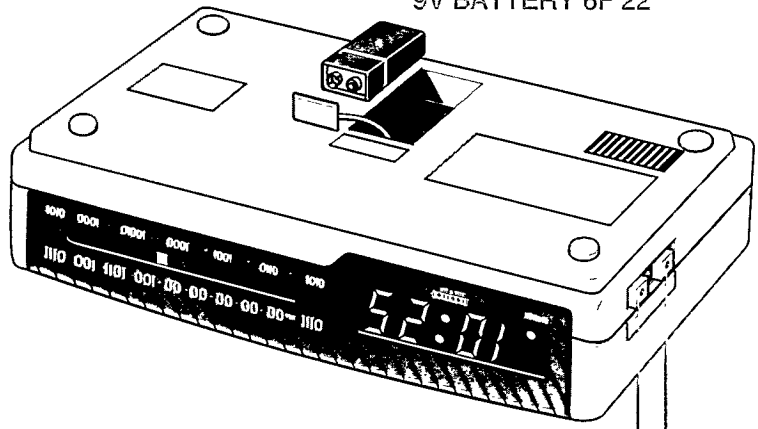 

RADIO ON/OFF/AUTO 14
 ALARM 1/2/1+2 13

WHICH BUTTONS ARE WHERE ?

- ① ALARM 1 - to set alarm time 1
- ② ALARM 2 - to set alarm time 2
- ③ DOWN - fast ▼ and slow ▼ backward
- ④ UP - fast ▲ and slow ▲ forward
- ⑤ TIME - to set time
- ⑥ SLUMBER - to slumber/set slumber time
- ⑦ REPEAT ALARM/SLUMBER OFF
repeat alarm - to switch off alarm temporarily
slumber off - to switch off slumber function
- ⑧ BAND - for waveband selection
- ⑨ TUNING - for station selection
- ⑩ VOLUME - to adjust sound level
- ⑪ INDICATOR 2 - alarm 2 is switched on
- ⑫ INDICATOR 1 - alarm 1 is switched on
- ⑬ alarm switch
ALARM 1 - to wake by radio at alarm time 1
ALARM 2 - to wake by buzzer at alarm time 2
1+2 - to wake at alarm time 1 by radio and at alarm time 2 by buzzer
- ⑬ function switch
AUTO - alarm is switched on
RADIO ON - radio is switched on
OFF - radio and alarm are switched off

This appliance conforms to the radio interference suppression requirements of the European Community.

The type plate is located on the base of the appliance.

MAINS CONNECTION

Check if the mains voltage as shown on the type plate on the base of the set corresponds to your local mains supply. If it does not, consult your dealer or service organisation

As soon as you insert the mains plug into the wall socket, the figures on the display will blink. This means that you must set the correct time.

To disconnect the set from the mains completely, withdraw the mains plug from the wall socket.

Important note for users in U.K.:

When fitting a mains plug to the mains lead proceed as follows:
The wires in the mains lead are coloured in accordance with the following code: Blue - Neutral, Brown - Live.
These colours may not correspond with the colour markings identifying the terminals in your plug, so proceed as follows:
Connect the Brown wire to the terminal marked L or coloured Red.
Connect the Blue wire to the terminal marked N or coloured Black.
No connection is necessary to the earth terminal.

Note: This apparatus must be protected by a 3 Amp Fuse if a 13 Amp plug is used or, if any other type of plug is used, by a 5 Amp Fuse either in the plug or adapter or at the distribution board. If in doubt consult a qualified electrician.

Warning: When this unit is not in use and also before attempting internal examination, remove the mains plug from the wall socket.

CLOCK

Clock display

The clock display shows the time. The display also indicates whether you have switched on the alarm. If alarm 1 is on, then INDICATOR ⑫ lights up. For alarm 2 INDICATOR ⑪ lights up and for the dual alarm both light up.

Appliances provided with a 12-hour clock system

Appliances provided with a 12-hour clock system have an *PM-indicator*.

In case of PM, the PM-indicator will light up (on = PM, off = AM).

Setting the time

● Keep TIME button ⑤ depressed and set the correct time as follows:

- Fast and slow **forward** with the UP ▲ + ▲ buttons ④.
- Fast and slow **backward** with the DOWN ▼ + ▼ buttons ③.

OPERATION

ALARM

Alarm time

If you wish to use the alarm, then you should first of all set the alarm time.

The alarm time is the time when you wish to be woken up. You may set two different alarm times. This can be useful if, for example, you need to be woken at a different time during the week than at the weekend.

Note: With alarm 1 you will always be woken by the radio and with alarm 2 by the buzzer. During the week, for example, you may choose to be woken by the buzzer (alarm 2) and at the weekend by the radio (alarm 1).

Setting alarm time 1

- Press ALARM 1 button ①. The display will now show alarm time 1.
 - Keep button ① depressed and set the required alarm time with the UP ▲+▲ buttons ④ and DOWN ▼+▼ buttons ③.
 - Release ALARM 1 button ①. The display will again show the correct time.
- You can check alarm time 1 by simply pressing button ①.

Setting alarm time 2

- Press ALARM 2 button ②. The display will now show alarm time 2.
 - Keep button ② depressed and set the required alarm time with the UP ▲+▲ ④ and DOWN ▼+▼ ③ buttons.
 - Release ALARM 2 button ②. The display will again show the correct time.
- You can check alarm time 2 by simply pressing button ②.

ALARM ON

Switching on alarm 1

- Set function switch ⑭ to AUTO and the alarm function is switched on.
- Select ALARM 1 with alarm switch ⑬. On the display INDICATOR ⑫ will light up. You have now switched on alarm 1.
- At the set alarm time 1 you will be woken by the **radio**.

Switching on alarm 2

- Set function switch ⑭ to AUTO and the alarm function is switched on.
- Select ALARM 2 with alarm switch ⑬. On the display INDICATOR ⑪ will light up. You have now switched on alarm 2.
- At the set alarm time 2 you will be woken by the **buzzer**.

Switching on dual alarm +

The clock radio can also wake you at two different alarm times on the same day. For this you should use the **dual alarm**.

- Set the function switch ⑭ to AUTO. The alarm function is now switched on.
- Select 1+2 with alarm switch ⑬. INDICATOR ⑫ and ⑪ will light up.
- You will be woken at alarm time 1 by the radio and at alarm time 2 by the buzzer.

OPERATION

ALARM OFF

You can switch off the alarm in two ways.

Switching off temporarily

● Press ALARM REPEAT button (7). With this button you can switch off the alarm temporarily. After 6-7 minutes the alarm (radio and/or buzzer) will come on again. If you press the ALARM REPEAT button again, then the same thing will happen.

The following day you will again hear the alarm signal at the set alarm time.

Switching off permanently

● By setting the function switch (14) to OFF you will switch all alarm functions off. On the display INDICATOR (12) and (11) will go out.

If you want to be woken again the next day, then you must reset switch (13) to AUTO before going to sleep.

● If you are using the dual alarm, then you should also set function switch (14) to OFF in order to switch off the respective alarm. After this you should however reset the function switch to AUTO, so that you are also woken at the other alarm time.

If you fail to switch off the alarm yourself, then the alarm call will always stop automatically after one hour.

RADIO

You may use the appliance simply as a radio.

Switching on the radio

● Set function switch (13) to RADIO ON. The radio will now come on.

● Select the waveband with the BAND switch (8)

● Select the required station with the TUNING knob (9).

● The sound level is adjusted with the aid of the VOLUME control (10).

Switching off the radio

You can switch off the radio by setting function switch (14) to OFF.

Aerials

The AM aerial is built into the appliance. You may have to adjust the position of the clock radio slightly for better reception.

For FM reception there is an aerial wire at the rear of the appliance. You should extend this wire and adjust slightly to obtain optimum reception.

OPERATION

SLUMBERING

The clock radio has a built-in **slumber function**. With this function you can continue to listen to the radio while falling asleep. You do not need to switch off the radio yourself. This happens automatically. The period during which you continue to listen to the radio is called the slumber time. You can set this yourself. The maximum slumber time is 59 minutes.

Slumber time

- If you wish to slumber for **59 minutes**, you should simply press SLUMBER button (6). As long as you press the button, the display will show a slumber time of 59 minutes.
- If you wish to slumber for **less than 59 minutes**, then keep SLUMBER button (6) depressed. The display will now slowly begin to count down from 59 to 00 minutes. As soon as the required slumber time is reached, release the button.

You may switch off the radio before the slumber time has expired.

- Press the button SLUMBER OFF (7) and the radio will switch off.

Note:

- The slumber function will **not** operate if function switch (4) is ON, because the radio will then simply stay on.
- The slumber function has no influence on the alarm setting.
- During slumbering the radio is often on very low. Bear this in mind if you wish to be woken the next day, as you will perhaps sleep through the sound of the radio.

MAINS VOLTAGE

POWER BREAKDOWN

As soon as the power fails, the **whole** appliance will be switched off.

When the power returns, the figures on the display will begin to **blink**. The clock radio is thereby indicating that you must set the correct time and alarm time.

BATTERY

You may fit a **9 volt battery** in the clock radio. If the power then fails, the **clock** will in any case continue to operate. This will not however be visible, because the battery does not power the lighting of the clock display. As soon as the power returns the display will show the correct time.

To be perfectly clear: **Alarm, radio and display do not operate on the battery.**

- Insert the battery into the compartment in the base of the appliance (see illustration).

Recommendation

Replace the battery once a year. It cannot be stated precisely how long the battery will last. This depends completely on how often and for how long the power fails. This may vary from country to country or even region to region.

If you will not be using the appliance for any length of time, then it is advisable to remove the battery from the appliance, to avoid the possibility of leakage and consequently damage to the appliance.

MAINTENANCE

- Fingerprints, dust and dirt on the appliance should be removed with a clean, damp cloth or chamois leather. Do not use products containing abrasives or solvents for cleaning (spirit, thinner, alcohol etc.), as these may damage the casing.
- Rain, damp and excessive heat are bad for the appliance. The clock radio should not therefore be left in direct sunlight or near heating apparatus.

