

CD Clock Radio

AJ3915

Register your product and get support at
www.philips.com/welcome

Quick start

Mise en service rapide

Inicio rápido

Schnellstart

Snelstart



Avvivo rápido



Thanks for buying **Philips AJ3915 CD clock radio**.

Our **Quick Start** guides you through just some of the features on the set.
Please read our instruction booklet to really rise & shine!

PHILIPS

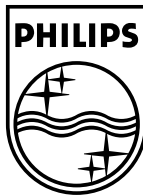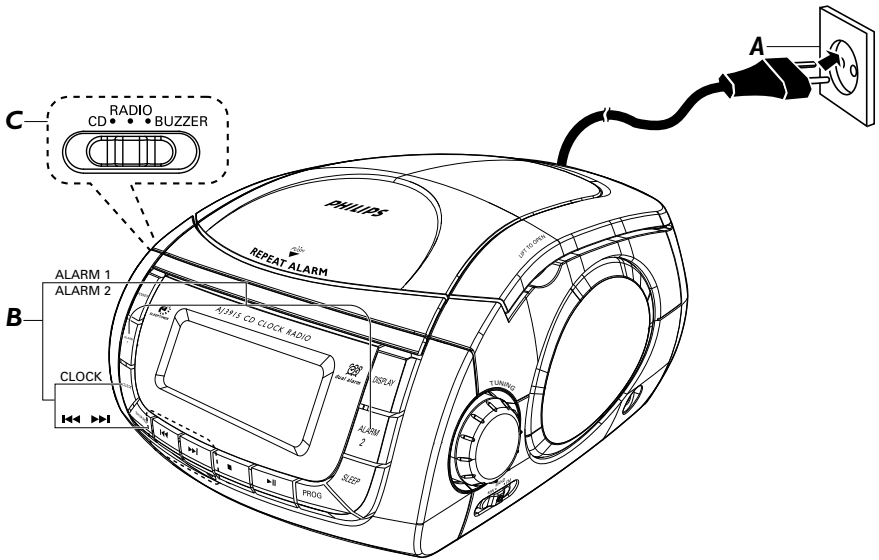

English

Quick start as easy as ABC!

Step A

- Plug to the wall outlet.

Step B

Setting the Clock/Alarm time

1. Press and hold **CLOCK** or **ALARM 1/ ALARM 2** until clock digit for hour flashes.
2. Press repeatedly, or hold down **◀ / ▶** to adjust the hours.
3. Press **CLOCK** or corresponding **ALARM 1/ ALARM 2** to confirm the hour setting, and the clock digits for minute flashes.
4. Press repeatedly, or hold down **◀ / ▶** to adjust the minutes.
5. Press **CLOCK** or corresponding **ALARM 1/ ALARM 2** to confirm the minute setting.
 - Corresponding ALM1 or ALM2 is displayed. when alarm time is set to activate.

Step C

Selecting the Alarm mode

1. Press **POWER** to switch to standby.
2. Select your choice of alarm mode: either CD, radio, or buzzer by using the **CD•RADIO•BUZZER** slider.
 - At the set alarm time, the CD or radio or buzzer will switch on automatically.

3 ways to switch off the alarm

- Press once corresponding **ALARM 1** or **ALARM 2**, or press **POWER** (ALM1 or ALM2 is still displayed.).
- Press **REPEAT ALARM** (ALM1 or ALM2 is still displayed, yet flashing.).
- Press repeatedly corresponding **ALARM 1** or **ALARM 2** until ALM1 or ALM2 disappears.

ENGLISH

Quick start as easy as ABC!

Step A

- Plug to the wall outlet.

Step B

Setting the Clock/Alarm time

1. Press and hold **CLOCK** or **ALARM 1/ ALARM 2** until clock digit for hour flashes.
2. Press repeatedly, or hold down **◀ / ▶** to adjust the hours.
3. Press **CLOCK** or corresponding **ALARM 1/ ALARM 2** to confirm the hour setting, and the clock digits for minute flashes.
4. Press repeatedly, or hold down **◀ / ▶** to adjust the minutes.
5. Press **CLOCK** or corresponding **ALARM 1/ ALARM 2** to confirm the minute setting.
 - Corresponding ALM1 or ALM2 is displayed. when alarm time is set to activate.