

## CD Clock Radio

AJ3916

### Quick start



Thanks for buying **Philips AJ3916 series CD clock radio**.

Our **Quick Start** guides you through just some of the features on the set. Please read our instruction booklet to really rise & shine!

# PHILIPS

# English

## Clock/Alarm

### Setting the Clock/Alarm time

1. Press and hold **MODE** or **ALARM 1/ALARM 2** until clock digit for hour flashes.
  2. Press repeatedly, or hold down **←/→/▶/▶** to adjust the hours.
  3. Press **MODE** or corresponding **ALARM 1/ALARM 2** to confirm the hour setting and the clock digits for minute flashes.
  4. Press repeatedly, or hold down **←/→/▶/▶** to adjust the minutes.
  5. Press **MODE** or corresponding **ALARM 1/ALARM 2** to confirm the minute setting.  
For ALARM only – **Selecting the Alarm mode**
  6. Press **SOURCE** repeatedly to select the desired alarm sound among Sound of nature, CD, Radio or a buzzer.
- ### 3. Ways to switch off the alarm
- To activate 'Alarm Reset' during the alarm call, press **SLEEP**.
  - To activate 'Alarm Repeat' during the alarm call, press **REPEAT ALARM/BRIGHTNESS CONTROL**.
  - To deactivate the alarm completely, press once corresponding **ALARM 1** or **ALARM 2** until **»** disappears.

## CD playback

This CD clock radio supports audio discs including CD-R (CD-recordable), CD-RW (CD-rewritable).

1. Press **STANDBY-ON** to switch on from clock mode.
2. If CD is not selected, press **SOURCE** once or more to select it.
3. Lift the CD door to open.
4. Insert a CD with printed side facing up, and close the CD door.
5. Press **HI** to start playback.
6. To stop playback, press **■**.

## Radio

### Autostore

1. Press repeatedly **SOURCE** to select **FM** or **MW**.
2. Press and hold **PROG** until the frequency in the display starts running.  
→ Available stations are programmed (MW or FM). After all stations are stored.

### To listen to a preset or autostore station

Press the **PRESET +/-** buttons once or more until the desired preset station is displayed.

