

## CD Clock Radio




AJ3916

Quick start  
Mise en service rapide  
Inicio rápido  
Schnellstart  
Snelstart  
Avvivo rápido



Thanks for buying **Philips AJ3916 series CD clock radio**.  
Our **Quick Start** guides you through just some of the features on the set.  
Please read our instruction booklet to really rise & shine!

# PHILIPS

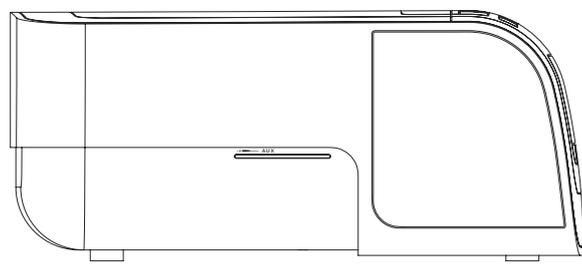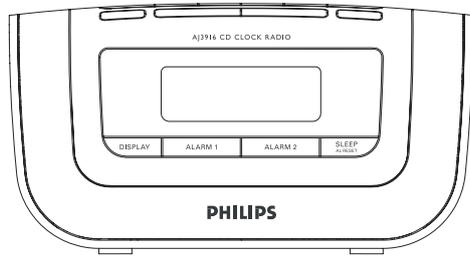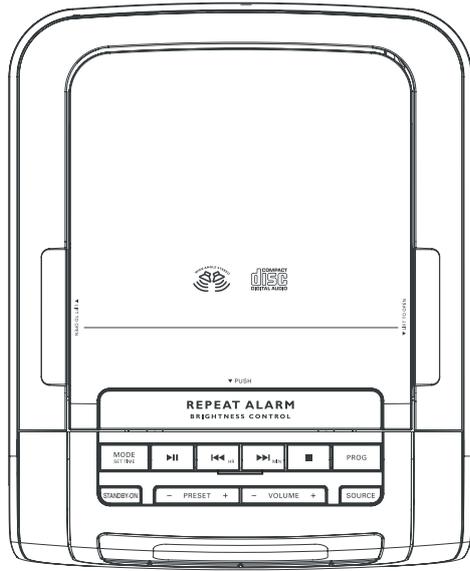

## English

### Clock/Alarm

#### Setting the Clock/Alarm time

1. Press and hold **MODE** or **ALARM 1/ALARM 2** until clock digit for hour flashes.
  2. Press repeatedly, or hold down **◀◀ / ▶▶** to adjust the hours.
  3. Press **MODE** or corresponding **ALARM 1/ALARM 2** to confirm the hour setting, and the clock digits for minute flashes.
  4. Press repeatedly, or hold down **◀◀ / ▶▶** to adjust the minutes.
  5. Press **MODE** or corresponding **ALARM 1/ALARM 2** to confirm the minute setting.
- For ALARM only – **Selecting the Alarm mode**
6. Press **SOURCE** repeatedly to select the desired alarm sound among Sound of nature, CD, Radio or a buzzer.

### 3. Ways to switch off the alarm

- To activate 'Alarm Reset' during the alarm call, press **SLEEP**.
- To activate 'Alarm Repeat' during the alarm call, press **REPEAT ALARM/BRIGHTNESS CONTROL**.
- To deactivate the alarm completely, press once corresponding **ALARM 1** or **ALARM 2** until  disappears.

### CD playback

This CD clock radio supports audio discs including CD-R (CD-recordable), CD-RW (CD-rewritable).

1. Press **STANDBY-ON** to switch on from clock mode.
2. If CD is not selected, press **SOURCE** once or more to select it.
3. Lift the CD door to open.
4. Insert a CD with printed side facing up, and close the CD door.
5. Press **▶▶** to start playback.
6. To stop playback, press **■**.

### Radio

#### Autostore

- 1 Press repeatedly **SOURCE** to select **FM** or **MW**.
- 2 Press and hold **PROG** until the frequency in the display starts running.  
→ Available stations are programmed (MW or FM). After all stations are stored.

#### To listen to a preset or autostore station

Press the **PRESET +/-** buttons once or more until the desired preset station is displayed.