


PHILIPS CONSUMER ELECTRONICS COMPANY

A Division of Philips Electronics North America Corporation
Knoxville, Tennessee 37914-1810, U.S.A.



CD Clock Radio

 AJ 3950

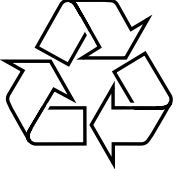

Meet PHILIPS at the internet <http://www.philipsusa.com>



Printed in Hong Kong

Cmm/RB/0046

Toll Free Help Line
Ligne d'assistance gratuite sans frais
Línea de ayuda telefónica sin cargo
800-531-0039

Let's make things better.

PHILIPS

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips purchase is registered, you're eligible to receive all the privileges of owning a Philips product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification
Registering your product within 10 days confirms your right to maximum protection under the event of terms and conditions of your Philips warranty.

Owner Confirmation
Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration
Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

For Customer Use
Enter below the Serial No. which is located on the bottom of the cabinet. Retain this information for future reference.

Model No. _____
Serial No. _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

IMPORTANT SAFETY INSTRUCTIONS
Read before operating equipment

- Read these instructions - All the safety and operating instructions should be read before the appliance is operated.
- Keep these instructions - The safety and operating instructions should be retained for future reference.
- Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions - All operating and use instructions should be followed.
- Do not use this apparatus near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
- Clean only with a damp cloth. The appliance should be cleaned only as recommended by the manufacturer.
- Install in accordance with the manufacturers instructions. Do not block any of the ventilation openings. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION. To prevent battery leakage which may result in bodily injury or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.

English CONTROLS/ INSTALLATION

- CD PLAYER**
- STOP** - stops CD playback;
 - PLAY/PAUSE** - starts/ pauses CD playback;
 - SEARCH** - skips CD tracks/ searches for a particular passage.
- GENERAL**
- SLEEP** - activates and adjusts the sleep time;
 - REPEAT ALARM/ BRIGHTNESS CONTROL** - changes the brightness of the display illumination;
 - WEEKEND-SLEEPER** - deactivates alarm 1 and/ or 2 for the weekend;
 - ALARM 1 MODE/ OFF** - sets/ reviews/ switches off alarm 1 or 2.
- RADIO**
- ON/ OFF** - switches the radio on/ off;
 - FM AM** - selects the radio waveband;
 - SETTING TIMES**
 - ALARM 1, ALARM 2, TIME** - sets the respective alarm or clock time
 - +** - adjusts clock/ alarm times;
 - - adjusts the gentle wake minimum and maximum volume level for alarm 1 or 2;
 - 0** - selects a CD wake up track for alarm 1 or 2.
 - VOLUME** - adjusts the sound level.
 - Dial lens**

SETTING TIMES, DAY

- SET DAY** - sets the day for weekend sleeper activation.
- 24 HR RESET** - stops the active buzzer, radio or CD alarms for 24 hours.
- LIFT TO OPEN** - opens/ closes CD door.
- TUNING** - tunes to a radio station.
- Pigital** - antenna to improve FM reception.
- Power cord** - for AC power supply.
- The type plate is located on the bottom of the set.**
- This product complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:
- This device may not cause harmful interference, and
 - This device must accept any interference received, including interference that may cause undesired operation.
- CAUTION**
Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- INSTALLATION**
- Power Supply and Demo mode**
- Check if the power voltage, shown on the type plate on the bottom of the set, corresponds to your local power supply. If it does not, consult your dealer or service center.
 - Connect the power plug into the wall outlet. The power supply is now switched on and the display will show the PHILIPS demo mode.
 - PHILIPS scrolls across the display continuously.
 - Press any control (with the exception of REPEAT ALARM/ BRIGHTNESS CONTROL on the set) to exit the demo mode.
 - Disconnect the set completely from the power supply, withdraw the power plug from the wall outlet.
- Standby power consumption (clock mode).....3 W**

CD Renvoyez votre carte d'enregistrement de garantie pour vous assurer de recevoir tous les avantages auxquels vous avez droit.

- Dès que l'achat de votre appareil Philips est enregistré, vous avez droit à tous les avantages dont bénéficient les possesseurs des produits Philips.
- Remplissez et renvoyez votre carte d'enregistrement de garantie jointe à votre appareil sans tarder. Vous bénéficiez de ces avantages importants.

Vérification de garantie
Enregistrez votre produit dans les 10 jours pour confirmer votre droit à une protection maximum selon les termes et les conditions de votre garantie Philips.

Confirmation de possession
Votre carte d'enregistrement de garantie prouve que vous possédez l'appareil en cas de vol ou de perte du produit.

Enregistrement du modèle
Renvoyez votre carte d'enregistrement de garantie dès aujourd'hui pour vous assurer de recevoir toutes les informations, les offres et les bons auxquels vous avez droit en tant que possesseur de ce modèle.

Connaissez ces symboles de sécurité

ATTENTION
RISQUE DE CHOC ELECTRIQUE
NE PAS OUVRIR

 
 
ATTENTION: POUR REPARER DES CHOC ELECTRIQUES, NE PAS ENLEVER LE COUVERCLE NI LE PANEAU ARRIERE. CET APPAREIL NE COMporte AUcUN PReCISIoN REPARABLE PAR L'UTILISATEUR. CoNTErNir AUcUN ENTrEE EN TENSION CoNDACTANTE.

Cet éclair à pointe de flèche indique un matériel non isolé, situé à l'intérieur de l'unité, risque de provoquer un choc électrique. Pour la sécurité de chacun, nous vous prions de ne pas retirer le boîtier de ce produit.

Le «point d'exclamation» attire votre attention sur des sujets risquant de provoquer des problèmes de fonctionnement et d'entretien si vous ne lisez pas les informations s'y rapportant.

DANGER: NE PAS EXPOSER CET EQUIPEMENT A LA PLUIE NI A UNE HUMIDITE EXCESSIVE POUR EVITER LES RISQUES D'INCENDIE ET DE CHOC ELECTRIQUE.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

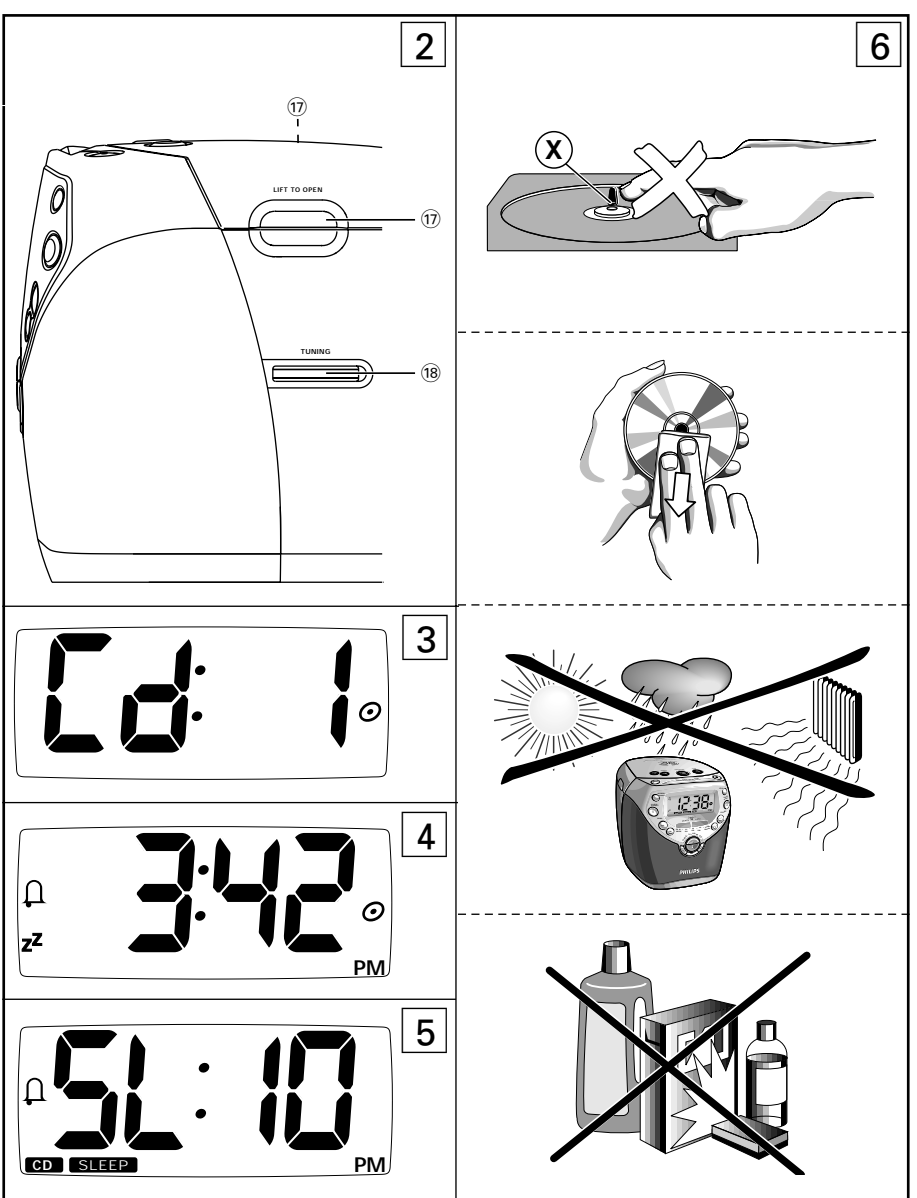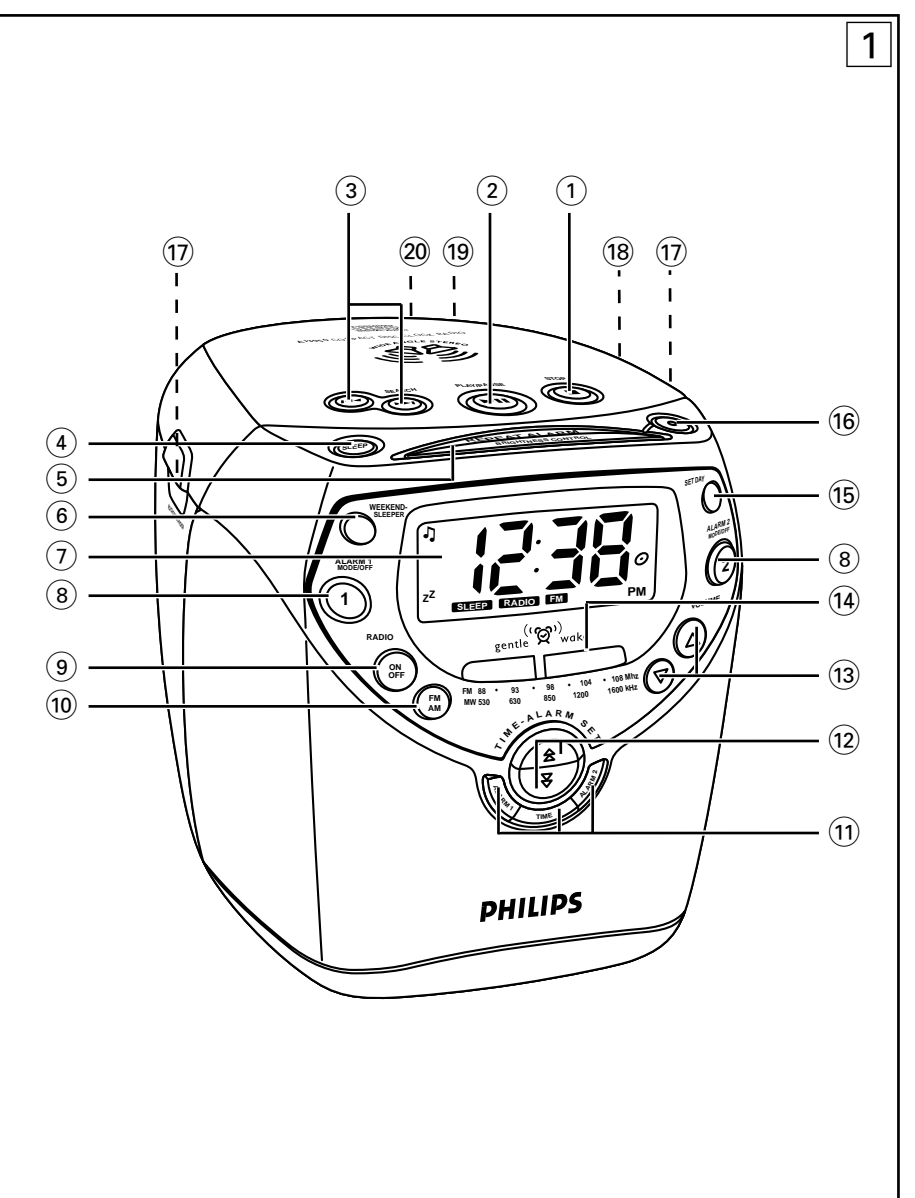

LIMITED WARRANTY

Philips Portable Compact Disc
One Year Free Exchange
This product must be carried in for an exchange.

PHILIPS PORTABLE COMPACT DISC
One Year Free Exchange
This product must be carried in for an exchange.

WHO IS COVERED?
You must have proof of purchase to exchange the product. A sales receipt or other document showing that you purchased the product is considered proof of purchase. Attach it to this owner's manual and keep both nearby.

WHAT IS COVERED?
Warranty coverage begins the day you buy your product. For one year thereafter, a defective or inoperative product will be replaced with a new, repaired or comparable product at no charge to you. A replacement product is covered only by the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

WHAT IS EXCLUDED?
Your warranty does not cover:
- labor charges for installation or setup of the product;
- adjustment of customer controls on the product; and
- installation or repair of antenna systems outside of the product.
product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country or other cause not within the control of Philips Consumer Electronics Company.
- repair of products damaged by fire, flood, lightning, or other causes not within the control of Philips Consumer Electronics Company.
- incidental or consequential damages resulting from the product.
(Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, pre-repair material, whether copyrighted or not copyrighted.)
- a product that is used for commercial or institutional purposes.

WHERE IS EXCHANGE AVAILABLE?
You may exchange the product in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide a replacement product (although there may be a delay if the appropriate product is not readily available).

BEFORE REQUESTING EXCHANGE.
Please check your owner's manual before requesting an exchange. Adjustments of the controls discussed there may save you a trip.

REMEMBER.
Please record the model and serial numbers found on the product below. Also please fill out and mail your warranty registration card promptly. It will be easier for you to notify us if necessary.

MODEL # _____
SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips Service Solutions Group, P.O. Box 2976, Longview, Texas 75606, (903) 242-4800
EL4967003 / MAC 4108 / 10-00

WEEKEND-SLEEPER/ SLEEP

flash throughout the repeat alarm duration.

- If you are using the CD alarm mode, CD playback resumes at the point interrupted by the repeat alarm.
- During the CD alarm, CD playback continues for up to an hour unless you cancel/ reset the alarm.

WEEKEND-SLEEPER

This feature deactivates the alarm every Saturday and Sunday and resumes the alarm function Monday to Friday. Make sure, however, that you have set the day first.

- See chapter on SETTING THE DAY.
- Press **WEEKEND-SLEEPER** once or more until **Z** appears for one or both alarms.
- To cancel the weekend-sleeper function repeat step 1 until **Z** disappears from the display. See figure [4].

SLEEP

About Sleep

The CD clock radio has a built-in sleep timer which enables the set to be automatically switched off during radio or CD playback after a set period of time. There are four sleep times and the set turns itself off: 10, 30, 60, 90 minutes and off.

The sleep function does not affect the operation of your alarm settings.

Setting Sleep

- Press **PLAY/PAUSE** (CD) or **ON/OFF** (radio) to switch on the respective mode.
- For the CD mode, make sure you have inserted a disc first.
- Select your sleep time by pressing **SLEEP** once or more until the desired sleep time is shown.
- To cancel **SLEEP** once or more until **SLEEP** disappears from the display
- press **REPEAT ALARM/ BRIGHTNESS CONTROL**
- press **STOP** (CD only)
- press **ON/OFF** (radio only).

Environmental Information

All unnecessary packaging material has been omitted to make the packaging easy to separate into three materials: cardboard (box), expandable polystyrene (buffer), polyethylene (bags, protective film). Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe local regulations on the disposal of packing materials and old equipment.

MAINTENANCE

General (See figure [6])

- If you do not intend to use the CD clock radio for a long time, withdraw the power plug from the wall outlet.
- Do not expose the set or CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- To clean the set, use a soft, slightly dampened chamois cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

CD player and CD handling

- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation to form and the lens of your CD player to cloud over. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always shut the CD door to keep the CD compartment dust-free. To clean, dust the compartment with a soft dry cloth.
- To take a CD out of its box, press the center spindle while lifting the CD. Always pick up the CD by the edge and replace the CD in its box after use to avoid scratching and dust.
- To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

CD-RW is non-finalized
Use a finalized CD-RW)

TROUBLESHOOTING

TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service center.

WARNING:
Do not open the set as there is a risk of electric shock! Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

Problem	-RADIO
Possible Cause	- Occasional crackling sound during FM broadcast
- Remedy	Weak signal - Extend pigtail fully
No sound	Continuous crackling/ hiss disturbance during AM broadcast
Volume not adjusted - Adjust the volume	Electrical interference from TVs, computers, fluorescent lamps, etc. - Move set away from other electrical equipment
No reaction to any operation of the buttons	-ALARM
Electrostatic discharge - Disconnect the set from the power supply and reconnect the set after 5 minutes	The alarm does not function Alarm time not set - See chapter on SETTING THE CLOCK AND ALARM TIMES
CD PLAYER	Alarm mode not selected - See chapter on SETTING THE ALARM OPTIONS
CD playback does not work CD badly scratched or dirty - Clean/ clean CD	Volume too low for radio/ CD buzzer alarm mode - See chapter on Adjusting the Gentle wake volume
Laser lens steamed up - Wait until lens has acclimatized	-WEEKEND-SLEEPER
Laser lens dirty - Clean lens by playing a CD lens cleaning disc	WEEKEND-SLEEPER does not function Day selection not set/ incorrect - See chapter on SETTING THE DAY
	WEEKEND-SLEEPER not set - Set WEEKEND-SLEEPER

Quick Reference Guide

Quick Reference Guide	Guide de référence rapide	Guía de consulta rápida
a. Setting TIME and week day	a. Réglage TIME (heure) et du jour de la semaine	a. Cómo establecer TIME y el día de la semana
Press/ Appuyez Pulse: 1 TIME ▲ / ▼	display/ affichage/ pantalla: 1 12:33	
2 TIME	2 12:33	
3 SET DAY (1 → 2 → 3 → 4 → 5 → 6 → 7 → 1)	3 Mo	
b. Setting ALARM TIME 1 & 2, and the alarm modes	b. Réglage de l'alarme 1 et 2 et de l'alarme	b. Cómo establecer la hora de alarma 1 & 2 y la alarma
e.g. Alarm (1) by buzzer, tuner or CD wakeup track:	par ex. Alarme (1) par ronfleur, radio ou piste CD):	por ejemplo, Alarma (1) por zumbador, radio o pista de CD para despertar):
1 ALARM 1 ▲ / ▼	1 6:30	
2 ALARM 1	2 6:30	
3 ALARM 1 MODE, ON/OFF ▲ / ▼	3 La 00	
4 ▲ / ▼	4 H 1:16	
5 0	5 0RL	
6 0	6 0Lw	
7 ▲ / ▼	7 Lcd 10	
c. Activating WEEKEND-SLEEPER	c. Activation du SOMMEIL WEEKEND	c. Activación de WEEKEND-SLEEPER
1 PLAY/PAUSE ■ (off / on) ON/OFF	1 3:42	
2 SLEEP (10 → 30 → 60 → 90 minutes → OFF → minutes / hors service/ minutos / desactivación)	2 5L:10	

MEXICO

Es necesario que lea cuidadosamente su instructivo de manejo.

PRECAUCION - ADVERTENCIA
No abrir, riesgo de choque eléctrico

ATENCIÓN
Verifique que el voltaje de alimentación sea el requerido para su aparato

Para evitar el riesgo de choque eléctrico, no quite la tapa. En caso de requerir servicio, diríjase al personal calificado.

Radio reloj con reproductor de CD AJ 3950/17
120-127 V ~ 60 Hz
10 W
Philips Mexicana, S.A. de C.V.
Norte 45, # 669, Col. Industrial Vallejo
C.P. 02300 México D.F., Tel. 5728 4200
Philips Electronics Hong Kong, Ltd.
China

Descripción:
Modelo:
Alimentación:
Consumo:
Importador:
Domicilio:
Localidad y Teléfono:
Exportador:
País de Origen:

№ de Serie: _____

LEA CUIDADOSAMENTE ESTE INSTRUCTIVO ANTES DE USAR SU APARATO.
Centro de Información al Consumidor
Tel. 5368-7788 Lada sin Costo 01 800 504 6200

Canada

English: This digital apparatus does not exceed the Class B limits for noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Français: Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Bruitage Radioélectrique édicté par le Ministère des Communications du Canada.

