


Meet Philips at the Internet
<http://www.philips.com>

CD Clock Radio

AJ3977

Quick start

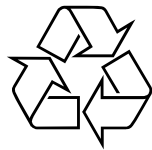

AJ 3977



Thanks for buying **Philips AJ3977 CD clock radio**.



Our **Quick Start** guides you through just some of the features on the set. Please read our instruction booklet to really rise & shine!



Printed in China

PDCC-YM-528

PHILIPS

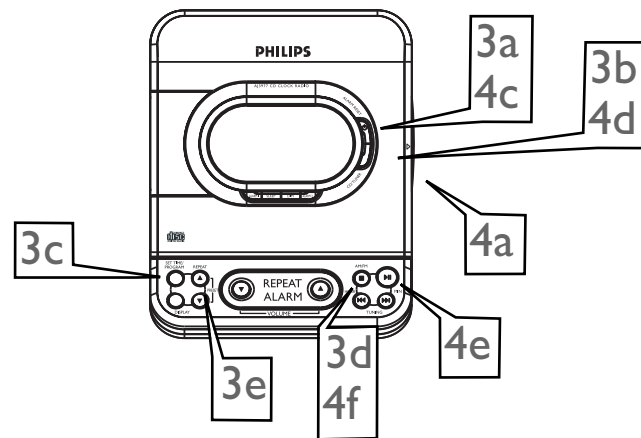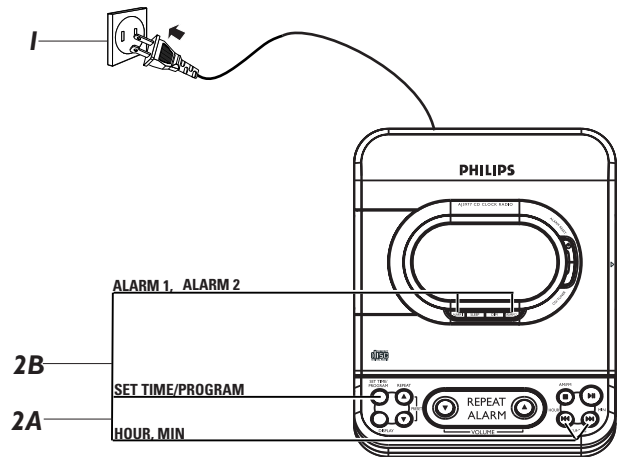

ENGLISH

1 Power supply

- Connect the power plug to the wall outlet

2 Setting the Clock and Alarm

Step A: Setting the Clock time

1. Check the set is switched off
2. Press **SET TIME/PROGRAM**
3. Hold down or press **HOUR/ MIN** repeatedly to adjust the hours and minutes respectively. Release **HOUR/ MIN** when you have reached the correct setting.
4. Press **SET TIME/PROGRAM** to confirm.

Helpful hints: If no action is executed within 10 seconds, the display will return to previous time setting

Step B: Setting the Alarm time and mode

1. Check the set is switched off
2. Press **ALARM 1** or **ALARM 2** once or more to switch on the alarm and select tuner; CD or buzzer alarm modes.
3. Hold down or press **HOUR/ MIN** repeatedly to adjust the hours and minutes respectively. Release **HOUR/ MIN** when you have reached the correct setting.
4. Press **SET TIME/PROGRAM** to confirm.

3 ways to switch off the alarm

- During the alarm call, press **ALARM RESET/ ⏻**.
- During the alarm call, press **REPEAT ALARM**.
- Press **ALARM 1** or **ALARM 2** once or more until the **AL1** or **AL2** disappears.

3 Listening to the Radio

- a Press **⏻** to switch on the set.
- b Press **CD/TUNER** once or more to select TUNER.
- c Press and hold **SET TIME/PROGRAM** until the frequency and **PROG** flash.
 - Available stations are programmed (10 FM and 10 AM).
- d Press **AM/FM ■** to select your desired waveband, AM or FM.
- e Press the **PRESET ▲, ▼** buttons once or more until the desired preset station is displayed.

4 Playing a CD

This player plays Audio Discs including CD-R/CD-RW.

- a Lift the CD door at ► **LIFT TO OPEN**.
- b Insert a CD with the printed side facing up, and close the CD door.
- c Press **⏻** to switch on the set.
- d Press **CD/TUNER** once or more to select CD.
- e Press **▶||** to start playback.
- f To stop CD playback, press **■**.