

Kitchen CD Clock Radio

AJ6110

AJ6111

Register your product and get support at
www.philips.com/welcome



Thank you for choosing Philips.

Need help fast?

Read your Quick Start Guide and/or User Manual first for quick tips that make using your Philips product more enjoyable.

If you have read your instructions and still need assistance, you may access our online help at

www.philips.com/welcome
or call

1-888-PHILIPS (744-5477)
while with your product.
(and Model / Serial number)



Philips vous remercie de
votre confiance.

Besoin d'une aide rapide?

Le Guide rapide de début et Manuel de l'utilisateur regorgent d'astuces destinées à simplifier l'utilisation de votre produit Philips.

Toutefois, si vous ne parvenez pas à résoudre votre problème, vous pouvez accéder à notre aide en ligne à l'adresse

www.philips.com/welcome
ou formez le

1-800-661-6162 (Francophone)
1-888-PHILIPS (744-5477) (English speaking)

Veillez à avoir votre produit à
portée de main.
(et model / serial nombre)



Gracias por escoger Philips

 
Necesita ayuda inmediata?

Lea primero la Guía rápida del comienzo o el Manual del usuario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Philips.

Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en

www.philips.com/welcome
o llame al teléfono

1-888-PHILIPS (744-5477)
y tenga a mano el producto.
(y número de model / serial)

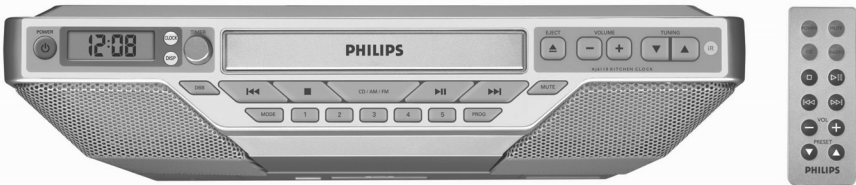

PHILIPS

Return your Product Registration Card or register online at
www.philips.com/welcome today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once, or register online at www.philips.com/welcome to ensure:

*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

*Additional Benefits

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

PHILIPS

Congratulations on your purchase, and welcome to the "family!"

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come. As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.


All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.


P.S. To get the most from your PHILIPS purchase, be sure to complete and return your Product Registration Card at once, or register online at:

www.philips.com/welcome

Know these
safety symbols



 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

 
 
 
For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____
Serial No. _____

PHILIPS


Visit our World Wide Web Site at <http://www.philips.com/welcome>

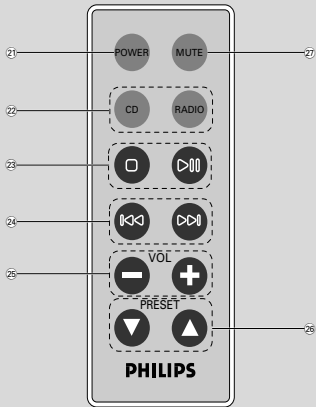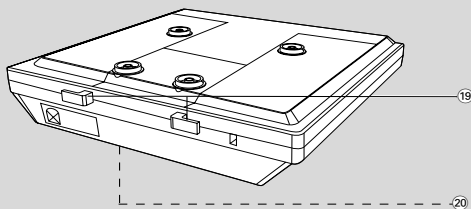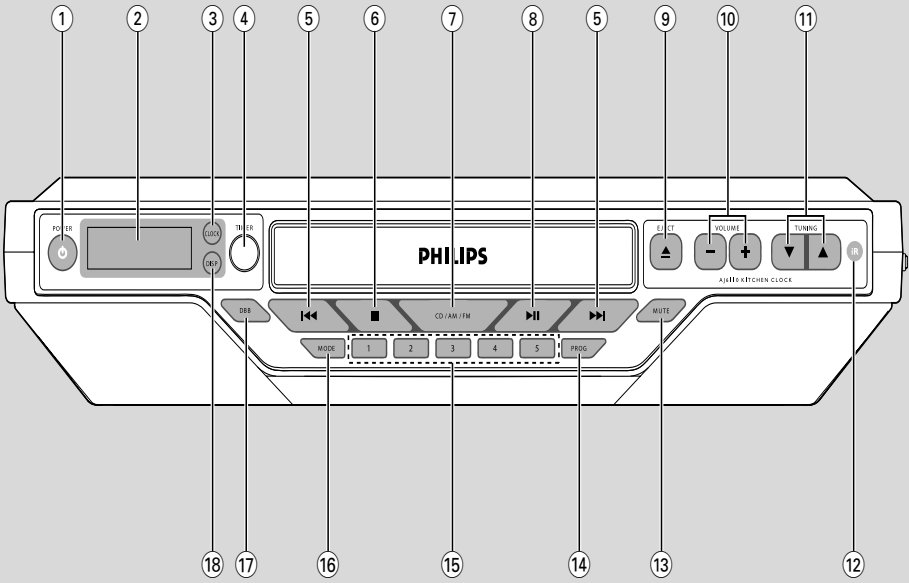

IMPORTANT SAFETY INSTRUCTIONS

1. **Read these instructions.**
2. **Keep these instructions.**
3. **Heed all warnings.**
4. **Follow all instructions.**
5. **Do not use this apparatus near water.**
6. **Clean only with dry cloth.**
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
8. **Do not install near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

 
9. **Do not defeat the safety**



AC Polarized Plug

purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. **Protect the power cord** from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. **Only use attachments/accessories** specified by the manufacturer:

12.  **Use only with the cart**, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart /apparatus combination to avoid injury from tip-over.

13. **Unplug this apparatus** during lightning storms or when unused for long periods of time.
14. **Refer all servicing** to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. **Where the MAINS plug or an appliance coupler is used as the disconnct device, the disconnct device shall remain readily operable.**

16. **Battery usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

Install **all** batteries correctly, **+** and **-** as marked on the unit.

Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).

Remove batteries when the unit is not used for a long time.

17. **Apparatus shall not be exposed to dripping or splashing.**
18. **Do not place any sources of danger on the apparatus** (e.g. liquid filled objects, lighted candles).
19. This product may contain lead and mercury. Disposal of these materials may be regulated due to environment considerations.

For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.

EL 6475-S004: 03/12

Class II equipment symbol



This symbol indicates that the unit has a double insulation system

Index

English 6

Français 19

Español 34

English

Français

Español

General Information

Supplied accessories	7
Environmental information	7
Maintenance	7
Safety information	7

Installation

Mounting the set under a cabinet	8
Preparation	
Mounting the set	
Power supply	8
Backup battery (not included)	
AC power	
Using the remote control	9
Setting the clock	9
To turn on the Daylight Saving Time (DST) mode	

Controls

Controls on the set	10
Remote control	10

Basic Functions

Switching on/ to standby mode and selecting functions	11
Adjusting volume and sound	11
Adjusting volume	
DBB	

Mute	11
Display information	11

CD

Discs for playback	12
Playing discs	12
Selecting and searching	12
Selecting a different track	
Finding a passage within a track during playback	
Different play modes: REPEAT, SHUFFLE	12
Programming tracks	13
Erasing the program	

Radio

Tuning to radio stations	14
Storing preset radio stations	14
Manual programming	
To listen to a preset station	

Timer

.....	15
-------	----

Specifications

.....	16
-------	----

Troubleshooting

.....	17
-------	----

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

The set complies with the FCC-Rules, Part 15 and with RSS-210 of Industry Canada.

Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference, and**
- 2. this device must accept any interference received, including interference that may cause undesired operation.**

Supplied accessories

- Remote control (with 1 x CR2025 battery)
- Mounting kit:
 - 1 x template, 4 x spacers, 8 x screws

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

 
Maintenance

Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analog records.

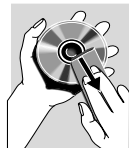

Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with any commercially available cleaner. Follow the instructions supplied with cleaner.

Safety information

- Place the system on a flat, hard and stable surface.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Do not expose the system, batteries or discs to excessive moisture, rain, sand or heat sources caused by heating equipment or direct sunlight.
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- The apparatus shall not be exposed to dripping or splashing.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION

Visible and invisible laser radiation. If the cover is open, do not look at the beam.

High voltage! Do not open. You run the risk of getting an electric shock.

 
The machine does not contain any user-serviceable parts.

Modification of the product could result in hazardous radiation of EMC or other unsafe operation.

Mounting the set under a cabinet

Preparation

- Ask a friend to help out. An extra hand to hold the set makes mounting easier and quicker.
 - You may install the unit in the kitchen with or without spacers.
- a Find a mounting location near a wall outlet.

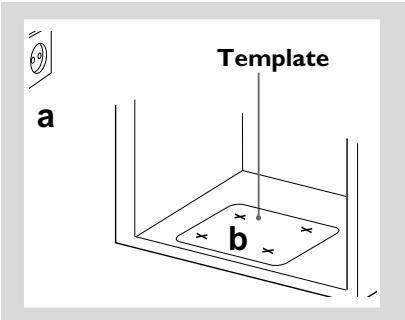

- b Use the mounting template to test the design and thickness of your kitchen cabinet bottom.

Mounting the set

 
For full details on how to use the Mounting kit, please refer to the printed instructions in the **Quick Start Guide** and **Template**.

IMPORTANT!

- **Never plug in the AC power cord to the power outlet before installation is completed.**
- **Install your set near the AC outlet and where the AC power plug can be reached easily**
- **Do not use a converter or extension cord.**
 - **Install the set as far as possible from sources of interference, such as a refrigerator, microwave oven, fluorescent lamp, etc.**
- **There should be at least 2.5" distance between the unit and the wall.**

! – **To reduce the risk of fire, do not place any heating or cooking appliance beneath the set.**

– **To prevent obstruction or danger, use the power cord posts to wrap the power cord so that excess cord does not hang down.**

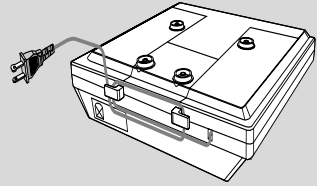

Power supply

This set runs on AC power:

We recommend you also insert a 9V battery for memory back-up power supply. In the event of a power interruption, this will help safeguard the clock, timer settings and preset radio stations. To save energy, the display switches off and you will not be able to operate the CD/ Tuner functions.

Backup battery (not included)

- Insert 1 x 9V battery (preferably alkaline) with the correct polarity

Helpful hints:

- *Replace the batteries once a year, or as often as necessary.*

Batteries contain chemical substances, so they should be disposed of properly

AC power

- Connect the AC power cord to the wall socket. This switches on the power supply

 
The type plate is located on the bottom panel.

Installation

Using the remote control


IMPORTANT!

- Remove the protective plastic tab before using the remote control.
- Always point the remote control directly towards IR area .

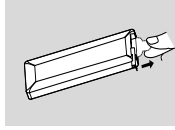

To replace the battery

 - 1 Press and hold ◀ as indicated
- 2 Simultaneously, pull the battery tray at ▼
- 3 Remove the old battery and put a new CR2025 battery in place
- 4 Put back the battery tray

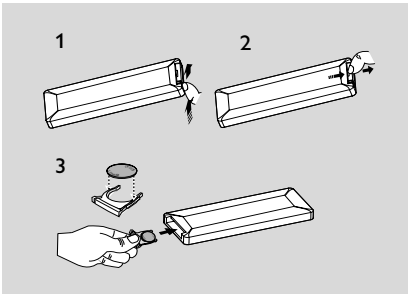

CAUTION!

 
- Remove the battery if it is exhausted or will not be used for a long time.
- Batteries contain chemical substances, so they should be disposed of properly.

Perchlorate Material-special handling may apply,
See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Setting the clock


The time is displayed using the 12-hour clock.

- 1 On the set, press and hold **CLOCK**
→ The hour digits start flashing (**AM** 12: 00 by default)
- 2 Hold down or press ◀◀ or ▶▶ repeatedly to set the hour
- 3 Press **CLOCK** to confirm the setting
→ The minute digits start flashing
- 4 Repeat step 3 to set the minute
- 5 Press **CLOCK** to confirm the setting
→ The clock shows the set time

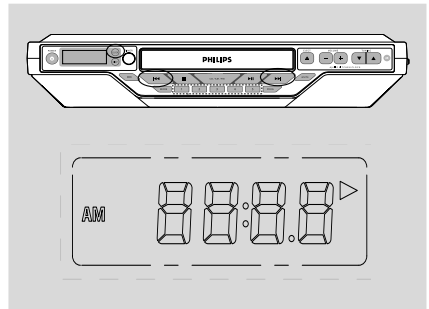

To turn on the Daylight Saving Time (DST) mode

 - 1 In the standby mode, press and hold **DISP** on the set
→ Current time setting moves ahead by 1 hour.
DST appears
- 2 Press **DISP** again
→ The set returns to normal time setting.
DST disappears

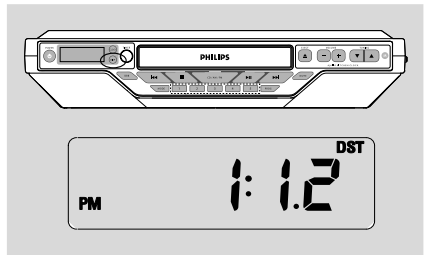

Controls on the set

- ① **POWER**
 - switches the set on or to standby mode
- ② **Display**
 - shows status of the set
- ③ **CLOCK**
 - set clock time
- ④ **TIMER**
 - alarm timer with setting options from 1 to 180 minutes
- ⑤ **⏮ / ⏭**
 - **CD:** skips or searches tracks backwards/forwards
 - **RADIO:** tunes to radio stations
 - **CLOCK:** adjusts the hour/minute
- ⑥ **■**
 - stops disc playback
 - cancels program function
- ⑦ **CD/AM/FM**
 - selects functions: CD or radio (AM or FM)
- ⑧ **▶ II**
 - starts or pauses disc playback.
- ⑨ **▲ EJECT**
 - opens/closes CD door
- ⑩ **VOLUME -/+**
 - adjusts the volume level
- ⑪ **TUNING ▼/▲**
 - **RADIO:** selects a preset radio station
- ⑫ **IR**
 - sensor for the infrared remote control
 - Helpful hints:** Always point the remote control towards this sensor.
- ⑬ **MUTE**
 - switches the sound off temporarily
- ⑭ **PROG**
 - **RADIO:** programs preset stations
 - **CD:** programs tracks
- ⑮ **Numeric Keypad (1-5)**
 - **RADIO:** selects a preset radio station

- ⑯ **MODE**
 - selects different play modes: e.g. REPEAT or SHUFFLE (random order)
- ⑰ **DBB (Dynamic Bass Boost)**
 - turns the bass enhancement on/off
- ⑱ **DISP**
 - toggles clock (or timer) display and status of the set
 - **In standby mode:** press and hold the button to turn on/off Daylight Saving Time (DST) mode
- ⑲ **Power cord posts**
 - for wrapping the power cord so that excess cord does not hang down
- ⑳ **battery compartment**
 - Open to insert 1 x 9V battery (for memory backup power supply only)

Remote control

- ⑳ **POWER**
 - switches the set on or to standby mode
- ㉑ **Source buttons**
 - CD**
 - selects CD source
 - RADIO**
 - selects the radio and toggles between the wavebands (AM/FM)
- ㉒ **■**
 - stops disc playback
 - cancels program function
 - ▶ II**
 - starts or pauses disc playback
- ㉓ **⏮ / ⏭**
 - **CD:** skips or searches tracks backwards/forwards
 - **RADIO:** tunes to radio stations
 - **CLOCK:** adjusts the hour/minute
- ㉔ **VOL +/-**
 - adjusts the volume level
- ㉕ **PRESET ▲ / ▼**
 - **RADIO:** selects a preset radio station
- ㉖ **MUTE**
 - switches the sound off temporarily

 
Basic functions

Switching on/ to standby and selecting functions

- 1 Press **POWER** to switch on
→ The set switches to the last source selected
→ The display lights up
- 2 To select your function, press **CD/AM/FM** once or more (or **CD** or **RADIO** on the remote control)
- 3 Press **POWER** to switch the set to standby
→ The display dims out

Helpful hints:

– In the standby mode, the tone, sound settings, tuner presets, and the volume level will be retained in the set's memory.

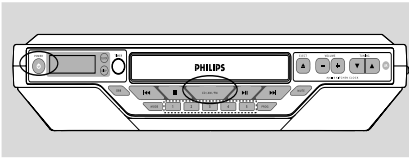


Adjusting volume and sound

Adjusting Volume

- Press **VOLUME +/-** to adjust the volume
→ **VOL** and the actual value (between 00 and 31) are displayed

DBB

 
- On the set, press **DBB (D**ynamic **B**ass **B**oost) once or more to switch bass enhancement on or off.
→ **DBB** appears if **DBB** is activated

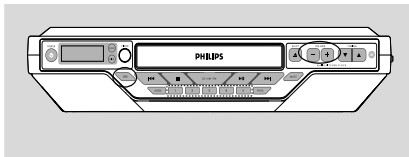

MUTE


During playback, you can temporarily switch off the sound without switching off the set

 - 1 Press **MUTE** to switch off the sound
→ **MUTE** appears. Playback continues without sound
- 2 To switch on the sound, press **MUTE** again or adjust the volume with **VOLUME** controls
→ **MUTE** disappears

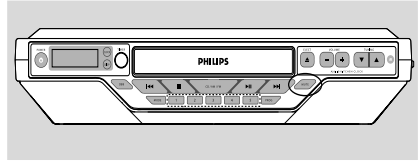

Display information

 - 1 During playback, press **DISP** to switch between the clock/timer display and the status of the set
- 2 In the standby mode, press **DISP** to light up the clock display
→ 15 seconds later, the display dims out automatically

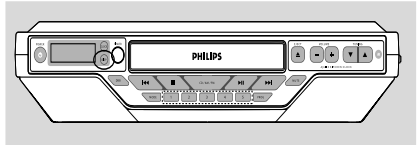

Discs for playback

With this system, you can play

- all pre-recorded audio CDs (CDDA)
- all finalized audio CD-Rs and CD-RWs

 


IMPORTANT!


– **This system is designed for regular discs. Therefore, do not use any accessories such as disc stabilizer rings or disc treatment sheets, etc.**

Playing discs

- 1 Press **POWER** to on, then press **CD/AM/FM** once or more to select CD source
- 2 Press **▲ EJECT** to open the CD compartment

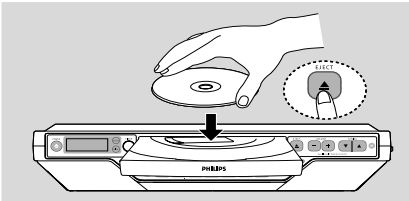

 - 3 Insert a disc with the printed side facing up. Press **▲** again to close the compartment
 - **CD** is displayed as the CD player scans the contents of a disc
 - Playback starts automatically. Display shows current track number



- 4 To pause playback, press **▶ II**. To resume playback, press the button again
- 5 To stop playback, press **■**
 - Display shows the total number of tracks

Helpful hints:

CD play will also stop when

- the CD door is opened
- the disc has reached the end
- you select another source: CD or radio (AM or FM)

 
Selecting and searching

Selecting a different track

- 1 Press **◀◀ / ▶▶** once or repeatedly until the desired track number appears in the display

Finding a passage within a track during playback

- 1 During playback, press and hold **◀◀ / ▶▶**
 - The CD plays at a high speed
- 2 When you recognize the passage you want, release **◀◀** or **▶▶**
 - Normal playback resumes

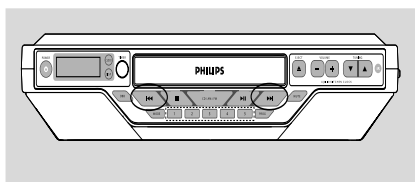

Different play modes: REPEAT, SHUFFLE

 
SHUF – plays all the tracks of the CD in random order

REP – plays the current track continuously

REP ALL – plays the entire disc/program continuously

SHUF REP ALL – repeats all the tracks of the CD in random order


- 1 During playback, press **MODE** once or more to select play modes
- 2 To return to normal playback, press **MODE** repeatedly until the various modes are no longer displayed



Programming tracks

You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.

 - 1 In the stop position, press **PROG** to start programming
→ Display shows \square 1 indicating the start of the program. **PROG** and current track number flash

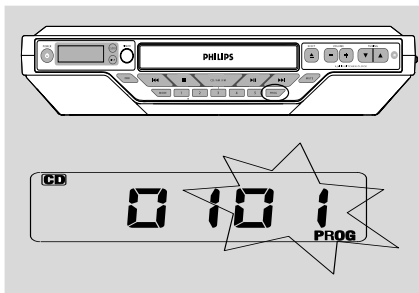

- 2 Press **◀◀ / ▶▶** once or repeatedly until the desired track number appears in the display
- 3 Press **PROG** to store the desired track.
→ Display shows \square 2 (up to 20 in sequence), indicating the next program location available.
PROG and current track number flash
- 4 Repeat steps 2-3 to select and store all desired tracks.
→ **FULL** is displayed if you attempt to program more than 20 tracks
- 5 Press **▶ ||** play the program

Erasing the program

You can erase the contents of the memory by:

- Press **■**
 - once if in the stop position;
 - twice during playback
- Open the CD door

 
Tuning to radio stations

- 1 Press **POWER** to on, then press then press **CD/AM/FM** once or more to select radio source (AM or FM)


or

On the remote control, press **POWER** to on, then press **RADIO** once or more to select your waveband: FM or AM

→ Display shows: **RADIO**, radio station frequency and waveband

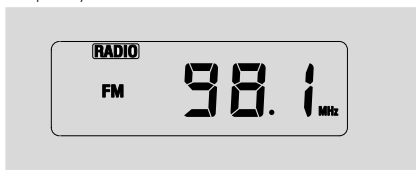

 - 2 Press and hold **◀▶** until the frequency in the display starts running
→ The radio automatically tunes to a station of sufficient reception
 - 3 Repeat step 2 if necessary until you find the desired radio station
- To tune to a weak station, press **◀▶** briefly and repeatedly until optimal reception is found

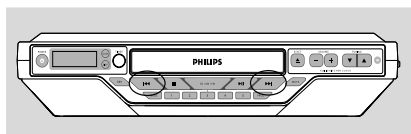

To improve radio reception

- For FM, extend and adjust the AC power cord, as the FM antenna is integrated with the power cord

Storing preset radio stations

You can store up to 25 preset radio stations in the memory (15 FM and 10 AM).

Manual programming

 
- 1 Tune to your desired radio station (see **Tuning to radio stations**)
- 2 Press **PROG** to store the station
→ Display shows its preset number: **PROG** flashes
- 3 Press **PROG** to confirm
→ **PROG** disappears

Helpful hints:

– If you store more than 15 FM stations or 10 AM stations, the new station will replace the 1st preset station.

To listen to a preset station

- Use the **Numeric Keypad (1-5)** on the set to select the desired preset station (1-5) or
Press **TUNING/PRESET ▲/ ▼** buttons once or more until the desired preset station is displayed
→ Display shows the preset number briefly.

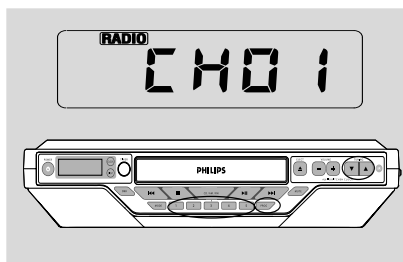

TIMER

Set the timer period to activate a beeper alarm.

 
Setting the timer

- 1 On the set, press **TIMER** to activate
→ 0 15 flashes. **TIMER** appears
- 2 Turn the **TIMER** control counter-/clockwise to adjust your timer period (from 1 to 180 minutes)
→ Display shows selected timer period
- 3 Press **TIMER** to confirm
→ Timer period starts to count down. **TIMER** flashes

To cancel the timer

Press **TIMER** during the countdown

→ Display shows the clock time

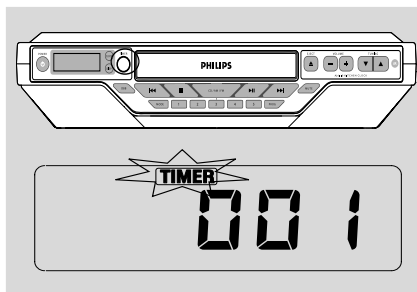

Amplifier

Output power 2 × 2W RMS
Speakers 4 Ω
signal-to-noise ratio ≥ 60dB
Frequency response 125Hz~16kHz

Disc player

Programmable tracks 20
Frequency response 80Hz~125kHz
signal-to-noise ≥ 50dB
Audio distortion 1.5%
Channel separation ≥ 30dB (1kHz)

Tuner

Frequency range
AM 520~1710 kHz
FM 87.5~108 MHz
Number of presets 25

GENERAL

Power AC120V/60Hz
Power consumption
Max. 30W
Standby 1.5W
Dimension 300mm×67mm×230mm (W/H/D)
..... 11.8" × 2.64" × 9.05" (W/H/D)
Weight 2kgs
4.4lbs

Philips reserves the right to make design and specification changes for product improvement without prior notice.

Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or PHILIPS for help.

Problem	Solution
no cd or Err indication	<ul style="list-style-type: none">✓ No disc inserted. Insert a suitable disc✓ Replace/clean CD✓ CD-R(W) is blank or the disc is not finalized. Use a finalized CD-R(W)✓ Moisture has condensed in the player: Remove the disc and leave the player power-on until the moisture evaporates.
No sound	<ul style="list-style-type: none">✓ Check whether the set is connected securely.✓ Make sure the set is not in the MUTE mode. If it is, press MUTE to turn on the speaker.✓ Check whether the volume on the set has been set to the lowest level. If it has, turn up the volume.✓ CD-ROM disc inserted/CD contains non-audio files. Use CD Audio discs only.
The system does not react when buttons are pressed.	<ul style="list-style-type: none">✓ Remove and reconnect the AC power plug and switch on the system again.
Remote control does not work	<ul style="list-style-type: none">✓ Remove the protective plastic tab before using the remote control.✓ Reduce the distance between the remote control and the set.✓ Replace the battery.✓ Point the remote control directly towards the IR sensor.
Radio reception is poor	<ul style="list-style-type: none">✓ To Improve radio reception: For FM, extend and adjust the AC power cord, as the FM antenna is integrated with the power cord.✓ Increase the distance between the set and a TV, VCR or radiation source.
The Clock setting is erased	<ul style="list-style-type: none">✓ Power has been interrupted or the power cord has been disconnected. Reset the clock.

PHILIPS LIMITED WARRANTY ONE (1) YEAR

WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth below.

WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

WHAT IS COVERED:

The Philips warranty covers new products if a defect in material or workmanship occurs and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product. Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is given, your product becomes Philips' property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of

Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

This Limited Warranty does not cover:

- Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product to Philips.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

TO OBTAIN ASSISTANCE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at:
1-888-PHILIPS (1-888-744-5477)

TO OBTAIN ASSISTANCE IN CANADA...

1-800-661-6162 (French Speaking)
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

 
Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 671539, Marietta, GA. 30006-0026

3121 233 48802

PHILIPS CONSUMER ELECTRONICS NORTH AMERICA
P.O. Box 671539, Marietta, GA. 30006-0026
Meet Philips at the Internet
<http://www.philips.com>
<http://www.philips.com/welcome>

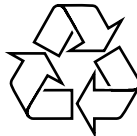

AJ6110
AJ6111



2009 © Koninklijke Philips Electronics N.V.
All rights reserved



Printed in China

PDCC-AL-0903