

Register your product and get support at
www.philips.com/support


AJ7000




EN User manual

PHILIPS

 
A

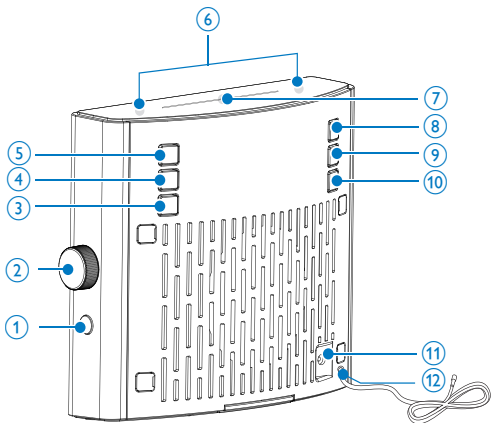

D

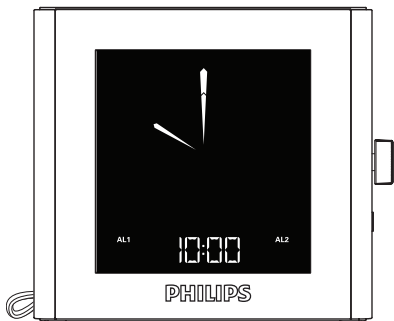 

E

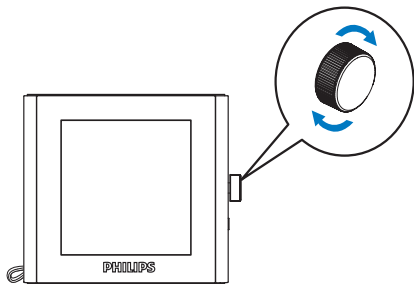 

1 Important

Safety

- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the clock radio.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this clock radio during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the clock radio has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the clock radio, the clock radio has been exposed to rain or moisture, does not operate normally, or has been dropped.
- This clock radio shall not be exposed to dripping or splashing.

- Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

2 Your clock radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this clock radio, you can:

- listen to FM/MW radio;
- set two alarms; and
- wake up to buzzer or radio.

What's in the box

Check and identify the contents of your package:

- Main unit (with battery)
- Adapter
- User manual

Overview of the main unit (A)

- ① **SLEEP**
 - Set sleep timer.
- ② **Main knob**
 - Adjust volume.
 - Confirm selection.
 - Adjust settings.
- ③ **TIME ZONE**
 - Set time zone.
- ④ **FM/MW**
 - Select tuner source.
- ⑤ **SET TIME/PROG**
 - Set time.
 - Program radio stations.
- ⑥ **AL1/AL2**
 - Set alarm.
 - View alarm settings.
 - Activate/deactivate alarm timer.
- ⑦ **SNOOZE/BRIGHTNESS**
 - Snooze alarm.
 - Adjust display brightness
- ⑧ **TUNING MODE**
 - Select tuning mode.
- ⑨ **PRESET**
 - Select a preset radio station.
- ⑩ **DST**
 - Select daylight saving time (DST) mode.

- ⑪ **AC 6V ~ 450mA**
 - Connect power.
- ⑫ **FM ANT**
 - Improve FM reception.
- ⑬ **Battery tray**
- ⑭ **Display panel**
 - Show status.

3 Get started

Always follow the instructions in this chapter in sequence.

Install battery ⑧



Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery contains chemical substances, so it should be disposed of properly.
- Keep children away from the battery.



Note

- You can only use AC power as power supply. The pre-installed lithium CR2032 battery can only back up clock and alarm settings.

When the low battery indicator is displayed, replace the battery as indicated.

Connect power ©



Caution

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio.
- Risk of electric shock! When you unplug the AC adapter, always pull the plug from the socket. Never pull the cord.



Warning

- To reduce the risk of fire or electric shock, do not expose this clock radio to rain or moisture.

Plug and set

Time has been preset at the factory. When power is connected, the set time is displayed automatically.

The built-in lithium battery can maintain clock setting despite power interruption.

Select time zone

You can adjust time zone setting according to your location.

- 1 In standby mode, press **TIME ZONE**.
↳ The current time zone number blinks on the display.
- 2 Rotate the main knob to set time zone (-1 to +12 adjustable).
- 3 Press the knob to confirm.

For Europe:

Western European Time (WET)	+0
Central European Time (CET)	+1 (Default)
Eastern European Time (EET)	+2
Moscow Standard Time (MST)	+3

Set clock

If the preset time is inaccurate, you can set clock manually.

- 1 In standby mode, press **SET TIME** to activate clock setting mode.
↳ The hour digits begin to blink.
- 2 Rotate the main knob to adjust hour.
- 3 Press the knob to confirm.
↳ The minute digits begin to blink.
- 4 Repeat Steps 2-3 to set minute and 12/24 hour format.

4 Listen to FM/MW radio

Tune to radio stations



Tip

- Position the antenna as far as possible from TV, VCR, or other radiation source.
- For better reception, fully extend and adjust the position of the antenna.

- 1 Press **FM/MW** to select FM or MW tuner source.
- 2 Press **TUNING MODE** repeatedly until **[FIND]** (find) blinks.
- 3 Rotate the main knob slowly.
↳ The clock radio tunes to a station with strong reception automatically.
- 4 Press the knob to confirm.
- 5 Repeat Steps 3-4 to tune to more radio stations.

To tune to a station manually:

- 1 In tuner mode, press **TUNING MODE** repeatedly until **[STEP]** (step) blinks.
- 2 Rotate the knob slowly to select a frequency.

Store radio stations automatically

You can store a maximum of 20 FM radio stations and 10 MW radio stations.

- 1 In tuner mode, press **TUNING MODE** repeatedly until **[AUTO]** (auto) blinks.
 - 2 Rotate the main knob slowly.
 - ↳ The clock radio stores all the available FM/MW radio stations and broadcasts the first available station automatically.
-

Store radio stations manually

- 1 Tune to a radio station.
- 2 Press **PROG**.
 - ↳ The preset number begins to blink.
- 3 Rotate the main knob to select a number.
- 4 Press the knob to confirm.
 - ↳ **[DONE]** (done) is displayed.
- 5 Repeat steps 1 to 4 to store other stations.



Note

- To remove a pre-stored station, store another station in its place.

Select a preset radio station

In tuner mode, press **PRESET**, then rotate the main knob to select a preset number.

Adjust volume (E)

5 Set alarm timer

Set alarm

You can set two alarms to ring at different time.



Note

- Make sure that the clock is set correctly.

- 1 In standby mode, press and hold **AL1/AL2** for two seconds to activate alarm setting mode.
↳ The hour digits and **[AL1]/[AL2]** begin to blink.
- 2 Rotate the main knob to adjust hour.
- 3 Press the main knob to confirm.
↳ The minute digits and **[AL1]/[AL2]** begin to blink.
- 4 Repeat Step 2-3 to set minute and alarm source: buzzer or your last listened channel.

Activate/deactivate alarm timer

- 1 Press **AL1/AL2** to view alarm settings.
- 2 Press **AL1/AL2** again to activate or deactivate the alarm timer.
↳ **[AL1]/[AL2]** appears if alarm timer is on and disappears if it is off.
 - To stop the ringing alarm, press the corresponding **AL1/AL2**.
 - The alarm repeats ringing for the next day.

Snooze alarm

When alarm sounds, press **SNOOZE**.

↳ The alarm snoozes and repeats ringing nine minutes later.

6 Other features

 
Set sleep timer

This clock radio can switch to standby mode automatically after a preset period.

- 1 Press **SLEEP**.
- 2 Rotate the main knob to select the sleep timer period (in minutes).
- 3 Press the knob to confirm.
↳ When the sleep timer is activated, **zZ** appears.

To deactivate the sleep timer:

In sleep timer setting mode, rotate the knob until **[OFF]** (off) appears, then press the knob.



Select DST (daylight saving time) mode

For countries with daylight saving time (DST), the clock radio offers you DST option to adjust summer time.

In standby mode, press and hold **DST** for 3 seconds.

↳ The clock advances by one hour and **[DST]** is displayed.

Adjust display brightness

Press **BRIGHTNESS** repeatedly to select different brightness levels: **[HI]** (high), **[MID]** (mid), and **[LOW]** (low).

7 Product information



Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power

0.6 W RMS

Tuner

Tuning Range	FM: 87.5 - 108 MHz MW: 531-1602 KHz
--------------	--

Sensitivity - Mono, 26dB S/N Ratio	FM: <22 dBu MW: <92 dBuV/M
---------------------------------------	-------------------------------

Search Selectivity	FM: <28 dBf MW:<98 dBuV/M
--------------------	------------------------------

Total Harmonic Distortion	FM: <3% MW:<5%
---------------------------	-------------------

Signal to Noise Ratio	FM: >45 dB MW:>40 dB
-----------------------	-------------------------

General information

AC Power	Model : AGC060V0450T or EML352540VD; Input : 220-240V ~, 50/60Hz; Output : AC6V 450MA
----------	--

Operation Power Consumption	<5 W
--------------------------------	------

Standby Power Consumption	<1 W
---------------------------	------

Dimensions - Main Unit (W x H x D)	134 x 112 x 42 mm
---------------------------------------	-------------------

Weight - With Packing	0.82 kg
- Main Unit	0.38 kg

8 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/support). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the clock radio is connected properly.
- Ensure that there is power at the AC outlet.

No response from the clock radio

- Disconnect and reconnect the AC power plug, then turn on the clock radio again.

Poor radio reception

- Keep the clock radio away from other electronic devices to avoid radio interference.
- Fully extend and adjust the position of the FM antenna.

Alarm does not work

- Set the clock/alarm correctly.

9 Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by Gibson Innovations may void the user's authority to operate the equipment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Note

- The type plate is located on the bottom of the apparatus.

2015 © Gibson Innovations Limited. All rights reserved.
Specifications are subject to change without notice. Gibson reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.



2015 © Gibson Innovations Limited. All rights reserved.
This product has been manufactured by, and is sold under
the responsibility of Gibson Innovations Ltd., and Gibson
Innovations Ltd. is the warrantor in relation to this product.
Philips and the Philips Shield Emblem are registered
trademarks of Koninklijke Philips N.V. and are used under
license from Koninklijke Philips N.V.

