

Always there to help you

Register your product and get support at
www.philips.com/welcome



AJ7260D



User manual

PHILIPS

Contents

1	Important	2
	Safety	2
	Notice	3

2	Your Docking Entertainment System	5
	Introduction	5
	What's in the box	5
	Overview of the main unit	6

3	Get started	8
	Install batteries	8
	Connect power	8
	Turn on	8
	Set time and date	9

4	Play	10
	Play from iPod/iPhone/iPad	10
	Play from an external device	11

5	Listen to radio	12
	Tune to a radio station	12
	Program radio stations	12

6	Other features	13
	Set the alarm timer	13
	Set the sleep timer	14
	Adjust display brightness	14

7	Adjust sound	15
	Adjust volume level	15
	Select a sound effect	15

8	Product information	16
	Specifications	16

9	Troubleshooting	17
----------	------------------------	-----------

1 Important

Safety

Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.
- Use only power supplies listed in the user manual.

Caution

- Danger of explosion if battery is incorrectly replaced.
 - Remove battery if it is exhausted or will not be used for a long time.
 - Batteries contain chemical substances, so they should be disposed of properly.
 - Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.
-
- The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
 - If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
 - When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
 - If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.
 - Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the remote control:

- Install all batteries correctly, + and - as marked on the remote control.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries when the remote control is not used for a long time.
- Make sure that there is enough free space around the product for ventilation.
- The system shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the system (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

Important notes for users in the U.K.

This information applies only to products with a UK mains plug.

This product is fitted with an approved molded plug. If you replace the fuse, use one with:

- the ratings shown on the plug,
- a BS 1362 approval, and
- the ASTA approval mark.

Contact your dealer if you are not sure about what type of fuse to use.

Caution: To conform with the EMC directive (2004/108/EC), do not detach the plug from the power cord.

Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.



This product complies with the radio interference requirements of the European Community.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



“Made for iPod,” “Made for iPhone,” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

Class II equipment symbol:



CLASS II apparatus with double insulation, and no protective earth provided.

 Note

- The type plate is located on the bottom of the unit.

2 Your Docking Entertainment System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this unit, you can enjoy music from iPod/iPhone/iPad and listen to radio or other audio devices.

Your iPod/iPhone/iPad and radios can be set as alarm sources. You can set two alarms to go off at different time.

You can enrich sound output with these sound effects:

 
- Digital Sound Control (DSC)
- Dynamic Bass Boost (DBB)

What's in the box

Check and identify the contents of your package:

- Main unit
- Short user manual

Overview of the main unit

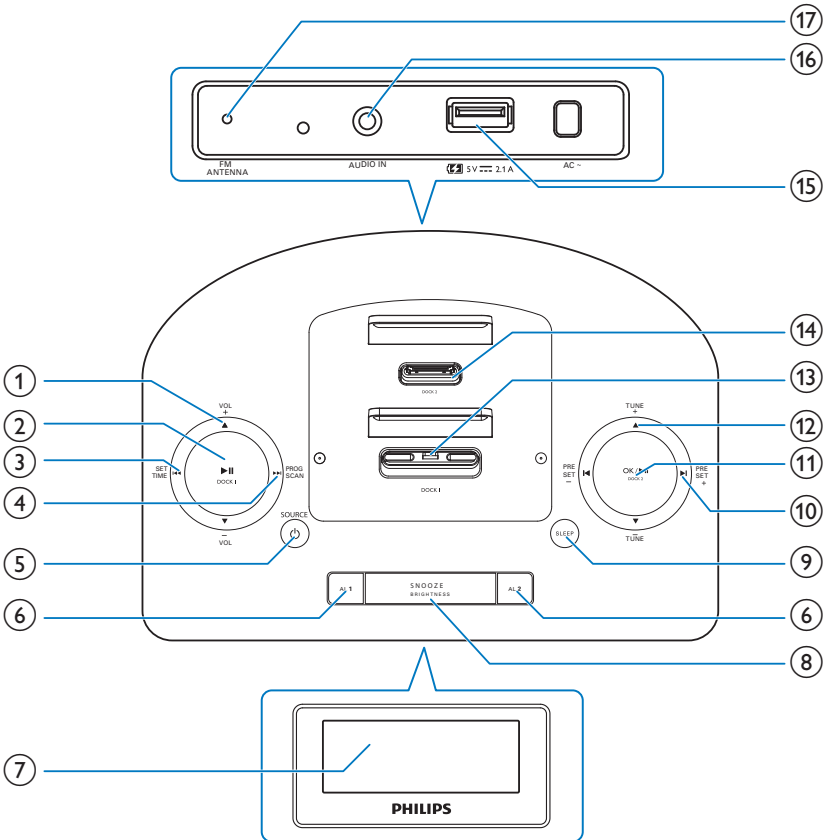

- ① **VOL +/VOL -**
- Increase/decrease volume.
- ② **▶|| DOCK 1**
- In Dock 1 mode, start or pause play.
 - In other modes, select Dock 1 source.
- ③ **SET TIME**
- In standby mode, set day, month and year.
 - In other modes, enable/disable DBB (Dynamic Bass Boost) or select a DSC (Digital Sound Control) sound effect.
- ④ **PROG/SCAN**
- Program radio stations.
 - Automatically scan for radio stations.
 - In dock mode, press and hold to search within a track.
- ⑤ **SLEEP**
- In dock mode, press and hold to search within a track.
 - In FM mode, select FM stereo or FM mono.

- ⑤ **⏻ /SOURCE**
- Press and hold to turn on the unit or switch to standby mode.
 - Stop alarm.
 - Select a source: DOCK 1/DOCK 2, FM or AUDIO IN.
- ⑥ **AL1/AL2**
- Set alarm.
 - View alarm settings.
 - Activate/deactivate alarm timer.
- ⑦ **Display panel**
- Show the current status.
- ⑧ **SNOOZE/BRIGHTNESS**
- Snooze alarm.
 - Adjust the display brightness.
- ⑨ **SLEEP**
- Set the sleep timer.
- ⑩ **PRESET +/PRESET -**
- Skip to next/previous track.
 - Select a preset radio program.
 - In dock mode, press and hold to search within a track.
- ⑪ **OK/▶|| DOCK 2**
- In Dock 2 mode, start or pause iPod/iPhone/iPad play.
 - In other modes, select Dock 2 mode.
- ⑫ **TUNE+/TUNE-**
- Set time and date.
 - When setting alarm, adjust alarm clock and volume, and select a sound source.
 - Tune to an FM audio station.
- ⑬ **Dock 1 for iPod/iPhone/iPad with Lightning connection**
- ⑭ **Dock 2 for iPod/iPhone/iPad with 30-pin connection**
- ⑮ **USB charging port**
- ⑯ **AUDIO IN**
- Connect external audio device.
- ⑰ **FM ANTENNA**
- Connect an FM antenna to improve FM reception.

3 Get started

! Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

 
Model No. _____

Serial No. _____

Install batteries

☰ Note

- You can only use AC power as power supply. Batteries (not supplied) are for backup purpose.

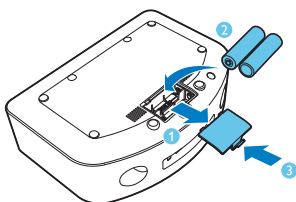

- 1 Open the battery compartment.
- 2 Insert 2 x AA size batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

 
! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.

Connect power

! Caution

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the bottom of the apparatus.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC power cord, ensure you have completed all other connections.
- To disconnect the set from the mains completely, remove the mains plug from the wall socket.

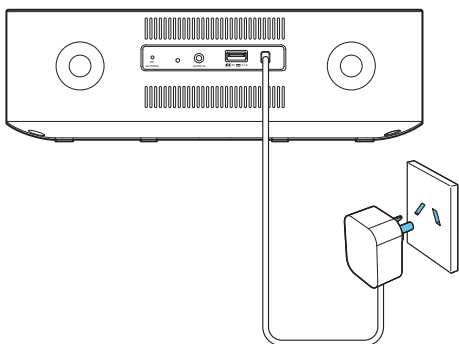

Connect the AC power cord to the wall outlet.

Turn on

Press and hold ϕ .

- ↳ The unit switches to the last selected source.

Switch to standby

Press and hold **⏻** again to switch the unit to standby mode.

- ↳ The time and date (if set) appear on the display panel.

Select source

Press **SOURCE** repeatedly to select from DOCK 1/Dock 2, FM and AUDIO IN.

Set time and date

- 1 In standby mode, press and hold **SET TIME** for 2 seconds.
 - ↳ [24H] begins to blink, and you can hear a beep.
- 2 Press **TUNE+** or **TUNE-** to select the 12/24 hour format.
- 3 Press **OK** to confirm.
 - ↳ 00:00 will display, and the hour digits begin to blink.
- 4 Repeat steps 2-3 to set the hour, minute, day, month and year.



Tip

- In 12 hour format, [MONTH--DAY] is displayed.
- in 24 hour format, [DAY--MONTH] is displayed.



Note

- When iPod/iPhone/iPad is connected, the docking unit synchronizes time from the iPod/iPhone/iPad automatically.

4 Play

Play from iPod/iPhone/iPad

You can enjoy audio from iPod/iPhone/iPad through this unit.

Compatible iPod/iPhone/iPad

The integrated dual dock unit supports the following iPod, iPhone, and iPad models:

Made for (Dock 1):

 
- iPod nano (7th generation)
- iPod touch (5th generation)
- iPad (4th generation)
- iPad mini
- iPhone 5

Also made for (Dock 2):

- iPod nano (2nd/3rd/4th/5th/6th generation)
- iPod classic
- iPod touch (1st/2nd/3rd/4th generation)
- iPad (3rd generation)
- iPad 2
- iPad
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Listen to the iPod/iPhone/iPad

- 1 Press **SOURCE** repeatedly to select DOCK 1 or DOCK 2 mode.
- 2 Place the iPhone/iPod/iPad into the Dock 1 or Dock 2.

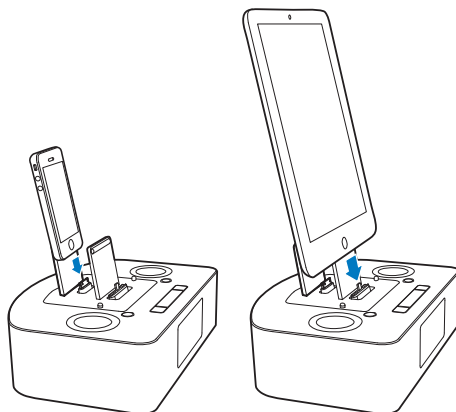

- To pause/resume play, press **▶||**.
- To skip to a track, press **◀|▶**.
- To search during play, press and hold **◀◀|▶▶** or **PRESET +/PRESET -**, then release to resume normal play.

Charge the iPod/iPhone/iPad

When the unit is connected to power, the docked iPod/iPhone/iPad begins to charge.

Tip

- For certain iPod models, it may take up to a minute before the charging indication appears.

Play from an external device

You can also listen to an external audio device through this unit.

- 1 Press **SOURCE** repeatedly to select the **AUDIO IN** source.
- 2 Connect a 3.5mm audio link cable (not supplied) to:
 - the **AUDIO IN** jack (3.5mm) on the back of the unit.
 - the headphone jack on an external device.

↳ the screen displays scrolling text message [AUDIO IN]; and shows date and time.
- 3 Start to play the device (see the device user manual).

5 Listen to radio

Note

- Only FM radio reception is available on this unit.

Note

- The preset list can store up to 20 stations.
- If the preset list is fully occupied, the screen will show P 20.
- If saving a radio station to a position that has already been occupied, the original radio station will be replaced.

Tune to a radio station

Tip

- Use an FM antenna for optimal reception. Fully extend and adjust the position of the antenna.
- Position the antenna as far as possible from TV, VCR or other radiation source.
- [STEREO] is default setting for tuner mode.
- In tuner mode, you can press and hold **DBB/DSC/SET TIME** to toggle between [STEREO] and [MONO], and the unit memorizes your setting even if you turn off the unit or turn to other sources.

- 1 Press **SOURCE** repeatedly to select FM mode.
- 2 Press and hold **TUNE+/TUNE-** for more than 2 seconds.
 - ↳ The radio tunes to next station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations.
 - To tune to a weak station, press **TUNE+/TUNE-** repeatedly until you find optimal reception.

Program radio stations

Radio station preset allows you to save radio stations, and quickly tune to a favorite station.

Program radio stations manually

1. Press **SOURCE** repeatedly to enter the FM mode.
2. Press **TUNE+/TUNE-** to tune to a radio station.
3. Press **PROG/SCAN**.
 - ↳ A position number flashes.
4. Press **OK** to save current radio station to the selected position.

Tip

- Press **PRESET +/PRESET -** to change the position to save a radio station.

Program radio stations automatically

- 1 Press **SOURCE** repeatedly to enter the FM mode.
- 2 Press and hold **PROG/SCAN**.
 - ↳ The screen displays [AUTO] (auto);
 - ↳ The unit starts to scan for all available radio stations automatically, and stores them to the preset list.
- 3 Wait until the auto scan finishes.
 - ↳ The first station in the preset list broadcasts automatically.

Select a preset radio station

- 1 Press **◀/▶** to select a preset number;

6 Other features

Set the alarm timer

You can set two alarms at different times.

Note

- Ensure that you have set the clock correctly.

- 1 Press and hold **AL1** or **AL2**.
 - ↳ The hour digits begin to blink, and you can hear one beep.
 - ↳ [AL SET] (all set) flashes on the screen.
- 2 Press **TUNE+**/**TUNE-** repeatedly to set the hour.
- 3 Press **OK** to confirm.
 - ↳ The minute digits begin to blink.
 - ↳ [AL SET] (all set) flashes on the screen.
- 4 Repeat steps 2-3 to set the minute, select when to ring alarm, and choose alarm sound source and alarm volume.

After alarm volume is set, the unit will exit alarm setting, and you can hear two beeps.

Tip





- If you select DOCK 1/DOCK 2 as alarm sound source, when there is no device docked, the alarm will automatically switch to buzzer to ring the alarm.
- If both alarms are set to the same time, only Alarm 1 will ring.

View the alarm settings

Press **AL1** or **AL2** to view alarm settings.

Activate and deactivate the alarm timer

When an alarm setting is shown on the screen, press **AL1/AL2** repeatedly to activate or deactivate the timer:

- ↳ If the timer is activated, [ AL 1] or [ AL2] is displayed.
- ↳ If the timer is deactivated, [ AL1] or [ AL2] disappears.

Snooze

When the alarm rings, press **SNOOZE**.

- ↳ The alarm stops, and the alarm icon flashes.
- ↳ The alarm will resume ringing 9 minutes later.

Note

 

- When using batteries to operate, alarms can only use buzzer as sound source.

Stop alarm ring

When the alarm rings, press the corresponding **AL1** or **AL2**.

- ↳ The alarm stops but the alarm settings remain.

Tip

- You can also press  to stop the alarm. The unit will switch to the last selected source.
- If you press and hold , the alarm will also be stopped, and the unit will switch to standby mode.
- If you do not stop the alarm, it will ring for 30 minutes.
- When an alarm rings, it shall begin from a relative low volume, and rise gradually to the highest alarm volume in 90 seconds.

Set the sleep timer

This unit can switch to standby automatically after a set period of time.

Press **SLEEP** repeatedly to select from 120, 90, 60, 45, 30 and 15 minutes.

↳ When the sleep timer is activated, the display shows **zZ**.

To deactivate sleep timer

1 Press **SLEEP** repeatedly until [OFF] (off) is displayed.

↳ The sleep timer is deactivated, **zZ** disappears on the display.

Adjust display brightness

When no alarm is firing, press **BRIGHTNESS** repeatedly to select different levels of display brightness.



Note

- When using batteries to operate, you can not select brightness levels.

7 Adjust sound

Adjust volume level

During play, press **VOL +/-** to increase/decrease the volume level step by step.



Tip

- Press and hold **VOL +/-** to increase/decrease the volume at faster speed.

Select a sound effect

During play, press **SET TIME** repeatedly to select from a preset sound effect and turn on/off dynamic bass enhancement.



Note

- The unit supports the following sound effects: **[POP]** (pop), **[JAZZ]** (jazz), **[ROCK]** (rock), **[CLAS]** (classic) and **[FLAT]** (flat).
- If DBB is activated, **[DBB]** is displayed.

8 Product information



Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Total output power	8 W
Frequency Response	80 Hz -16 kHz, ±3dB
Signal to Noise Ratio	≥ 67dBA
Aux Input (Audio in)	0,6 V RMS 20kohm

FM

Tuning Range	FM 87.5 - 108 MHz
Tuning grid	50 KHz
- Mono, 26dB quieting sensitivity	<22 dBf
- Stereo, 46dB quieting sensitivity	<51 dBf
Search Sensitivity	<41 dBf
Total Harmonic Distortion	<2%
Signal to Noise Ratio	>45 dB

Speakers

Speaker Impedance	4 ohm
Speaker Driver	57 mm
Sensitivity	>84dB/m/W

General information

AC power	230-240V~, 50Hz
Operation Power Consumption	44 W
Standby Power Consumption (clock display)	<1 W
Dimensions - Main Unit (W x H x D)	260 x 138 x 185 mm
Weight (Main unit, without packing)	1.13 kg

9 Troubleshooting

Caution

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the philips web site (www.philips.com/support). When you contact philips, ensure that your apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- Ensure that the batteries are inserted correctly.

No sound

- Adjust the volume.
- Check if the unit is performing auto scan. Volume is muted during auto scan process.

No response from the unit

- Remove the batteries from the main unit (if inserted), disconnect and reconnect the AC power plug, and turn on the unit again.

Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend the FM antenna.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power plug has been disconnected.
- Reset the clock/timer.

Warranty Against Defects

In this warranty:

We means WOOX Innovations Singapore Pte Ltd ARBN 165 105 975, and our contact details are set out at the end of this warranty;

You means the purchaser or the original end-user of the Goods;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or New Zealand; and

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand.

If you require assistance with the operation of the product, its features or specifications please call the Philips Consumer Care Centre on 1300 850 633 in Australia or 0800 639 953 in New Zealand.

Australia: If you are taken to have been supplied with our goods as a "Consumer" for the purposes of the Australian Consumer Law then : Our Goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This is not a complete statement of your legal rights as a consumer.

New Zealand: Our Goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This guarantee applies in addition to the conditions and guarantees implied by that legislation.

Additional Warranty: In addition to the rights and remedies that you may have under the Australian Consumer Law, Consumer Guarantees Act of New Zealand or any other applicable law, we provide the following warranty against defects: **(Additional Warranty)**.

1. If, during the first **12 months** from their date of purchase from the Supplier (**Warranty Period**), the Goods prove defective by reason of improper workmanship or materials and none of your statutory rights or remedies apply, we will repair or replace the Goods without charge.
2. We do not have to repair or replace the Goods under this Additional Warranty if the Goods have been used for a commercial purpose; misused, improperly or inappropriately installed, operated or repaired; abused; damaged; or not maintained in accordance with the manufacturer's instructions.
3. Even when we do not have to repair or replace the Goods, we may decide to do so anyway. In some cases, we may decide to substitute the Goods with a similar alternative product of our choosing. All such decisions are at our absolute discretion.
4. All goods that are repaired, replaced or substituted under this Additional Warranty continue to receive the benefit of this Additional Warranty for the time remaining on the original Warranty Period.
5. This Additional Warranty is limited to repair, replacement or substitution only. As far as the law permits, we will not be liable for any loss or damage caused to property or persons arising from any cause whatsoever.
6. In order to claim under this Additional Warranty you must telephone us on 1300 850 633 in Australia or 0800 639 953 in New Zealand within the Warranty Period. You will be asked for details of the Goods, a description of the defect and your personal details. Upon accepting your claim, we shall assist you with either returning the Goods to the Supplier for replacement or a Philips Authorised Service Centre in Australia or New Zealand for your Goods to be repaired. We may require that you return the Goods for repair, replacement or substitution.
 - * All returned Goods must be accompanied by satisfactory proof of purchase which clearly indicates the name and address of the Supplier, the date and place of purchase and identifies product. It is best to provide a legible and unmodified receipt or sales invoice.
 - * You must bear any expense for return of the Goods or otherwise associated with making your claim under this Additional Warranty.
7. This warranty is only valid and enforceable in Australia and New Zealand.

Contact us for further details.

In Australia contact

Consumer Care: 1300 850 633

E-mail: le.anz@philips.com

Website: www.philips.com/support

65 Epping Rd, North Ryde, NSW 2113

In New Zealand contact

Consumer Care: 0800 639 953

Email: le.anz@philips.com

Website: www.philips.com/support

© 2013 WOOX Innovations Limited. All rights reserved.

This product was brought to the market by WOOX Innovations Limited or one of its affiliates, further referred to in this document as WOOX Innovations, and is the manufacturer of the product.

WOOX Innovations is the warrantor in relation to the product with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V."



Specifications are subject to change without notice
2014 © WOOX Innovations Limited. All rights reserved.
This product was brought to the market by WOOX Innovations Limited
or one of its affiliates, further referred to in this document as WOOX
Innovations, and is the manufacturer of the product. WOOX Innovations
is the warrantor in relation to the product with which this booklet
was packaged. Philips and the Philips Shield Emblem are registered
trademarks of Koninklijke Philips N.V.

AJ7260D_79_UM_V2.1

