


PHILIPS

GoZero

Filtration bottle



One bottle, two filters,
endless possibilities

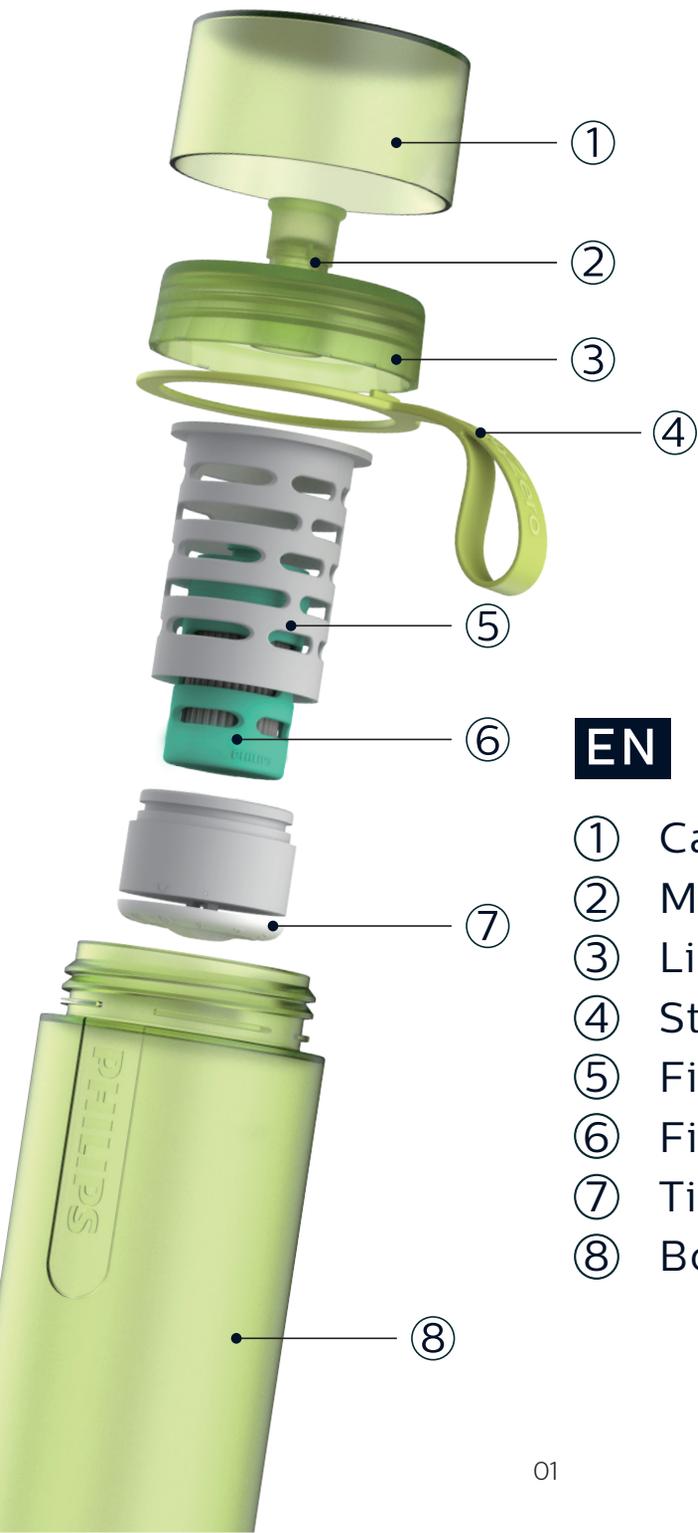

EN

- ① Cap
- ② Mouthpiece
- ③ Lid
- ④ Strap
- ⑤ Filter case
- ⑥ Filter cartridge
- ⑦ Timer
- ⑧ Bottle

Get started

1. Before you go outdoors

Clean the bottle except for the filter cartridge with a mild detergent or in the dishwasher (max 50 °C). Take the filter out of the packaging, rinse it under the tap water for 10 seconds. Unscrew the lid anti-clockwise. Remove the bottom cover of the filter case, and insert the filter cartridge. Put the cover back, then set the time of the next change by turning the dial. The arrow should be pointing at the install month, and the dot indicates when to replace the filter.

2. Filling the bottle

Fill the bottle with visually clear water up to the Max line. Screw the lid back on to the bottle. Remove the cap, pull out the mouthpiece and it's ready for use.

3. Changing the filter cartridge

One filter can filter up to 100 litres of clear water. To ensure optimal filtration and hygiene, it is recommended to replace the filter every 4 weeks. To do this, repeat step 2.

Warning

- Always use the most clear and reliable water source possible. Strictly follow the instruction and educate yourself on backcountry water safety. Improper usage of GoZero™ Active bottle with Adventure filter increases your risk of exposure to harmful microorganisms and getting gastrointestinal illness. GoZero™ Active with Adventure filter should only be used to filter ambient water (5°C to 38°C); never use it to filter seawater or chemically contaminated water. The quality of the filtered water is not guaranteed if the product is submitted to conditions other than those encountered during its normal use.
- Consume the water in the bottle within a day.
- The Fitness filter is compatible with the GoZero™ Active bottle. If you plan to switch to the Fitness filter after using the Adventure filter, make sure to thoroughly clean the entire bottle first.
- The filtration of particles from the tap water may result in a significantly lower flow rate. In such cases, we recommend to change the filter more frequently.
- When not using your GoZero™ Active bottle for a longer period of time, the bottle should be disassembled and stored completely dry. If it hasn't been used for more than 2 days, rinse the filter under the tap water for 1 minute; if it hasn't been used for more than 4 days, the filter should be replaced.
- Always store spare filters in a cool, dry place and ensure that they are tightly sealed.
- Dispose of used Adventure filter with your general waste and the bottle according to local provisions.

Disclaimer

Stated filtration performance and life time is conducted under standard laboratory conditions. For more information, please visit www.philips.com/water.

The effectiveness may be limited by the environmental or hygienic conditions that could cause the recontamination of water after it has passed through the filter. These conditions include but are not limited to:

- Failure to maintain the cleanness of the mouthpiece
- Sharing of the bottle between individuals
- Use in or exposure to extreme heat or freezing temperatures

AquaShield and its affiliated entities and related companies shall be neither liable for any damages arising out of or because of the use of the GoZero™ Active bottle with Adventure filter for any purpose other than for which it is clearly intended, nor for any malfunction resulting from the failure of the user to strictly follow the usage and safety information in this manual.

1. Cleaning the bottle

Clean the bottle except for the filter cartridge with mild detergent by hand or in the dishwasher (max 50 °C).

2. Preparing and installing the filter

Take the filter out of the packaging, check if the sealing ring is in place. Rinse it under tap water for 10 seconds. Unscrew the lid anti-clockwise. Remove the bottom cover of the filter case and insert the filter cartridge. Put the cover back, and set the time of the next change by turning the dial. The arrow should be pointing at the install month, and the dot indicates when to replace the filter.

3. Filling the bottle

Fill the bottle with tap water up to the Max line. Screw the lid back on to the bottle. Remove the cap, pull out the mouthpiece and enjoy the crisp and pure tasting water!

4. Changing the filter cartridge

One filter can filter up to 200 liters of tap water. To ensure optimal filtration and hygiene, it is recommended to replace the filter every 4 weeks. To do this, repeat step 2.

Caution

- GoZero™ Active bottle may only be used with municipally treated ambient tap water (5 C to 38 C), which is safe to drink according to legal regulations.
- The Adventure filter is compatible with the GoZero™ Active bottle. If you plan to switch back to the Fitness filter after using the Adventure filter, make sure to thoroughly clean the entire bottle first.
- Consume the water in the bottle within 24 hours.
- Do not fill the bottle with water that is microbiologically unsafe or of unknown quality without adequate disinfection.
- When not using your GoZero™ Active bottle for a longer period of time, the bottle should be disassembled and stored completely dry. If it hasn't been used for more than 2 days, rinse the filter under tap water for 1 minute; if it hasn't been used for more than 7 days, the filter should be replaced.
- Always store spare filters in a cool, dry place and ensure that they are tightly sealed.

Guarantee & Service

If you need information or if you have any problems, please visit the Philips website at www.philips.com/water or contact the consumer care center in your country. If there is no consumer care center in your country, go to the local dealer.