

Philips
CD Soundmachine

Pink

AZ102C



Enjoy Music wherever you go

You take pleasure in the simple things in life and delight in convenience. The sleek and portable design lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

Enjoy your music from different sources

- Compatible with CD-Recordable and CD-ReWritable
- FM/MW tuner for radio enjoyment

Easy to use

- CD Shuffle/Repeat for personalized music enjoyment
- 20-track CD programmable
- Line-in connection

Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

PHILIPS

Specifications

Audio Playback

- Loader Type: Top
- Playback Media: CD, CD-R, CD-RW
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play, Shuffle Play
- Programmable Tracks: 20

Tuner/Reception/Transmission

- Tuner Bands: FM, MW
- Antenna: FM Antenna

Sound

- Output power (RMS): 2 x 1W
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Speaker diameter: 3"
- Volume Control: rotary

Connectivity

- 3.5mm stereo line in

Power

- Mains power: 220 - 230 V
- Battery type: LR14
- Battery voltage: 1.5 V
- Number of batteries: 6

Accessories

- Included accessories: AC Power Cord, User Manual, Warranty certificate

Dimensions

- Packaging dimensions (W x H x D): 284 x 155 x 264 mm
- Product dimensions (W x H x D): 262 x 123 x 245 mm
- Weight: 1.7 kg
- Weight incl. Packaging: 2.1 kg

Highlights

Dynamic Bass Boost

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

CD Shuffle/Repeat

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

Line-in connection

Line-in connection



Issue date 2014-02-13

Version: 1.0.3

12 NC: 8670 000 66921
EAN: 87 12581 55972 4

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com