




AZ1032
AZ1033



PHILIPS

1 Choosing Power Supply


- a Connect the AC power cord to the **AC ~** inlet and the wall socket.
- OR-
- b Open the battery door and insert 6 x **C batteries** (not included)

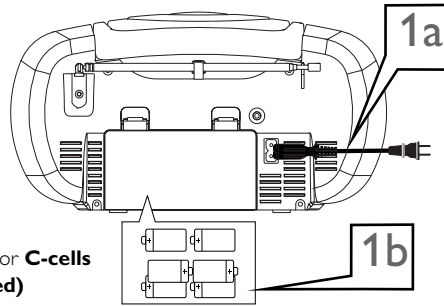

R-14, UM-2 or C-cells
(not included)

2 Listening to the Radio

- a Push the **source selector** to **TUNER**
- b Push **BAND** to **MW** or **FM ST.** (stereo)
- c Turn **TUNING** to tune to a station

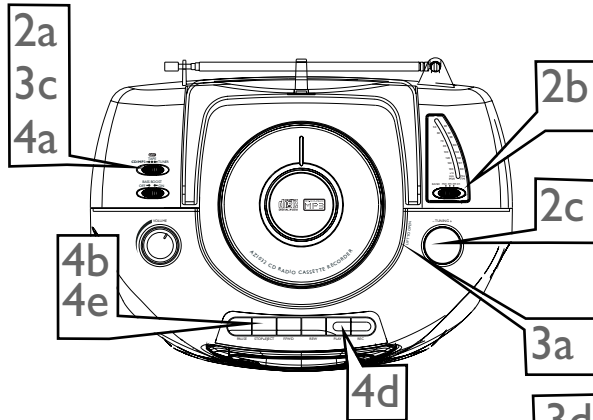


3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, and MP3-CD.

IMPORTANT: For a disc with CD Audio tracks and MP3 files, only the CD audio tracks will be played.

- a Lift the CD door at **LIFT TO OPEN**.
- b Insert a CD with the printed facing up and press the CD door gently.
- c Adjust the **source selector** to **CD/MP3**.
- d Press **▶/II** to start playback.
- e To stop disc playback, press **■**.

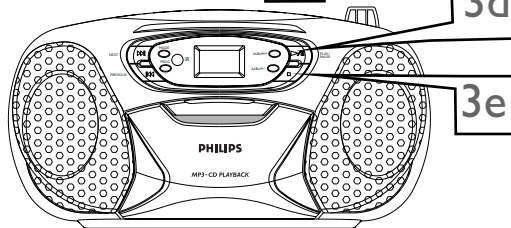

4 Playing a tape

- a Adjust the **source selector** to **TAPE/OFF**.
- b Press **■▲** to open the cassette holder.
- c Insert a cassette and close the door.
- d Press **◀** to start playback.
- e To stop the tape, press **■▲**.



Source selector
Slide to select functions:
CD/MP3, TAPE/OFF
or **TUNER**

BASS BOOST
Slide to turn the bass enhancement on/off

VOLUME
Turn to adjust volume level

CASSETTE RECORDER keys
Press to operate a tape.

MODE
Press to select different play modes, such as REPEAT or RANDOM

NEXT, PREVIOUS
▶▶, ◀◀
Skips & searches CD tracks forwards/backwards

PROG
Use to program CD tracks and review a CD program

Display
Shows CD functions

Telescopic antenna
Improves FM reception.

BAND
Slide to select wavebands



TUNING
Turn to tune to a radio station

LIFT TO OPEN
Lift here to open the CD door.



PLAY/PAUSE ▶/II
Press to start or pause CD playback

STOP ■
Press to stop disc playback or erase a disc program

ALBUM +/- MP3 only: Press to select an album (up, down)

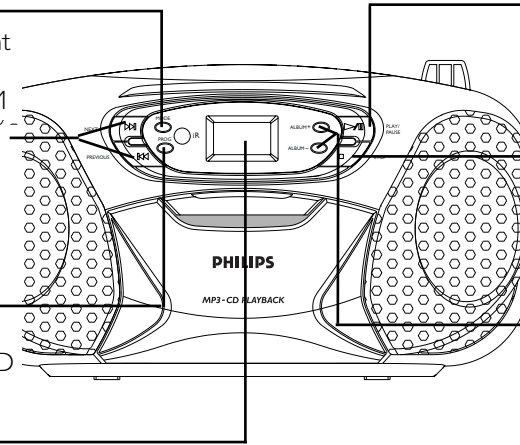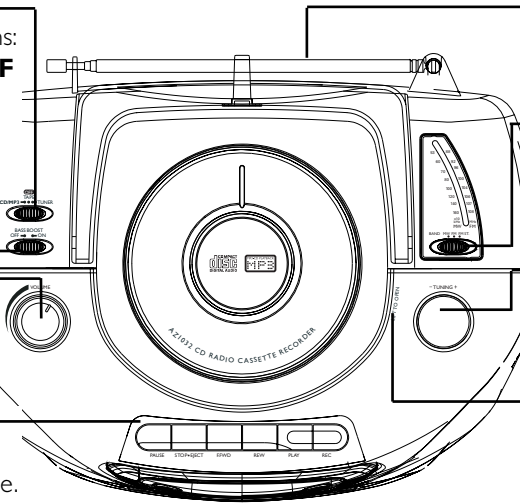

REMOTE CONTROL

  

Insert 2 batteries, type **AA, R06** or **UM3** (not included)