




AZ1303




PHILIPS

1 Choosing Power Supply

 - a Connect the AC power cord to the **AC ~** inlet and the wall socket.
- OR-
- b Open the battery door and insert 8 x **C batteries** (not included).

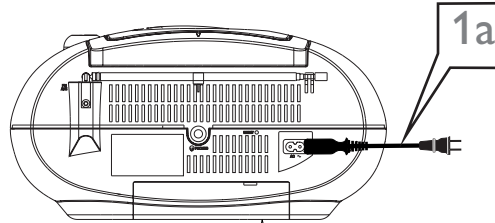


R-14, UM-2 or C-cells (not included)

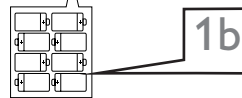 

2 Listening to the Radio

 - a Push the **source selector** to **TUNER**
- b Press **STOP/BAND** ■ to select FM or AM
- c Press and hold **PROG** until the frequency and **MEMORY** flash
 - Available stations are programmed (FM or AM).
- d Press **ALBUM/ PRESET** -, + once or more until the desired preset station is displayed.

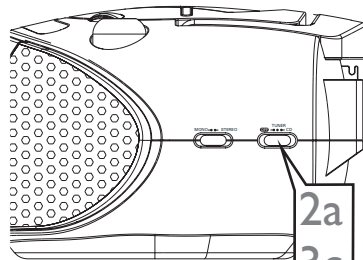


3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, and MP3-CD.

IMPORTANT: For a disc with CD Audio tracks and MP3 files, only the CD audio tracks will be played.

- a Lift the CD door at **LIFT TO OPEN**.
- b Insert a CD with the printed facing up and press the CD door gently.
- c Adjust the **source selector** to **CD**.
- d Press ►|| to start playback.
- e To stop disc playback, press ■.

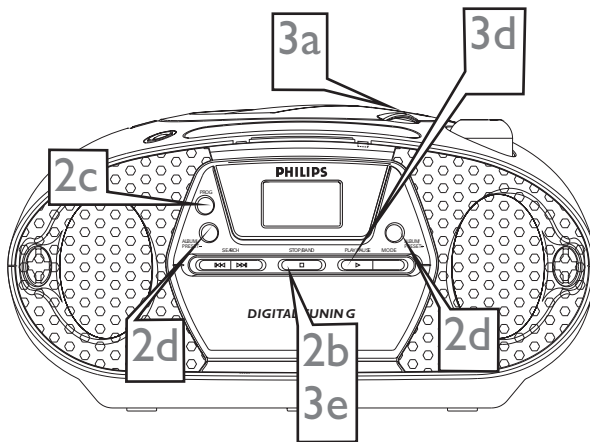 

• Remote control not supplied



VOLUME

Turn to adjust volume level

MONO•STEREO

Slide to select mono or stereo FM reception

Source selector

Slide to select functions: **CD, TUNER** or **OFF**.

LIFT TO OPEN

Lift here to open the CD door.

Display

Shows the status of the set

ALBUM/ PRESET + MP3 only:

Press to select an album (up); **TUNER:** Press to select a preset radio station (up)

MODE

Press to select different play modes, such as REPEAT or RANDOM



Press to start or pause CD playback.

STOP/BAND ■

Press to stop CD playback or erase a CD program; Press to select wavebands.

Telescopic antenna

Improves FM reception.

DBB

Press to turn the bass enhancement on/off.

PROG

Use to program CD tracks or preset radio stations.

ALBUM/ PRESET - MP3 only:

Press to select an album (down); **TUNER:** Press to select a preset radio station (down)

SEARCH ◀◀ ▶▶

Skips & searches CD tracks backwards/ forwards; Tunes to radio stations (down/up).

