



AZ1301, AZ1325




PHILIPS

1 Choosing Power Supply

a Connect the AC power cord to the **AC Mains**.
(Make sure you remove batteries)


-OR-

b (1) Make sure you remove the power cord from the set and wall outlet.
(2) Open the battery door and insert 6 x C batteries.

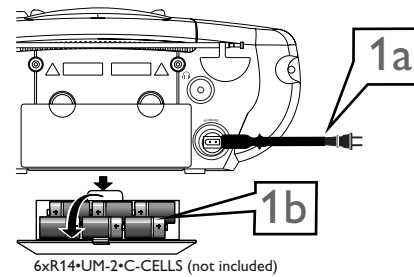

2 Listening to the Radio

a Adjust the **Power Slider** to **FM** or **AM**.
b Press and hold **PROG** until the display shows **Auto**.
• Available stations are programmed. (20FM, 10AM)
c Press **PRESET +, -** to select a preset radio station.

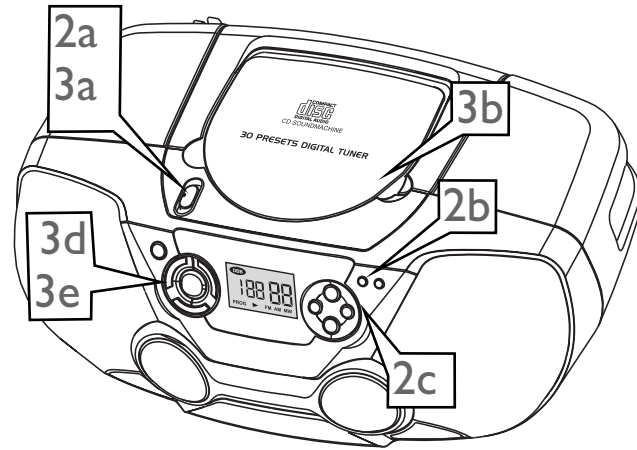

3 Playing a CD

This CD player plays Audio Discs including CD-Recordables and CD-Rewritables.

a Adjust the **Power Slider** to **CD**.
b Opens the CD door.
c Insert a CD with the printed side facing up and close the door.
d Press **▶||** to start playback.
e To stop CD playback, press **■**.

Telescopic antenna
Improves FM reception.

Power slider
Slide to select function **CD, AM, FM, OFF**.

▶||
Press to start or pause CD playback.

■
Press to stop CD playback or erase a CD program.

SEARCH ◀◀ ▶▶
Skips & searches CD tracks backwards/forwards.
Tunes to radio stations (down/up).

PROG
Use to program CD tracks and preset radio stations.

OPEN•CLOSE
Press to open the CD door.

MODE
Use to select different play modes: e.g. **REPEAT** or **SHUFFLE**



VOLUME ▲, ▼
Press to adjust volume level (maximum to 32).

PRESET +, -
Press to select a preset radio station (up/down)

Display illumination: Low

REMOTE CONTROL (for AZ1325 only)

🎧 - 3.5mm stereo headphone jack

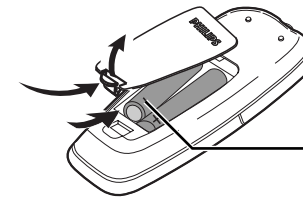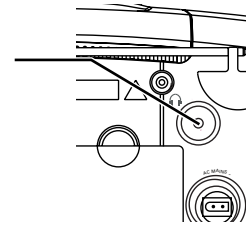

Insert 2 batteries, type **AAA, R03** or **UM4** (not included)