

Basic Function/Radio

Basic functions

Switching on/off the set

- To switch on, press **POWER**. → Display lights up.The system will switch to the last selected source.

- To switch off, press **POWER** again. → Display lights off.

Adjusting volume and sound

Adjust the sound with the **VOLUME** and **DBB** controls.

Digital tuner

Tuning to radio stations

- Press repeatedly **SOURCE** (or **TUNER** on the remote control) to select **FM** or **MW**. → “TUNER” is displayed briefly, then the radio station frequency, waveband and, if programmed, a preset number are shown (See [2]).

- Press and hold **◀◀** or **▶▶** until the frequency in the display starts running. → The radio automatically tunes to a station of sufficient reception. Display shows “SEARCH” during automatic tuning.
- Repeat step 2 if necessary until you find the desired station.

- To tune to a weak station, press **◀◀** or **▶▶** briefly and repeatedly until you have found optimal reception.

To improve radio reception:

- For **FM**, extend, incline and turn the telescopic aerial. Reduce its length if the signal is too strong.
- For **MW**, the set uses a built-in aerial. Direct this aerial by turning the whole set.

Programming radio stations

You can store 15 FM and 10 MW radio stations in the memory manually or automatically (Auto store).

MP3-CD/CD Player

Manual programming

- Tune to your desired station (see **Tuning to radio stations**).
- Press **PROG** to activate programming. → Display: **PROG** flashes.
- Press **ALBUM/PRESET +/-** (**ALBUM/PRESET ▲, ▼** on the remote control) once or more to allocate a number (from 1 to 25).
- Press **PROG** to confirm.
- Repeat steps 1-4 to store other stations.

Helpful hints:

– You can erase a preset station by storing another frequency in its place.

Autostore

Autostore automatically starts programming radio stations from preset 1. Any previous presets e.g. manually programmed will be erased.

- Press repeatedly **SOURCE** (or **TUNER** on the remote control) to select **FM** or **MW**. → Available stations are programmed (MW or FM). After all stations are stored, the first autostore preset station will then automatically play.
- Press **PROG** until “AUTO” flashes. → The radio automatically tunes to a station of sufficient reception. Display shows “SEARCH” during automatic tuning.

- To tune to a weak station, press **◀◀** or **▶▶** briefly and repeatedly until you have found optimal reception.

To listen to a preset or autostore station

Press the **ALBUM/PRESET +/-** (**ALBUM/PRESET ▲, ▼** on the remote control) buttons once or more until the desired preset station is displayed.

Programming radio stations

You can store 15 FM and 10 MW radio stations in the memory manually or automatically (Auto store).

MP3-CD/CD Player

About MP3

The music compression technology MP3 (MPEG1 Audio Layer 3) significantly reduce the digital data of an audio CD while maintaining CD quality sound.

- Getting MP3 files:** you can either download legal music files from the internet to your computer hard disc, or create such files by converting audio CD files in your computer through appropriate encoder software. (128kbps bit rate or higher is recommended for MP3 files.)

- Creating a MP3 CD:** burn the music files from your computer hard disc on a CDR or CDRW using your CD burner.

Helpful hints:

– *Make sure that the file names of the MP3 files end with **.mp3** or **.wma**.*

– *Number of albums: maximum 100.*

– *Number of tracks: maximum 999.*

– *The length of file names affects the number of tracks for playback. With shorter file names, more files can be burned on a disc.*

Playing a disc

This player plays Audio Discs including CD-R/ CD-RW, MP3 CD and WMA. Do not try to play a CD-ROM, CD-I, CDV,VCD, DVD or computer CD.

IMPORTANT!

- CDs encoded with **copyright protection technologies** by some record companies may be unplayable by this product.
- DRM-protected WMA disc is not supported.

- Press repeatedly **SOURCE** (**CD** on the remote control) to select CD source. → Display shows flashing “READ” if CD source is selected (see [3]).

- “ NO DISC” will be displayed if CD is not loaded.

- Press **▲** to open the disc door.
- Insert a disc with the printed side facing up and press the disc door gently to close. →The disc scanning of MP3-CD may run longer than audio CD. →Display: The total number of tracks appears (and album number for MP3/WMA) (see [4]).

- Press **▶||** to start playback. → First the song title of the track scrolls across the display, then the track number and the elapsed playing time are displayed.

For MP3-CD/WMA only:

- The current track number (**TRK**) and album number (**ALB**) will be displayed interchangeably.

- To pause playback press **▶||**. → Display: **▶** and the elapsed playing time flash.
- Press **▶||** again to resume playback.

- To stop playback, press **■**.

Helpful hints:

The disc playback will also stop when:

- you open the disc compartment door;
- you select **FM, MW, AUX** or **DOCK**;
- the disc has reached the end of the playback.

Selecting a different track

- Press **◀◀** or **▶▶** once or repeatedly until the desired track number appears in the display.
- For MP3-CD/WMA:** First press **ALBUM/PRESET +/-** (**ALBUM/PRESET ▲, ▼** on the remote control) once or more to find your album.

- In the pause/stop position, press **▶||** to start playback.

MP3-CD/CD Player

Finding a passage within a track

- During playback, press and hold down **◀◀** or **▶▶**. → The disc is played at high speed and low volume.
- When you recognize the passage you want, release **◀◀** or **▶▶**. → Normal playback resumes.

Programming tracks

You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.

- In the stop position, press **◀◀** or **▶▶** to select your desired track number.
- For MP3-CD/WMA:** First press **ALBUM/PRESET +/-** (**ALBUM/PRESET ▲, ▼** on the remote control) once or more to find your album.
- Press **PROG** to store desired track. → Display shows “PRO 2” , indicating the programmed location (See [5]).
- If you attempt to program without first selectig a track, display will show “SELECT TRACK” briefly, then the total track number and playing time.
- Repeat steps **1** to **2** to select and store all desired tracks.
- Press **▶||** to play the program. → “PROG” is dispalyed during program playback.

To review your program

- In the stop position, press and hold **PROG** 3 seconds. → The display shows all the stored tracks (and album numbers for MP3) in sequence.

Helpful hints:

– Display shows “NO PROG” if no track is programmed.

– If you try to store more than 20 tracks, no track can be stored and the display will show “PROGRAM FULL”.

To erase a program

- You can erase a program by:
 - pressing **■** (twice during playback or once in the stop position);
 - selecting **FM, MW, AUX** or **DOCK**;
 - pressing **POWER** to power off;
 - opening the disc door.
- “PROGRAM CLEAR” scrolls across the display once, and “PROG” disappears.

Selecting different play modes (See [6])

You can select and change the various play modes before or during playback, and combine play modes with **PROG**.

REP – plays the current track continuously.
REP ALL – plays the entire disc/program continuously.

SHUF – plays all tracks in random order.
REP ALL SHUF – plays all tracks in random order continuously.

- To select play modes, press **MODE** on the set (**REPEAT** or **SHUFFLE** on the remote contorl) once or more.
- Press **▶||** to start playback if in the stop position. → Shuffle play will start automatically soon after shuffle mode is selected.
- To select normal playback, press **MODE** on the set (**REPEAT** or **SHUFFLE** on the remote control) repeatedly until the various play modes are no longer displayed. – You can also press **■** to cancel your play modes.

Helpful hints:

– Shuffle (SHUF and REP ALL SHUF) play is not available in the program mode.

AUSTRALIA - Philips Manufacturers Warranty for Australia only

These warranty conditions are valid for the following consumer electronics products: Colour Televisions, Projection TV, Plasma & LCD TV, Video Cassette Recorders, CD Recorders & Players, DVD Players, DVD Recorders, DVD Recorders with HDD, Audio Systems, Home Theatre systems, Digital Set Top Box & Portable Audio products.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

1 Year Free Repair Service - at Philips ASC

Colour Television, Plasma Television, LCD Television, Projection Television, DVD/R/VC Combo, DVD Recorders with Hard Drive, LCD Projectors, Wireless Audio Systems, Audio Systems, Home Theatre Systems & Digital Set-Top-Box.

1 Year free Replacement – at your Retailer

Portable Audio, MP3 Infotainment products, Video Cassette recorders, DVD Player, DVD/VCR Combo Players, DVD Recorder without HDD & Portable DVD/LCD players.

Conditions of Repair Warranty

All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided.

This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.

If a replacement product is supplied under the repair policy it is warranted, under this warranty, for the remainder of the warranty of the original purchased product only.

Home service is provided only within the normal service area of one of our recommended Authorised Service Centres (ASC). It will be provided for television receivers only with a screen size of 67cms or above (product includes CRT, LCD TV, PTV, and Plasma TV). Televisions with screen size less than 67cms and all other products types are to be taken or sent by the consumer to the workshop of your nearest Authorised Service Centre, at the Consumer's expense.

This Manufacturers Warranty is limited to 3 months for the above listed Consumer Electronics products if used in commercial applications.

Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.

Product accessories are covered by the same warranty period. Please contact the Philips Technology

Warranty valid for all new products purchased after **1st January 2007**

NEW ZEALAND - Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

1. The product must have been purchased in New Zealand.As proof of purchase, retain the original sales docket indicating the date of purchase.

2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.

3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use onthe incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.

4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.

5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller
Philips New Zealand Ltd.
✉ **P.O. Box 41.021**
Auckland
☎ **(09) 84 94 160**
fax ☎ **(09) 84 97 858**

Environmental information

All unnecessary packaging material has been omitted.The packaging can be easily separated into three materials: cardboard, polystyrene and plastic.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, dead batteries and old equipment.

DOCK

Playing iPod using AZ1330D

By connecting the iPod to your AZ1330D, you can listen to the sound of the docked player through the powerful speakers of the Hi-Fi system.

Compatible portable player

- Most Apple iPod models with 30-pin dock connector as follows: 20GB, 40GB, 20/30GB photo, 40/60GB photo, 30GB video, 60/80GB video, mini and nano.

Dock adaptor

Before plugging your player in the dock, snap the suitable dock adaptor into the dock to provide a snug fit for the player to be docked.

Selecting the correct dock adaptor

- For the iPod dock, 8 dock adaptors of different type, as indicated at the back of the adaptor, are included to fit the following iPod: 20GB, 40GB, 20/30GB photo, 40/60GB photo, 30GB video, 60GB video, miniand nano.

Playing Apple iPod using AZ1330D

- Snap the compatible iPod into the dock connector.
- AZ1330D will auto switch to DOCK source (See [7]).

- For iPod, the connected player will play automatically.

Auxiliary connection

Notes:

- By using the buttons (**▶||**,**◀◀**,**▶▶**)and **VOLUME**) on the AZ1330D and its remote control, the following disc playback features are available: Play/Pause, selecting next/previous track, fast forwarding/rewinding and changing volume.
- The buttons (**▶||**,**◀◀**,**▶▶**)and **VOLUME**) on the AZ1330D and its remote control can work only with playback of the audio contents stored on the docked player.

Charging iPod battery using the dock

In the power-on and standby mode of AZ1330D, you can charge the iPod when docking.

Helpful hints:

– In DOCK and CD mode, if AZ1330D is in the STOP position for 15 minutes, it will auto switch to standby.

Connecting an external device

You can listen to the sound of the connected external device through your AZ1330D’s speakers.

- Press repeatedly **SOURCE** (or **AUX** on the remote contorl) to select **AUX** mode.
- Use the supplied line-in cable to connect AZ1330D’s AUX jack (3.5 mm, located on the top panel) to an AUDIO OUT or headphone jack on an external equipment (such as CD player, VCR or iPod).