




AZ1816



PHILIPS

### 1 Choosing Power Supply


- a Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
- OR-
- b Open the **battery door** and insert 6 x C batteries (not included).

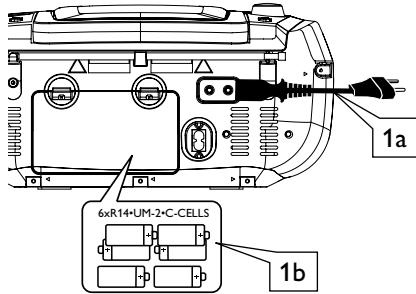

R-14, UM-2 or C-cells (not included)

### 2 Listening to the Radio

- a Push the **source selector** to **TUNER**.
- b Adjust **BAND** to **MW** or **FM**.
- c Turn **TUNING** to tune to a station.

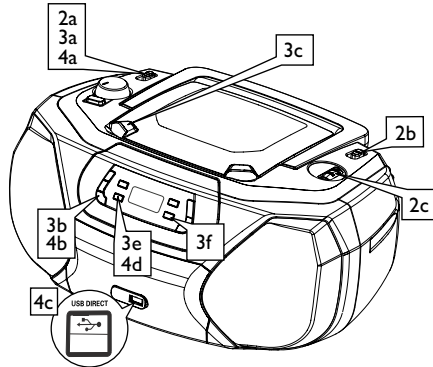

### 3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3-CD and WMA.

- a Adjust the **source selector** to **CD/USB**.
- b Press **CD/USB** to enter CD mode if USB DIRECT is displayed.
- c Open the disc door.
- d Insert a disc with the printed side facing up and close the door.
- e Press **▶||** to start playback.
- f To stop disc playback, press **■**.

### 4 Playing a USB device

- a Push the **source selector** to **CD/USB**.
- b Press **CD/USB** to enter USB mode if USB DIRECT is NOT displayed.
- c Plug a compatible USB mass storage device to AZ1816's USB port marked .
- d Press **▶||** on your AZ1816 to start play.



#### Source selector

Slide to select function: CD/MP3 (or USB mode), or radio

#### VOLUME

Turn to adjust volume level

#### DBB

Turns the bass enhancement on/off

#### LIFT TO OPEN

Lift to open the disc door

#### PROG

Use to program disc tracks and review a disc program.

#### MODE

Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)

#### CD/USB

Press to enter disc or USB mode

#### ▶||

Press to start or pause disc/USB playback

#### Display

Shows disc/USB functions

#### TUNING

Turn to tune to a station

#### BAND

Slide to select waveband

#### Telescopic antenna

Improves FM reception

#### ◀◀ ▶▶

Briefly press to skip to the beginning of the current/previous/ later disc track; During disc playback, press and hold to find a particular passage backward/forward.

#### ALBUM +/-

For **MP3-CD/WMA/USB**: Press to select albums

#### ■

Press to stop disc/USB playback, or erase a disc program

#### USB Port

Connects an external USB mass storage device