




AZ1816




PHILIPS

- 1 Choosing Power Supply**
- a Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
 - OR-
 - b Open the **battery door** and insert 6 x C batteries (not included).

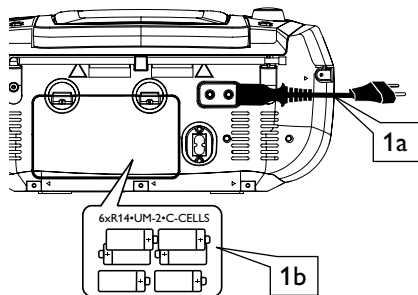

R-14, UM-2 or C-cells
(not included)

- 2 Listening to the Radio**
- a Push the **source selector** to **TUNER**.
 - b Adjust **BAND** to **MW** or **FM**.
 - c Turn **TUNING** to tune to a station.

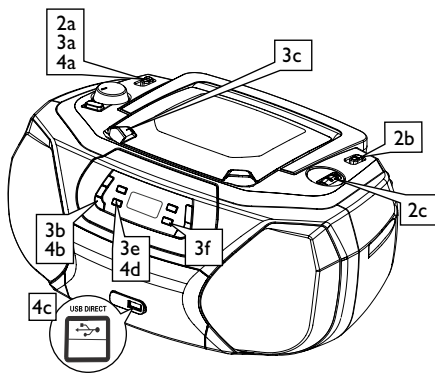

- 3 Playing a disc**
- This player plays Audio Discs including CD-R/CD-RW, MP3-CD and WMA.
- a Adjust the **source selector** to **CD/USB**.
 - b Press **CD/USB** to enter CD mode if USB DIRECT is displayed.
 - c Open the disc door.
 - d Insert a disc with the printed side facing up and close the door.
 - e Press **▶||** to start playback.
 - f To stop disc playback, press **■**.

- 4 Playing a USB device**
- a Push the **source selector** to **CD/USB**.
 - b Press **CD/USB** to enter USB mode if USB DIRECT is NOT displayed.
 - c Plug a compatible USB mass storage device to AZ1816's USB port marked .
 - d Press **▶||** on your AZ1816 to start play.

- Source selector**
Slide to select function: CD/MP3 (or USB mode), or radio
- VOLUME**
Turn to adjust volume level
- DBB**
Turns the bass enhancement on/off
- LIFT TO OPEN**
Lift to open the disc door
- PROG**
Use to program disc tracks and review a disc program.
- MODE**
Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)
- CD/USB**
Press to enter disc or USB mode
- ▶||**
Press to start or pause disc/USB playback
- Display**
Shows disc/USB functions
- TUNING**
Turn to tune to a station
- BAND**
Slide to select waveband
- Telescopic antenna**
Improves FM reception
- ◀◀ ▶▶**
Briefly press to skip to the beginning of the current/previous/ later disc track; During disc playback, press and hold to find a particular passage backward/forward.
- ALBUM +/-**
For **MP3-CD/WMA/USB**: Press to select albums
- Press to stop disc/USB playback, or erase a disc program
- USB Port**
Connects an external USB mass storage device

