

Quick Use Guide

AZ1830

Choosing Power Supply

Connect the AC power cord to the **C~ Mains** inlet and the wall socket.

Open the **battery door** and insert 6 C batteries (not included).

Listening to the Radio

Push the **source selector** to **UNER**.

Adjust **BAND** to **MW** or **FM**. Turn **TUNING** to tune to a station.



Playing a disc

This player plays Audio Discs including CD-R/CD-RW, and P3-CD.

Adjust the **source selector** to **D/USB**.

Press **CD/USB** to enter CD mode if USB DIRECT is displayed. Open the disc door.

Insert a disc with the printed side facing up and close the door. Press **►II** to start playback. Stop disc playback, press **■**.

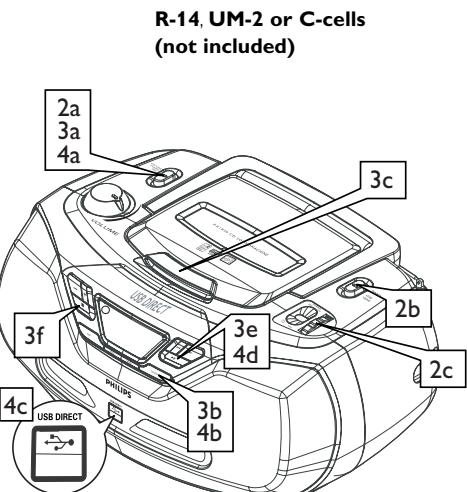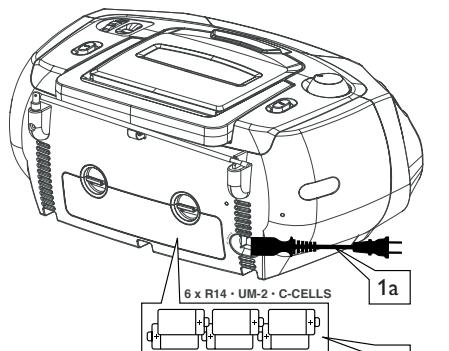

4 Playing a USB device

- Push the **source selector** to **CD/USB**.
- Press **CD/USB** to enter USB mode if USB DIRECT is NOT displayed.
- Plug a compatible USB mass storage device to AZ1830's USB port marked .
- Press **►II** on your AZ1830 to start play.

PHILIPS

Source selector

Slide to select function: CD/MP3 (or USB mode), or radio

VOLUME

Turn to adjust volume level

LIFT TO OPEN

Lift to open the disc door

ALBUM+/-

For **MP3-CD/USB** play:
Press to select albums

 Press to stop disc/USB playback, or erase a disc program

DBB

Turns the bass enhancement on/off

PROG

Use to program disc tracks and review a disc program.

USB Port

Connects an external USB mass storage device

TUNING

Turn to tune to a station

BAND

Slide to select waveband

Telescopic antenna

Improves FM reception

 
Briefly press to skip to the beginning of the current/previous/later disc track;
During disc playback, press and hold to find a particular passage backward/forward.

 Press to start or pause disc/USB playback

Display

 
Shows disc/USB functions

CD/USB

Press to enter disc or USB mode

MODE

Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)



Removing the insulation plastic tab