 
 


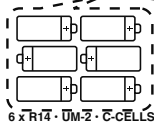

# PHILIPS

## AZ1832B

Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome)

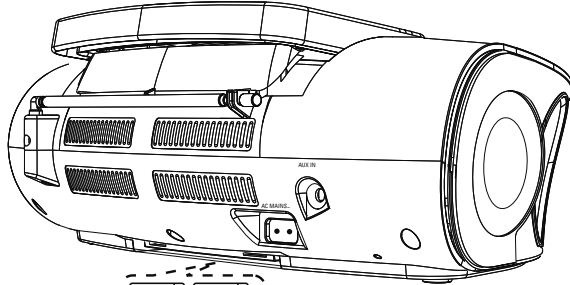

R-14, UM-2 or C-cells  
(not included)

### 1 Choosing Power Supply

- a Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
- OR-
- b Open the **battery door** and insert 6 x C batteries (not included).

### 3 Playing a disc


This player plays Audio Discs including CD-R/CD-RW, MP3-CD and WMA.

 
- a Adjust the **source selector** to **CD/USB/AUX**.
- b Press **CD** to enter CD mode if USB is displayed.
- c Open the disc door.
- d Insert a disc with the printed side facing up and close the door.
- e Press **▶||** to start playback.
- f To stop disc playback, press **■**.

### 2 Listening to the Radio

- a Push the **source selector** to **FM** or **MW**.
- b Turn **TUNING** to tune to a station.

### 4 Playing a USB device

- a Push the **source selector** to **CD/USB/AUX**.
- b Press **USB** to enter USB mode if USB is NOT displayed.
- c Plug a compatible USB mass storage device to AZ1832B's USB direct marked .
- d Press **▶||** on your AZ1832B to start play.

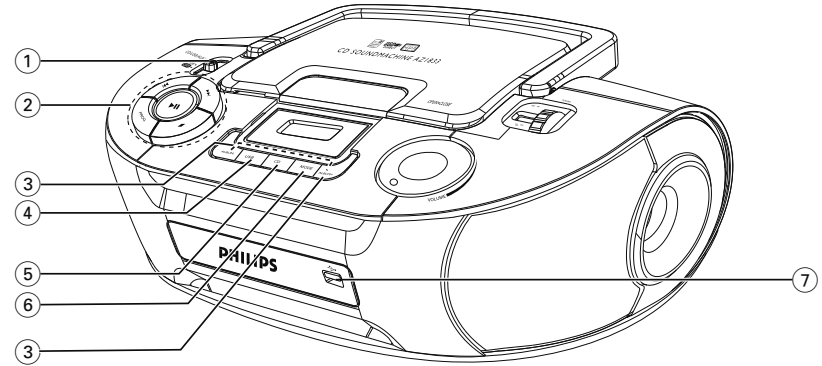

### 1. Source selector

Slide to select function: CD/MP3, USB, AUX or radio

### 2. PROG

Use to program disc tracks and review a disc program.

### 3. ALBUM+/-

For **MP3-CD/USB** play:  
Press to select albums

### 4. USB

Press to enter USB mode

### 5. CD

Press to enter disc mode

### 6. MODE

Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)

### 7. USB Direct

Connects an external USB mass storage device

