 




AZ1836

1 Choosing Power Supply

- a Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
- OR-
- b Open the **battery door** and insert 6 x C batteries (not included).

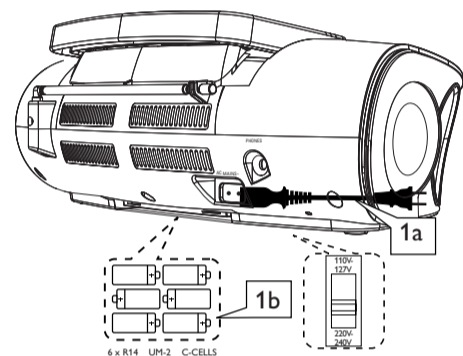

R-14 UM-2 or C-cells adjust to match the local voltage 110/220V before plugging in the set. (not included)


2 Listening to the Radio

- a Push the **source selector** to **FM** or **MW**.
- b Turn **TUNING** to tune to a station.

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3-CD, and WMA.

- a Adjust the **source selector** to **CD/USB**.
- b Press **CD/USB** to enter CD mode if "USB" is displayed.
- c Open the disc door.
- d Insert a disc with the printed side facing up and close the door.
- e Press **▶||** to start playback.
- f To stop disc playback, press **■**.

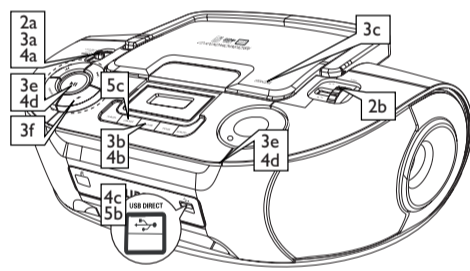 

5 CD ripping

- a Follow steps a-d from "3 Playing a disc".
- b Plug a USB mass storage device.
 - To record one**
 - c1 Select the track you want to record.
 - c2 Press once or repeatedly **USB REC** (or **REC** on the remote) until **ONE** appears, flashing.
 - To record all**
 - c1 Press repeatedly **USB REC** (or **REC** on the remote) until **ALL** appears, flashing.
 - d Disc playback will start automatically.

4 Playing a USB device

- a Push the **source selector** to **CD/USB**.
- b Press **CD/USB** to enter USB mode if "USB" is NOT displayed.
- c Plug a compatible USB mass storage device to AZ1836's USB port marked **→**.
- d Press **▶||** on your AZ1836 to start play.



Source selector

Slide to select function: CD/MP3 (or USB mode), FM or AM

◀▶
Briefly press to skip to the beginning of the current/previous/ later disc track; During disc playback, press and hold to find a particular passage backward/forward

▶||
Press to start or pause disc/USB playback

PROG
Use to program disc tracks and review a disc program

■
Press to stop disc/USB playback, or erase a disc program

USB REC
Copy one file or all files of a disc to an external portable USB storage device/MP3 player

CD/USB
Press to enter disc or USB mode

Telescopic antenna
Improves FM reception

Display
Shows disc/USB functions

OPEN-CLOSE
Push to open the disc door

 
TUNING
Turn to tune to a station

VOLUME
Turn to adjust volume level

ALBUM +/-
For **MP3-CD/USB/WMA** play: Press to select albums

MODE
Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)

USB Port
Connects an external USB mass storage device

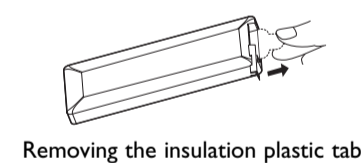

Removing the insulation plastic tab

