


AZ1845

1 Choosing Power Supply

- a Connect the AC power cord to the **AC MAINS~** inlet and the wall socket.
- OR-
- b Open the **battery door** and insert 6 x D batteries (not included).

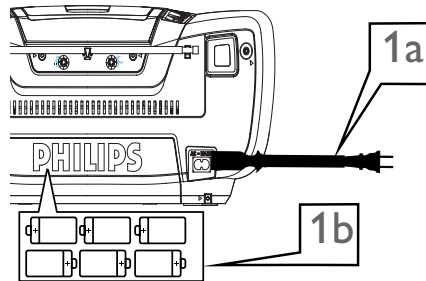

R-20, UM-1 or D-cells
(not included)

2 Listening to Radio

- a Adjust the Source selector to **FM** or **MW**.
- b Turn **TUNING** to tune to a station.

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3-CD and WMA.

- a Adjust the Source selector to **CD/USB**.
- b Press **CD/USB** once or more to enter the CD mode.
- c Open the CD door, and insert a disc with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop disc playback, press **■**.

4 Playing a USB device

- a Adjust the source selector to **CD/USB**.
- b Press **CD/USB** once or more to enter the USB mode
- c Plug a compatible USB device to the set's USB port marked .
- d Press **▶||** to start playback.

