 


MP3-CD Soundmachine

AZ 2558

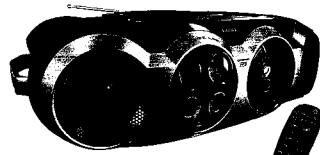

Need help? Call us!
Philips representatives are ready to help you with any questions about your product. We can guide you through Connections, Trouble Shooting, or any of the features. We want you to start enjoying your new product right now!



Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips purchase is registered, you'll be able to receive all the privileges of owning a Philips product.
So complete and return the Warranty Registration Card enclosed with your purchase at once, and take advantage of these important benefits.

Warranty Registration Card form with fields for Verification, Confirmation, and Model Registration.

Know these safety symbols
CAUTION: This "bolt of lightning" indicates uninsulated metal parts within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.
The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

 
IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
8. Do not install near any heat sources.
9. Do not defeat the safety purpose of the polarized or grounding type plug.
10. Protect the power cord from being walked on or pinched.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or on which the apparatus was originally used.

PHILIPS

PHILIPS CONSUMER ELECTRONICS NORTH AMERICA
Knoxville, Tennessee 37914-1810, U.S.A.

Meet Philips at the Internet
http://www.philips.com
AZ 2558

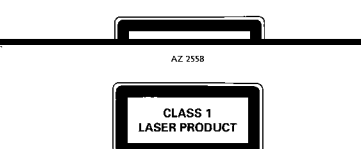

CLASS 1 LASER PRODUCT
3140 115 3102.1
Printed in China

Removez votre carte d'enregistrement de garantie pour vous assurer de recevoir tous les avantages auxquels vous êtes droit.

- Dès que l'étiquette de votre appareil Philips est enlevée, vous avez droit à tous les avantages dont bénéficient les possesseurs de produits Philips.
Rassemblez et remettez votre carte d'enregistrement de garantie ainsi que votre appareil dans le délai et sous les conditions de ces avantages importants.

Warranty Registration Card form in French.

Connaissiez ces symboles de sécurité
ATTENTION: Ce pictogramme indique que l'appareil peut émettre des ondes électromagnétiques susceptibles d'interférer avec certains appareils électroniques.

DANGER: NE PAS EXPOSER CET ÉQUIPEMENT À LA PLUIE NI À UNE HUMIDITÉ EXCESSIVE POUR ÉVITER LES RISQUES D'ÉLECTROCUTION ET DE CHOC ÉLECTRIQUE.
ATTENTION: Pour éviter les chocs électriques, introduisez la lame la plus large de la fiche dans la borne correspondante de la prise et poussez jusqu'au fond.

CONSIGNES DE SÉCURITÉ IMPORTANTES

- 1. Lisez ces instructions.
2. Conservez ces instructions.
3. Respectez les avertissements.
4. Suivez toutes les instructions.
5. N'utilisez pas cet appareil à proximité d'une source d'eau.
6. Nettoyez l'appareil uniquement avec un chiffon sec.
7. N'obstruez aucun orifice de ventilation.
8. Ne touchez pas l'appareil près d'une source de chaleur.
9. Ne débranchez pas la sécurité électronique.
10. Ne débranchez pas la sécurité électronique.
11. Précaution d'emploi des piles.
12. Utilisez uniquement un microphone qui nécessite un support.

Canada

English: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital devices as set out in the Radio Interference Regulations in the Canadian Department of Communications.
Français: Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Bruitage Radioélectrique édicté par le Ministère des Communications du Canada.

The set complies with the FCC Rules, Part 15 and with 21 CFR 104.10.
Operation is subject to the following two conditions:
1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT: No modifications not authorized by the manufacturer may void users authority to operate this device.

Envie hoy su Tarjeta de Registro de la Garantía para recibir todas las ventajas correspondientes.

- Una vez que se registre el compra de su aparato Philips, Ud tiene derecho a todos los ventajas correspondientes al dueño de un producto Philips.
Suscriba hoy y devuelva su tarjeta de Registro de la Garantía empacada con su aparato y saque provecho de estos ventajas importantes.

Warranty Registration Card form in Spanish.

Conozca estos símbolos de seguridad
PRECAUCIÓN: Este símbolo indica que el equipo puede emitir ondas electromagnéticas que interfieren con algunos dispositivos electrónicos.

ADVERTENCIA: PARA EVITAR EL RIESGO DE SAGUIONA ELÉCTRICA O INCENDIO, NO EXPOGA ESTE EQUIPO A LLUVIA NI A HUMEDAD.
PRECAUCIÓN: Para evitar descargas eléctricas, introduzca la pata ancha del enchufe al fondo de la ranura.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

- 1. Lea estas instrucciones.
2. Conserve estas instrucciones.
3. Lea todas las avisos.
4. Siga todas las instrucciones.
5. No utilice este aparato cerca del agua.
6. Para limpiar el aparato utilice sólo un trapo seco.
7. No tape las aperturas de ventilación.
8. No instale el equipo cerca de fuentes de calor.
9. No anule la seguridad de la clavija de corriente.
10. No desenchufe el aparato durante tormentas eléctricas o cuando no vaya a ser utilizado durante largo tiempo.
11. Cierre el mantenimiento y las reparaciones a personal técnico especializado.
12. Desenchufe el aparato durante tormentas eléctricas o cuando no vaya a ser utilizado durante largo tiempo.

Símbolo del equipo Clase II
Este símbolo indica que la unidad tiene un sistema doble de aislamiento.

DIGITAL TUNER

ice the bass control
You cannot combine
with **w00x**

is **GAMESOUND** once

BLAST, **PUNCH**,

available when you

control to interrupt
y.
out sound and the

ction you can:

;

on, then press
elect **TUNER** (or press
control).
briefly followed by
d preset station

ice or more to select
the remote control)
in tune to your
omatic search tuning;
or **▶▶** on the remote
when the frequency in

unes to a station of
lay shows **SEARCH**

until you find the

ress **◀◀** or **▶▶** (**◀◀** or
riefly and repeatedly

until you have found optimal reception.

To improve radio reception:

- For **FM**, extend, incline and turn the telescopic antenna. Reduce its length if the signal is too strong.
- For **AM**, the set uses a built-in antenna. Direct this antenna by turning the whole set.

Programming tuner stations:

You can store up to a total of 30 radio stations in the memory, manually or automatically (Autostore).

Autostore

Automatic programming will start from preset 1. The set will only program stations which are not in the memory already.

1. Press **ALBUM / PRESET-** or **+** once or more to select the preset number.
2. Press **PROG** for 4 seconds or more to activate auto store programming.
→ Display: **AUTOSTORE** is shown and available stations are programmed in order of waveband **FM**, followed by **AM**, preset 1 station will then be played after all stations are stored automatically.


Manual programming

1. Tune to your desired station (see **Tuning to stations**).
2. Press **PROG** to activate programming.
→ Display: **program** flashes.
3. Press **ALBUM / PRESET-** or **+** once or more to allocate a number from 1 to 30 to this station.
4. Press **PROG** again to confirm.
→ Display shows the preset number, waveband and the frequency of the preset station.
5. Repeat the above four steps to store other stations.

Note: You can erase a preset station by storing another frequency in its place.

To listen to a preset station

Press **ALBUM / PRESET-** or **+** once or more until the desired preset station is displayed.

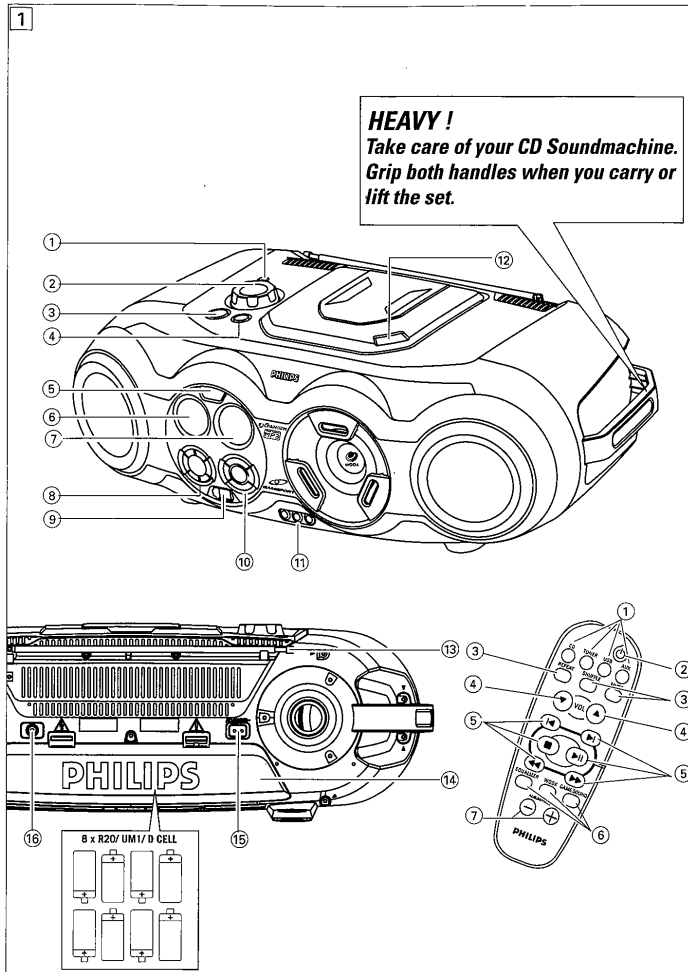

AYER

select and store your
ice. If you like, store
30 tracks can be

the set to select your
remote control **◀** or **▶**

- or **+** once or more to
ARCH **◀◀** or **▶▶** (on the

the selected track
rs briefly.

PAUSE if no track
ng.

and store all desired

try to program more

sc program, press **▶▶**.

you can press **PROG**

GAMESOUND / USB PC LINK

GAMESOUND (See 8)

PLAYING WITH GAMESOUND:

1. Press **SOURCE** once or more on the set to select the **GAME+AUX** function (**AUX** on the remote control)
→ Display scrolls: **GAME PORT**
2. Connect your console to the cinches on the front of the set **AUDIO IN (LEFT / RIGHT)** and **VIDEO IN**.
3. Press **GAMESOUND** once or more to select your game sound option.
→ Display briefly shows **BLAST**, **PUNCH**, **SPEED** or **NORMAL**.

Connecting other equipment to your system


Use the supplied video cable to connect the **VIDEO OUT** terminal on the back of the set to **VIDEO IN** on a TV or VCR for viewing or recording.

USB PC LINK

Quick Setup Guide

PC system requirements

- USB port with Windows 98 SE / ME / 2000 / XP
- Intel Pentium MMX200 or higher

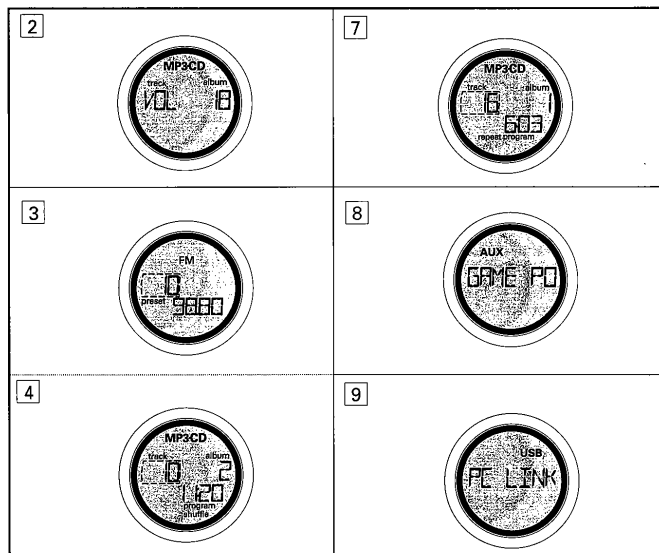

to tracks programmed.


2. Press **SOURCE USB** on the remote control) once or more to select **USB PC LINK**.

3. Turn on your PC then insert the supplied USB PC LINK installer disc in the PC's CD-ROM drive. This application software can also be downloaded from <http://www.audio.philips.com>.

y, and program

source

IMPORTANT!
Please use this customized MusicMatch software for your USB PC Link application. Remember to un-install all other MusicMatch jukebox software first from your PC system (if available).

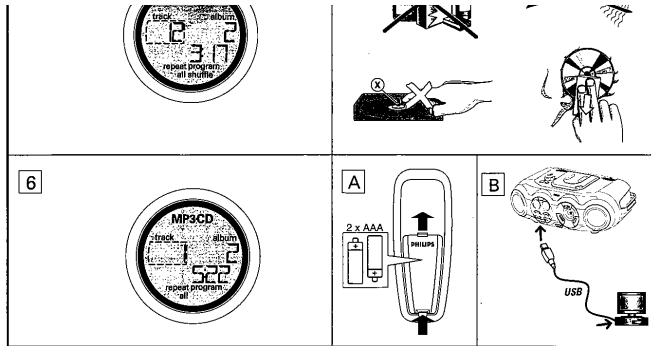

TING

the points listed below before taking the set for repair. If you are unable following these hints, consult your dealer or service center.

Do not open the set as there is a risk of electric shock! Under no circumstances you try to repair the set yourself, as this will invalidate the warranty.

ected properly inserted the set

reference inserted, remove batteries it. Press and hold buttons, then re-plug / try activating the set again. , check that your PC's CD-ROM drive, refer to minimum. PC's CD-ROM drive, refer to minimum. **Digital CD audio output.**

once or more to skip to of the data file

AUX mode on or your game console

close to TV, VCR or

distance

Insertion properly

erted tly e set too large

M telescopic aerial

NO DISC indication

- CD-R(W) is blank / not finalized
- Use an unfinalized CD-R(W)

INSERT DISC/CHECK DISC/DISC ERROR indication

- No CD inserted
- Inserted a suitable disc
- CD badly scratched or dirty
- Replace / clean CD, see Maintenance
- Laser lens steamed up
- Wait until lens has cleared

The CD skips tracks

- CD damaged or dirty
- Replace or clean CD
- shuffle or program is active
- Switch off shuffle / program

NO CONNECTION is displayed in USB PC LINK mode for more than 10 seconds

- Check the connection between your PC and the set. If necessary, please refer to the chapter **Connecting to USB PC Link** for the initial setup required.
- Make sure the connected PC is turned on and the MusicMatch software is working.

Sound skips during MP3 playback

- MP3 file made at compression level exceeding 320kbps
- Use a lower compression level to record CD tracks into MP3 format
- Disc damaged or dirty
- Replace or clean disc

Cannot find desired MP3 title

- Wrong file extension used and/ or file name with unsuitable text characters used
- Make sure the file names are typed in English text characters and that the MP3 files end with .mp3

English

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Environmental information

We have done our best to reduce the packaging and make it easy to separate into 3 materials: cardboard, expandable polystyrene, polyethylene.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, exhausted batteries and old equipment.

Philips A22558



Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

Philips Consumer Electronics North America
One Philips Drive
Knoxville TN 37914
Phone: 1-800-531-0039

la base del aparato corresponde a la conexión de MP3-CD / CD / USB PC LINK.

■ - para la reproducción de MP3-CD / CD / USB PC LINK.

▶ - toma un programa de MP3-CD / CD

▶ - inicia o hace una pausa en la reproducción de MP3-CD / CD / USB PC LINK.

▶▶ - para buscar hacia atrás/adelante en una pista del MP3-CD / CD.

TUNER - sintoniza emisoras de radio

4 Para desconectar el aparato de pared.

3 Conecte el cable de alimentación a la toma local.

2 Si su aparato está equipado con sistema, ajuste el selector de servicio al centro de la escala eléctrica local. En caso contrario, consulte el manual de instrucciones.

WOOX - activa/desactiva la intensidad especial en las respuestas de bajos.

EQUALIZER - selecciona las frecuencias de bajos, medios, agudos.

MP3-CD / CD / PROG - para programar pistas y repasar el programa.

TUNER - para programar emisoras de radio.

ACCESORIOS INCLUIDO

- control remoto
- cable de USB
- cable de vídeo
- instalador CD-ROM USB PC LINK
- cable de alimentación

PANELES SUPERIOR Y DELANTERO (Véase [1])

Español

indmachine



Need help? Call us!

 
Philips representatives are ready to help you with any questions about your new product. We can guide you through Connections, First-time Setup, or any of the Features. We want you to start enjoying your new product right away!

CALL US BEFORE YOU CONSIDER RETURNING THE PRODUCT!

1-800-531-0039

or

visit us on the web at www.philips.com

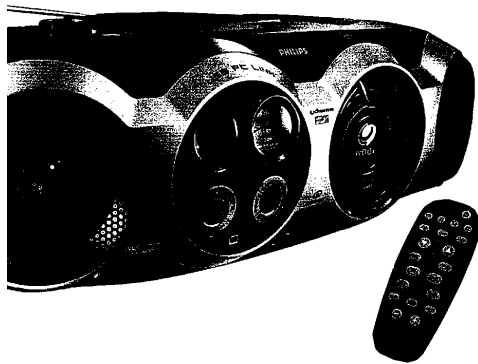


PHILIPS

CONSUMER ELECTRONICS NORTH AMERICA

Knoxville, Tennessee 37914-1810, U.S.A.

Meet Philips at the Internet
 
<http://www.philips.com>



AZ 2558

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips purchase is registered, you're eligible to receive all the privileges of owning a Philips product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once, and take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these *safety* symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use
Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

PHAC5097

Renvoyez votre carte d'enregistrement de garantie pour vous assurer de recevoir tous les avantages auxquels vous avez droit.

- Dès que l'achat de votre appareil Philips est enregistré, vous avez droit à tous les avantages dont bénéficient les possesseurs des produits Philips.
- Remplissez et renvoyez votre carte d'enregistrement de garantie jointe à votre appareil sans tarder et vous bénéficiez de ces avantages importants.

Vérification de garantie

Enregistrez votre produit dans les 10 jours pour confirmer votre droit à une protection maximum selon les termes et les conditions de votre garantie Philips.

Confirmation de possession

Votre carte d'enregistrement de garantie prouve que vous possédez l'appareil en cas de vol ou de perte du produit.

Enregistrement du modèle

Renvoyez votre carte d'enregistrement de garantie dès aujourd'hui pour vous assurer de recevoir toutes les informations, les offres et les bonus auxquels vous avez droit en tant que possesseur de ce modèle.

Connaissez ces symboles de *sécurité*

Cet espace vous est réservé
Inscrivez ci-dessous le numéro de série situé à l'arrière du bloc. Conservez cette informa-

AZ 2558



3140 115 3102.1

Printed in China

apparus does not exceed the Class B limits for radio noise
al apparatus as set out in the Radio Interference Regulations of the
ent of Communications.

reil numérique n'émet pas de bruits radioélectriques dépassant les
ux appareils numériques de Classe B prescrites dans le Règlement sur
lectrique édicté par le Ministère des Communications du Canada.

with the FCC-Rules, Part 15 and with 21 CFR 1040.10.
ect to the following two conditions:
/ not cause harmful interference, and
it accept any interference received, including interference that
esired operation.

ipment has been tested and found to comply with the limits for a
evice, pursuant to part 15 of the FCC Rules. These limits are
vide reasonable protection against harmful interference in a
llation. This equipment generates, uses, and can radiate radio
y and, if not installed and used in accordance with the instruction
use harmful interference to radio communications. However, there
that interference will not occur in a particular installation. If this
; cause harmful interference to radio or television reception, which
red by turning the equipment off and on, the user is encouraged
: the interference by one or more of the following measures :
receiving antenna.
separation between the equipment and receiver.
equipment into an outlet on a circuit different from that to
eiver is connected.
dealer or an experienced radio/TV technician for help.

F :
ot authorized by the manufacturer may void users authority to
vice.

de ce modèle.

Connaissiez ces
symboles de *sécurité*



⚡ Cet « éclair à pointe de
flèche » indique qu'un matéri-
au non isolé, situé à l'intérieur
de l'unité, risque de provoquer un choc
électrique. Pour la sécurité de chacun,
nous vous prions de ne pas retirer le
boîtier de ce produit.

! Le « point d'exclamation »
attire votre attention sur des
sujets risquant de provoquer
des problèmes de fonctionnement et
d'entretien si vous ne lisez pas les infor-
mations s'y reportant.

Cet espace vous est réservé
Inscrivez ci-dessous le numéro de série situé
à l'arrière du bloc. Conservez cette informa-
tion pour vous y reporter à l'avenir.

N° de modèle _____

N° de série _____

DANGER: NE PAS EXPOSER
CET ÉQUIPEMENT A LA PLUIE NI A
UNE HUMIDITÉ EXCESSIVE POUR
ÉVITER LES RISQUES D'INCENDIE
ET DE CHOC ÉLECTRIQUE.

ATTENTION: Pour éviter les
chocs électriques, introduire la lame
plus large de la fiche dans la borne
correspondante de la prise et pousser
jusqu'au fond.

MAC5097

**Envie hoy su Tarjeta de Registro de la Garantía
para recibir todas las ventajas correspondientes.**

- Una vez que se registre la compra de su aparato Philips, Ud. tiene derecho a todas las ventajas correspondientes al dueño de un producto Philips.
- Sirvase llenar y devolver en seguida la Tarjeta de Registro de la Garantía empacada con su aparato y saque provecho de estas ventajas importantes.

**Verificación
de la garantía**

Registre su producto den-
tro de 10 días para confir-
mar su derecho a máxima
protección bajo los térmi-
nos y condiciones de la
garantía de Philips.

**Confirmación
del dueño**

Su Tarjeta de Registro de
la Garantía comprueba
que Ud. es el dueño del
aparato en caso de robo
o pérdida del producto.

**Registro
del modelo**

La devolución inmediata de
su Tarjeta de Registro de la
Garantía le garantiza que
recibirá toda la información
y todas las promociones
especiales que le corre-
sponden por ser el dueño
de su modelo.

Conozca estos

simbolos de *seguridad*



⚡ El símbolo del «rayo» indica
que algún material no aislado
dentro de su unidad podría
resultar en una sacudida eléctrica. Para
la seguridad de todos, favor de no
remover la cubierta del producto.

! El «signo de exclamación» le
llama la atención a carac-
terísticas sobre las que Ud.
debe leer la información adjunta
detenidamente para evitar problemas
de funcionamiento y mantenimiento.

Para uso del cliente:

Escriba abajo el número de serie que se
encuentra en el panel posterior. Guarde
esta información para el futuro.

No. de modelo _____

No. de serie _____

ADVERTENCIA: PARA EVI-
TAR EL RIESGO DE SACUDIDA
ELECTRICA O INCENDIO, NO
EXPONGA ESTE EQUIPO A LLUVIA
NI A HUMEDAD.

PRECAUCION: Para evitar
sacudida eléctrica, introduzca la patilla
ancha del enchufe al fondo de la ranu-
ra ancha.

MAC5097