 


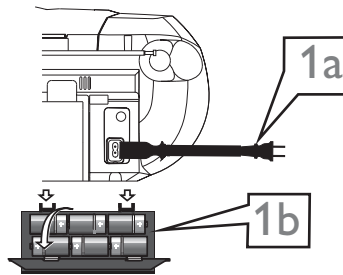

1 Choosing mains Supply

 
- a Connect the AC mains lead to the **AC MAINS** inlet and the wall socket.
- OR-
- b Open the battery door and insert 6 x D batteries.



R-20, UM-1 or D-cells (not included)

2 Listening to the Radio

- a Press **STANDBY ON** \odot to on, then press **Source selector** to select **TUNER** (or press **TUNER** on the remote control).
- b Press and hold **PROGRAM** until **AUTOSTORE** appears.
 - Available stations are programmed.
- c Press **ALBUM/ PRESET** -, + until the desired preset station is displayed

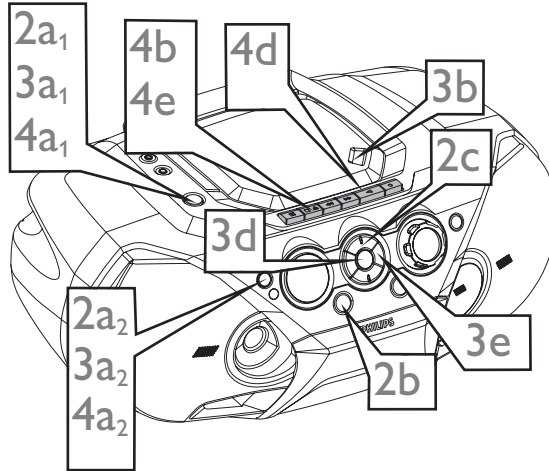

3 Playing CD/MP3/WMA

This player plays Audio Discs including CD-Rs/CD-RWs, and MP3/WMA CDs.

- a Press \odot once or more to on, then select **CD** source.
- b Press **OPEN•CLOSE** to open the CD door.
- c Insert a CD/MP3 with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop CD playback, press **■**.

4 Playing a tape

- a Press \odot once or more to on, then select **TAPE** source
- b Press **■▲** to open the cassette holder.
- c Insert a cassette and close the door.
- d Press **◀** to start playback.
- e To stop the tape, press **■▲**.

STANDBY ON \odot
power on/ off switch.

AUX
3.5 mm jack for external audio appliance

H
3.5 mm stereo head-phone socket

Telescopic antenna
Improves FM reception.

ALBUM/ PRESET -, +
Press to select an album. (MP3 only);
Press to select a preset radio station

MODE
Press to select different play modes: e.g. REPEAT or SHUFFLE (random order)

Source selector
Press to select CD (MP3-CD)/ TUNER/ AUX/ TAPE function

PROGRAM
Use to program CD tracks or preset radio stations.

CASSETTE RECORDER keys
Press to operate a tape.

OPEN•CLOSE
Press to open/close the CD door.

VOLUME
Turn to adjust volume level.

DBB
Press to turn the bass enhancement on (DBB1 or DBB2) /off.

 
\blacksquare
Press to stop CD playback or erase a CD program.

FM•MW
Selects wavebands;
During playback, press to display MP3-CD information (MP3 only)

SEARCH \lll \ggg
Skips & searches CD tracks backwards/ forwards;
Tunes to radio stations (down/up).

REMOTE CONTROL

Remove the insulation plastic tab.

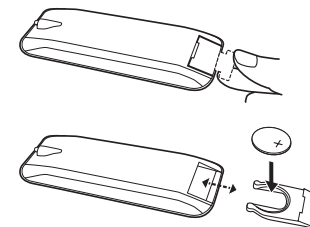

Select the source you wish to control by pressing one of the source select keys on the remote control (for example CD, TUNER).

Then select the desired function (for example **▶||**, \lll , \ggg).

