




**AZ3830**



**PHILIPS**

### 1 Choosing Power Supply


- a Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
- OR-
- b Open the **battery door** and insert 6 x C batteries (not included).

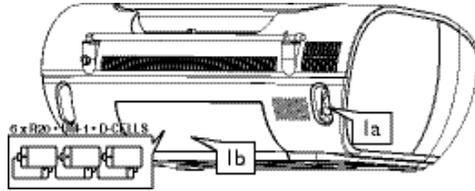

**R-20, UM-1 or D-cells**  
(not included)

### 2 Listening to the Radio

- a Press **SOURCE** repeatedly to select the tuner source.
- b Press **PROG** for more than two seconds to program all available stations in order of waveband.
- c Press **PRESET/ALBUM +/-** until the desired preset station is displayed.

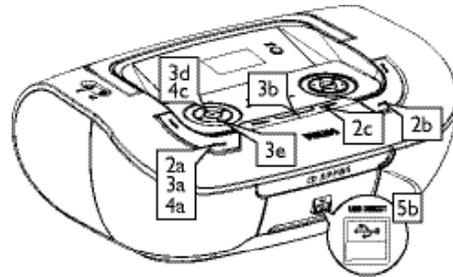

### 3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3-CD and WMA.

- a Press **SOURCE** repeatedly to select the **CD**.
- b Open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop disc playback, press **■**.

### 4 Playing a USB device

- a Press **SOURCE** repeatedly to select the **USB**.
- b Plug a compatible USB mass storage device to AZ3830's USB port marked .
- c Press **▶||** on your AZ3830 to start play.

### 5 CD ripping

- a Follow **steps a-d** from "3 Playing a disc".
- b Plug a USB mass storage device.
  - To record one**
  - c1 Select the track you want to record.
  - c2 Press once or repeatedly **USB REC** until "RIPPING ONE" appears, flashing.
  - To record all**
  - c1 Press repeatedly **USB REC** until "RIPPING ALL" appears, flashing.
  - d Disc playback will start automatically.



### Display

Shows the status of the set

- Press to stop disc/USB playback, or erase a disc program

### DBB

Turns the bass enhancement on/off

### ▶||

Press to start or pause disc/USB playback



3.5mm stereo headphone socket

### AUX jack

Connects an external source (3.5 mm socket)

### Telescopic antenna

Improves FM reception



- Briefly press to skip to the beginning of the current/previous/ later disc track;
- During disc playback, press and hold to find a particular passage backward/forward.
- Tunes to a radio station

### POWER

powers on/off the system

### USB REC

Copy one file or all files of a disc to an external portable USB storage device/MP3 player

### VOLUME

Turn to adjust volume level

### MODE

Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)

### PROG

- Use to program disc tracks and review a disc program.
- auto searches and stores radio stations

▲ Open/close the disc tray

### PRESET/ALBUM +/-

- For **MP3-CD/USB/WMA**: Press to select albums
- Select a preset radio station

### SOURCE

Selects CD/MP3-CD /WMA, USB mode, Tuner or AUX

### USB Port

Connects an external USB mass storage device

Removing the insulation plastic tab

