

1 Choosing Power Supply

- a Connect the AC power cord to the **AC~Mains** inlet and the wall socket.
- OR-
- b Open the **battery door** and insert 6 x C batteries (not included).

2 Listening to the Radio



- a Push the **source selector** to **TUNER**.
- b Adjust **BAND** to **MW** or **FM**.
- c Turn **TUNING** to tune to a station.

3 Playing a disc

- This player plays Video CD, Audio Discs including CD-R/CD-RW, and MP3-CD.
- For VCD playback:**
 - Connect the **VIDEO OUT** jack to the video input jack on the TV using the supplied video cable (yellow).
 - Turn on the TV and set it to the correct Video In channel.
- a Adjust the **source selector** to **CD**.
- b Open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop disc playback, press **■**.

4 Playing a tape

- a Adjust the **source selector** to **TAPE/OFF**.
- b Press **▶** to open the cassette holder.
- c Insert a cassette and close the door.
- d Press **▶** to start playback.
- e To stop the tape, press **▶**.

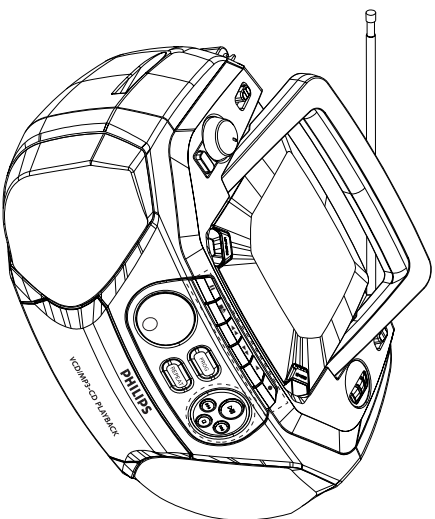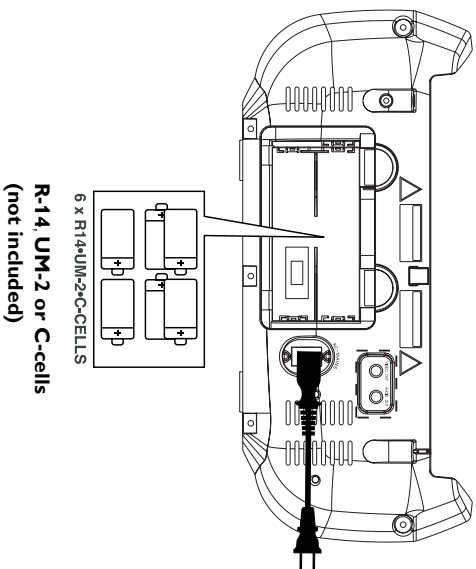

Source selector
Slide to select function: CD, Tuner (FM/MW), or tape

VOLUME
Turn to adjust volume level

DBB
Turns the bass enhancement on/off

CASSETTE RECORDER keys
Press to operate a tape

Display
Shows disc functions

REPEAT
Press to select REPEAT mode

BAND
Switch to FM/MW band

LIFT TO OPEN
Lift to open the disc door

TUNING
Turn to tune to a station

▶||
Press to start or pause disc playback

■
Press to stop disc playback, or erase a disc program

◀◀, ▶▶
Briefly press to skip to the beginning of the current / previous / later disc track; During disc playback, press and hold to find a particular passage backward/forward.

VIDEO/AUDIO OUT
Connects to the VIDEO/AUDIO IN on the TV or VCR

