

PHILIPS



AZ 6815

GB	CD-player	4
F	Lecteur de CD	10
D	CD-Spieler	16
NL	CD-speler	22
E	Lector de CD	28
I	Lettore CD	34
S	CD-spelare	40
SF	CD-sortin	46



PHILIPS

(D) Deutschland

Hiermit wird bescheinigt, daß dieses Gerät in Übereinstimmung mit den Bestimmungen der Amtsblattverfügung 1046/1984 funktionsstört ist. Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhaltung der Bestimmungen eingeräumt.

(DK) Danmark

Typeskiltet findes på undersiden af apparaten.

Dette produkt overholder kravene til radio-interferens af Europæisk Fællesskab.

Advarsel: Usynlig laserudstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

Garanti og servicesider 54-60

(N) Norge

Typeskiltet finnes på apparatens underside.

Garanti og servicesider 54-60

(MEX) México

Es necesario que lea cuidadosamente su instructivo de manejo.

KOM

(GB) English page 4

Guarantee and service pages 54-60

(F) Français page 10

Garantie et service pages 54-60

(D) Deutsch Seite 16

Garantie und Service Seiten 54-60

(NL) Nederlands pagina 22

Garantie en service pagina's 54-60

(E) Español página 28

Garantía y servicio páginas 54-60

(I) Italiano pagina 34

Garanzia e servizio pagine 54-60

(S) Svenska sida 40


Garanti och service sidorna 54-60

(SF) Suomi sivu 46


Takuu ja huolto sivut 54-60

**CLASS 1
LASER PRODUCT**

 4 x alkaline
R6, UM3 or
AA-cells

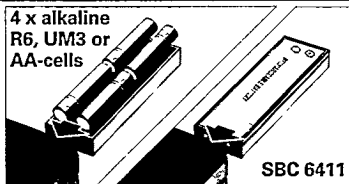


SBC 6411

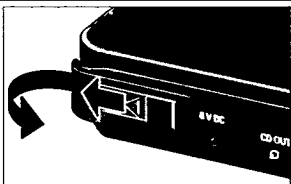 


CD OUT 6 V DC

 
BATTERY

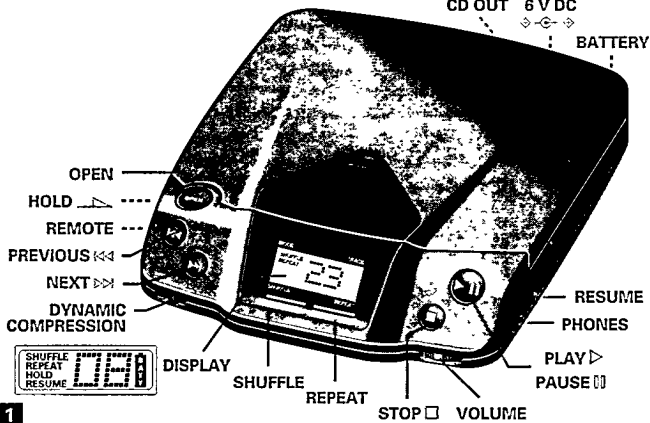

1

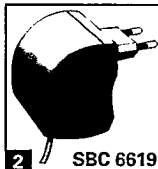 


SBC 6619

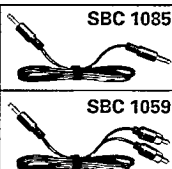 


SBC 1085

 
SBC 1059

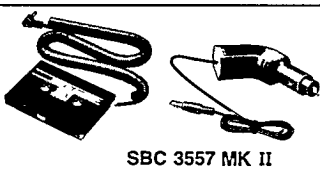


SBC 3557 MK II

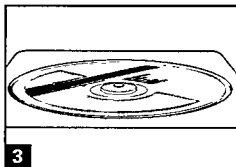 

3

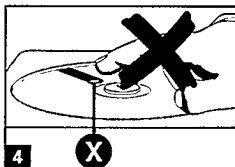 

4

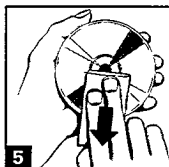 

5

CONTROLS - fig. 1

- OPEN**.....to open the CD compartment
HOLD.....makes the CD player buttons inoperative (not the remote-control buttons) and locks the CD cover
- REMOTE**socket for remote control, see 'Accessories'
- ◀◀ / ▶▶**
 - press briefly to jump to a previous ◀◀ or next ▶▶ track
 - during PLAY: keep pressed to play fast backwards ◀◀ or forwards ▶▶
- DYNAMIC COMPRESSION**to compress the dynamics of the sound. Useful for listening in noisy surroundings, e.g. in a car, since the quiet passages are reproduced more loudly and the loud passages less loudly
- DISPLAY**.....display shows:
TRACK the total number of tracks
and during PLAY the number of the track being played
track number flashes: PAUSE activated
SHUFFLE activated
REPEAT activated (repeat the CD)
SHUFFLE REPEAT continuously repeat the CD in the SHUFFLE mode
HOLD activated (the CD player buttons are inoperative and the CD cover is locked)
RESUME activated
BATT flashes if the batteries are weak and lights up continuously if the battery voltage is too low
- SHUFFLE**.....to play all tracks in a random order; press again to cancel
REPEATcontinuously repeat the CD; press again to cancel
STOP ◻.....stop button
VOLUME.....volume control
PLAY ▷ / PAUSE ◻.....play and pause button
PHONES.....socket for headphones or mini loudspeakers
RESUMEif RESUME is switched ON and PLAY ▷ is pressed, the CD player will start with the last title played (provided you did not press OPEN and the power supply has not been interrupted). In the SHUFFLE mode, RESUME is ignored.
- CD OUT**.....for CD reproduction through your stereo system
6 V DC ⚡.....socket for external power supply, 6 V DC ⚡
BATTERYbattery holder

In the case of power supply via the 6 V DC socket, the CD compartment, the display and the buttons PLAY ▷, PAUSE ◻ STOP ◻ and ◀◀/▶▶ are illuminated.

The type plate is located on the base of the set.

BATTERIES

- Open the battery door, take out the battery holder and insert as indicated four (preferably Alkaline) batteries, type R6, UM3 or AA-cells, see fig. 1. You may also use rechargeable Nickel-Cadmium batteries.

- Remove the batteries if exhausted or if they are not to be used again for a long period.

If BATT flashes in the display, the batteries (or rechargeable battery SBC 6411) are weak. If BATT lights up continuously, the battery voltage is too low and the CD player will soon shut down.

The battery supply is switched off when the 6 V DC socket is in use. When changing over to battery supply, pull out the plug from the 6 V DC socket.

Rechargeable battery SBC 6411, available from your dealer

Instead of normal batteries, you can use the rechargeable battery SBC 6411 (fig. 1). It can be charged in the CD player which is connected to the mains adapter. It can also be charged outside the CD player by connecting it directly to the mains adapter.

When the charging indicator on the rear of the battery goes out, the battery is 80% charged (after approx. 3 hours). After another 3 hours the battery will be fully charged.

If the CD-player is used during charging, the charging time will be longer.

- If the battery is not to be used for a long period, store it fully charged outside the CD player. Each battery, even when not in use, discharges slowly, so recharge the battery every 6 months to prevent it from being discharged completely.

MAINS ADAPTER SBC 6619 (fig. 2)

At home, you can use the mains adapter SBC 6619 (fig. 2), delivering 6 V/600 mA Direct Current, \ominus - \oplus , plus-pole to the centre pin.

- Connect the mains adapter to the 6 V DC socket and the wall socket. Remove the mains adapter from the wall socket when the CD player is not in use.

CONNECTIONS**Headphone socket PHONES**

- For headphones (or mini loudspeakers) with 3.5 mm plug, see 'Accessories'.

REMOTE socket

- For a remote control unit, see 'Accessories'.

CD OUT socket

- For CD reproduction at home through your stereo system (amplifier, receiver, recorder, etc.). Use the signal lead SBC 1059 (fig. 2) to connect the socket CD OUT to the input sockets LINE IN, AUX or CD IN of the other set.

- Adjust the sound with the controls of the stereo system.

GB

F

D

NL

E

I

S

SF

IN-CAR USE

GB

- Using the Velcro tapes supplied, the CD player can easily be attached to and removed from a fixed place in your car. Find a good and safe place for the CD player, on a horizontal, vibration-free and stable surface where it is not dangerous or in the way of the driver or passengers. Avoid excessive heat from the car heating or from direct sunshine, e.g. when parking in the sun and avoid moisture, dust and dirt.
- To apply the Velcro tapes, do not separate them yet, but first remove the paper from one side and stick the tapes in the two rectangular recesses on the base of the CD player. Then remove the other paper and stick the CD player onto a horizontal and clean surface in your car.

Supply from the cigarette lighter socket

Use the voltage converter from the accessory kit SBC 3557MKII (fig. 2) for power supply from the cigarette lighter socket (*only for a 12 V car battery, negative grounding*). The converter delivers 6 V/500 mA Direct Current, \diamond - \ominus - \diamond plus-pole to the centre pin

- First connect the DC-plug to the 6 V DC socket.
- Then insert the voltage converter into the cigarette-lighter socket. If necessary, clean the cigarette-lighter socket to obtain a good electrical contact.
- Always remove the converter from the cigarette-lighter socket when the CD player is not in use and also when listening to the car radio.


Car radio connection

- If your car radio is provided with a LINE IN socket, preferably connect this LINE IN socket with the CD OUT socket of the CD player using the signal lead SBC 1085 (fig. 2, not on all versions).
- For a car radio/cassette player without LINE IN socket, you can use the cassette adapter from the accessory kit SBC 3557 MKII (fig. 2) as follows:
 - Turn down the volume of your car radio cassette-player.
 - Connect the cassette-adapter plug to the socket CD OUT of the CD-player.
 - Switch off the autoreverse function of the car cassette player (if present).
 - Slide the cassette carefully into the car radio cassette player.
 - Start the CD player and adjust the sound with the car radio controls.
 - To remove the cassette, press the eject button of the cassette player.

ACCESSORIES available from your dealer (if not already supplied)


- SBC 1085** signal lead with 3.5 mm stereo plugs at both ends.
SBC 3124 - SBC 3137 stereo headphones.
SBC 3206 - SBC 3207 - SBC 3208 mini loudspeaker systems (with amplifier).
SBC 3546 car mounting plate for CD player with extra damping.
SBC 3547 flexible mounting arm to install the mounting plate in the car.
SBC 6211 remote control with PLAY ▷, STOP ◻ and ◀◀ PREVIOUS/NEXT ▶▶.
SBC 6411 rechargeable battery.

HOLD





When carrying the player with you, you can slide the HOLD switch to . The word HOLD appears on the display. The CD-player buttons are then inoperative (not the remote control buttons) and the CD cover is locked. The playing of a CD will not now be interrupted when a button is accidentally touched. For normal operation, slide back the HOLD switch. The word HOLD disappears.



PLAYING A CD


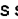
- Ensure that the HOLD function is switched off, otherwise the CD player buttons will not operate.
- Connect headphones to the PHONES socket.
- Press OPEN to open the CD cover.
- Insert the CD, printed side facing up (fig. 3) and close the cover.
- Adjust the sound with the VOLUME control and the DYNAMIC COMPRESSION switch (see 'Dynamic Compression').
- Start playback by pressing PLAY .

As soon as playback starts, the display shows the corresponding track number.

- For brief interruptions, press PAUSE ; the track number flashes. To continue playback, press PAUSE  again.
- To stop playback, press STOP . The display will show the total number of tracks present on the CD.
- The CD player also goes to position STOP:
 - when the end of the CD is reached;
 - when the CD cover is opened;
 - if the batteries run down or if the power supply is interrupted in another way.
- Open the CD cover only if the CD player is in STOP position.
- In the STOP position, the CD player automatically shuts down 10 seconds after the last command. Press PLAY  to reactivate the CD player.

When using an external power supply via the 6 V DC socket, the CD player enters the standby mode 10 seconds after the last command and the illumination extinguishes. To reactivate, press any CD-player or remote-control button.

Remarks

- If the batteries are exhausted, the CD player will not function normally, e.g. it will not start. Replace the batteries or use the mains adapter.
- If after pressing PLAY , E for Error appears and the CD player shuts down after a few seconds, this means that the CD player cannot read the CD. Possible causes are:
 - you inserted the CD upside down;
 - the CD is badly scratched or dirty, see 'Maintenance';
 - the lens  (fig. 4) is steamed up, see 'Maintenance';
 - the batteries are exhausted.

RESUME

GB

If the STOP button has been pressed and RESUME is switched ON (the word RESUME appears on the display), the CD player will start with the last title played as soon as you press PLAY ▷ again (provided you did not press the OPEN button and the power supply has not been interrupted).

In the SHUFFLE mode, RESUME will be ignored.

◀ / ▶ (PREVIOUS/NEXT)**1. Go to the next or previous track**

Press briefly (less than 0.5 second)

a. During PLAY:**▶ - go to the next title**

You can jump to the next title by briefly pressing ▶ once.

If you want to skip more than one track, then briefly press ▶ more than once until the display shows the desired track number.

◀ - go to the previous title

If you want to repeat the current title from the beginning, briefly press ◀ once.

If you want to repeat one of the previous titles, briefly press ◀ more than once until the display shows the required track number.

b. In STOP mode with a CD inserted

You can select the title by pressing ◀ and ▶ briefly, once or more than once, until the display shows the required track number.

2. Search during PLAY

Keep pressed (for longer than 0.5 second)

During PLAY, keep ▶ for search forwards and ◀ for search backwards pressed. The CD is played partially and at high speed, however, the sound is still recognizable.

Release the button as soon as you recognize the required passage: the CD will be played normally from this passage onwards.

If the button is pressed for longer than 6 seconds, the search speed will increase.

SHUFFLE and REPEAT

- If you want to play all tracks in a random order, press SHUFFLE: the word SHUFFLE appears. To cancel the SHUFFLE function, press SHUFFLE again and the word SHUFFLE disappears.
- If you want to repeat the whole CD continuously, press REPEAT: the word REPEAT appears. To cancel the REPEAT function, press REPEAT again and the word REPEAT disappears.
- Press SHUFFLE and REPEAT to repeat the CD continuously in a random order.

DYNAMIC COMPRESSION MAINTENANCE

DYNAMIC COMPRESSION

GB

When listening to a CD in noisy surroundings, you can hardly hear the quiet passages and if you turn up the volume, the loud passages become too loud.

In this case, switch on DYNAMIC COMPRESSION to compress the dynamics of the sound. The quiet passages will then be reproduced more loudly and the loud passages less loudly.

Under normal listening conditions, switch off DYNAMIC COMPRESSION to obtain the full dynamic range of the CD.

MAINTENANCE

- *Avoid excessive heat (maximum 50 °C), e.g. from the car heating or from direct sunshine, e.g. when parking in the sun.*
- *Do not expose the set, batteries or CD's to rain or moisture.*
- *Keep the set and the CD's away from sand.*
- The mechanism of the CD player is fitted with self-lubricating bearings and therefore must not be oiled or greased.
- Fingerprints, dust and dirt on the apparatus can be removed using a soft, clean and slightly damp leather cloth. Cleaning agents may damage the cabinet.
- The lens (⊗) (fig. 4) should never be cleaned.
- The lens may steam up when the set is taken from a cold into a warm environment. Playing a CD is then not possible. Do not clean the lens, but let the set acclimatize for a while.
- Always pick up the CD by the edge and put it back in its box immediately after use.
- To remove dirt from a CD, first breathe on the CD and wipe it off in a straight line from centre to edge (fig. 5) using a soft, lint-free cloth. The use of cleaning agents may damage the CD.

USE YOUR HEAD WHEN USING HEADPHONES

- **Hearing safety:** Do not play your headphones at a high volume. Hearing experts advise against continuous extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.
 - **Traffic safety:** Do not use headphones while driving a vehicle. It may create a traffic hazard and it is illegal in many countries.
- Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you cannot hear what is going on around you.

This product complies with the radio interference requirements of the European Community.

GB

F

D

NL

E

I

S

SF

GUARANTEE AND SERVICE FOR UNITED KINGDOM

Philips sell this product subject to the understanding that if any defect in manufacture or material shall appear in it within 12 months from the date of consumer sale, the dealer from whom the product was purchased will arrange for such defect to be rectified without charge, provided:

1. Reasonable evidence is supplied that the product was purchased within 12 months prior to the date of claim.
2. The defect is not due to use of the product for other than domestic purposes, or on an incorrect voltage, or contrary to the Company's operating instructions, or to accidental damage (whether in transit or otherwise), misuse, neglect or inexperienced repair.

Products sent for service should be adequately packed as no liability can be accepted for damage or loss in transit, and name and address must be enclosed.

Facts about free service: When service is required, apply to the dealer from whom the product was purchased. Should any difficulty be experienced in obtaining Service, e.g. in the event of the dealer having ceased to trade, you are advised to contact Philips Service.

These statements do not affect the statutory rights of a consumer.

If you have any questions which your dealer cannot answer, please write to **Philips Consumer Relations**,

☐ P.O. Box 298, 420 London Road, CROYDON CR9 3DR, or ☎ (01) 689-2166 Consumer Advice.

Please retain this card. Produce if service is required.

GUARANTEE AND SERVICE VALID FOR AUSTRALIA

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which, under the Trade Practices Act or other Commonwealth or State law, the purchaser or owner has in respect of the product. The Philips product carries the following warranties: C-series HiFi-systems: 12 months. Compact Disc Players: 12 months. Home Audio Systems: 6 months. Clock radios, portable radios, cassette recorders, cassette players and radio recorders: 90 days.

Any defect in materials or workmanship occurring within the specified period from the date of delivery, will be rectified free of charge by the retailer from whom this product was purchased.

Note: Please retain your purchase docket to assist prompt service.

Conditions of this warranty

1. All claims for warranty service must be made to the retailer from whom this product was purchased. All transport charges incurred in connection with warranty service or replacement will be paid by the purchaser.

2. These warranties do not cover batteries and extend only to defects in materials or workmanship occurring under normal use of the product where operated in accordance with our instructions.

Philips Consumer Products Division, Technology Park, Figtree Drive, Australia Centre, HOMEBUSH 2140, New South Wales

GUARANTEE AND SERVICE FOR NEW ZEALAND

Thank-you for purchasing this quality Philips product. The document you are now reading is your guarantee card.

Guarantee.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions.

1. The product must have been purchased in New Zealand, and this guarantee card completed at time of purchase (this is your proof of date of purchase).

2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.

3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.

4. Reasonable evidence (in the form of a sales docket or completed guarantee card) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.

5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim.

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller, Philips New Zealand Ltd, ☐ P.O. Box 1041, AUCKLAND - ☎ (09) 605-914

GARANTEE AND SERVICE VALID FOR IRELAND

This apparatus is made of high quality material and great care has been taken in its manufacture.

Philips, therefore, give you a guarantee on parts against failures arising from faulty workmanship or material for 12 months after date of purchase. This guarantee is valid on the condition that this certificate is completed and signed immediately on delivery of the apparatus. In case of failure ask your dealer for further information.

If you have any questions which your dealer cannot answer, you may apply to

Philips Electrical (Ireland) Ltd., Service Department, Newstead, Clonskeagh, DUBLIN 14, ☎ 69 33 55.

GARANTIE FÜR DIE BUNDESREPUBLIK DEUTSCHLAND

Philips-Geräte sind Markenartikel, die mit größter Präzision nach modernsten Fertigungsmethoden und mit einem Höchstmaß an Sorgfalt hergestellt werden. Das Gerät wird Ihnen gute Dienste leisten, vorausgesetzt daß Sie es sachgemäß bedienen und unterhalten

Trotz aller Sorgfalt ist das Auftreten von Fehlern nicht auszuschließen. Ihr Partner für die Behebung derartiger Fehler ist Ihr Fachhändler, bei dem das Gerät erworben wurde. Falls ein Reklamationsfall eintritt, wenden Sie sich bitte unter Vorlage des Einkaufsbeleges und des Gerätepasses an Ihren Fachhändler.

GARANTIE IN ÖSTERREICH

In Österreich ist die Gewährleistung für Verträge zwischen Händler und Käufer gesetzlich geregelt. Zur Geltendmachung des Gewährleistungsanspruches dient der Kaufbeleg.

Die Österreichische Philips Industrie GmbH unterstützt die Gewährleistungsverpflichtung Ihres Händlers für Neugeräte, die der Handel über die Österreichische Philips Industrie GmbH bzw. Homy VertriebsgmbH bezogen hat, dadurch, daß für den Käufer innerhalb von 6 Monaten ab Verkaufsdatum Funktionsmängel (Fabrikations- oder Materialfehler) in einer unserer Service-Filialen kostenlos, d.h. ohne Verrechnung von Arbeitszeit und Material, behoben werden

Schäden, die durch äußere Einflüsse, unsachgemäße Behandlung oder unsachgemäßen Fremdeingriff entstanden sind, sowie Gehäusefehler oder Glasbruch, sind von dieser Zusage ausgeschlossen.

Philips Zentrale Kundeninformation:

– 1101 WIEN, Triesterstraße 64, ☎ 0222-60101-DW 1620 oder 1563

– 6020 INNSBRUCK, Klostersgasse 4, ☎ 05222-74694

– 9020 KLAGENFURT, Villacher Straße 161, ☎ 0463-22397-DW 94

Philips Service-Organisation:

– 1232 WIEN, Ketzergasse 120, ☎ 0222-8662-0

INFORMATION SUR LA GARANTIE ET LE SERVICE APRÈS-VENTE EN FRANCE

Cet appareil PHILIPS a été fabriqué avec le souci de vous donner entière satisfaction. Sa garantie contractuelle est de la responsabilité du point de vente.

Cette garantie qui peut varier tant en durée qu'en contenu, ainsi que les modalités de service après-vente, doivent vous être précisées lors de l'achat par le vendeur qui, de plus, vous conseillera en cas de panne ou de défaillance. À cet effet, il vous est demandé de conserver soigneusement votre facture et/ou le présent document dûment rempli et signé et/ou le contrat de garantie qui vous aura été remis conformément au décret N° 87-1045 du 22 décembre 1987

Pour sa part, PHILIPS, soucieux de l'intérêt des consommateurs, apporte sa contribution aux efforts de points de vente, que ce soit en matière de garantie ou de service après-vente:

- matériellement, par la formation, l'assistance technique, la fourniture de pièces détachées,
- financièrement, selon des modalités précises définies entre PHILIPS et les points de vente.

Rappel: Vous bénéficiez en tout état de cause des dispositions des articles 1641 et suivants du code civil relatifs à la garantie légale.

Aucune garantie ne peut être mise en œuvre si la détérioration résulte d'une cause étrangère à l'appareil ou du non respect des prescriptions d'utilisation.

Service consommateurs PHILIPS:

☎ B.P. 49 - 77423 MARNE LA VALLÉE CÉDEX 2

☎ (16-1) 64 80 54 54 - Minitel 36 15 code: PHILIPS

SNC PHILIPS ELECTRONIQUE DOMESTIQUE - RCS NANTERRE B 333 760 833

GARANTIE EN BELGIQUE ET LUXEMBOURG

Pour les conditions de garantie en Belgique et Luxembourg veuillez vous référer à la carte de garantie que le revendeur doit vous remettre au moment de l'achat.

• **Pour la Belgique:** Si après l'achat de l'un ou l'autre appareil Philips vous avez des problèmes concernant par exemple la garantie, le fonctionnement ou l'utilisation de ces appareils et que le distributeur qui vous a vendu ces appareils éprouve des difficultés pour les résoudre, prenez contact, soit par téléphone, soit par écrit avec notre service **'Contact Clientèle', Place de Brouckère 2, 1000 - BRUXELLES - ☎ 02/211 91 11**

GARANTIE EN SERVICE IN BELGIË EN LUXEMBOURG

In België en Luxemburg gelden uitsluitend de garantiebepalingen zoals die in het via uw handelaar apart verstrekte garantiebewijs staan aangegeven.

• **Voor België:** Indien u na de aankoop van een of ander Philips apparaat problemen heeft met bijv. de waarborg, de werking, of het gebruik ervan, en indien de verdeler die u deze apparaten verkocht heeft moeilijkheden ondervindt om deze problemen op te lossen, stelt u zich dan telefonisch of schriftelijk in verbinding met onze dienst **'Klanten Kontakt', de Brouckèreplein 2, 1000 - BRUSSEL - ☎ 02/211 91 11**

GARANTIE EN SERVICE IN NEDERLAND

• Wat wordt gegarandeerd?

Philips Nederland B.V. garandeert dat dit apparaat kosteloos wordt hersteld indien (bij normaal particulier gebruik volgens de gebruiksaanwijzing) binnen 12 maanden na aankoopdatum fabricage- en/of materiaalfouten optreden

• Wie voert de garantie uit?

De zorg voor de uitvoering van de garantie berust bij de handelaar die u het apparaat verkocht heeft. De handelaar kan daarbij eventueel een beroep doen op een der Philips Service vestigingen

• Uw aankoopbon + de identificatiekaart

De identificatiekaart is uw garantiebewijs. U kunt alleen een beroep doen op de bovenschreven garantie tegen overlegging van de aankoopbon (factuur, kassabon of kwitantie), in combinatie met de identificatiekaart, waarop typenummer en serienummer zijn vermeld. Uit de aankoopbon dienen duidelijk de aankoopdatum en de naam van de handelaar te blijken. Mocht het noodzakelijk zijn deze documenten aan uw handelaar af te geven, dan kunt u hem daarvoor een ontvangstbewijs vragen.

De garantie vervalt indien op de genoemde documenten iets is veranderd, doorgehaald, verwijderd of onleesbaar gemaakt. De garantie vervalt eveneens indien het typenummer en/of serienummer op het apparaat is veranderd, doorgehaald, verwijderd of onleesbaar gemaakt.

• Hoe te handelen bij een storing?

Om onnodige kosten te voorkomen, raden wij u aan bij storingen eerst nauwkeurig de gebruiksaanwijzing te lezen. Indien de gebruiksaanwijzing daarin geen uitkomst biedt, kunt u uw handelaar raadplegen en/of hem het apparaat ter reparatie aanbieden.

• ...en bij problemen?

Bij problemen omtrent de garantie-uitvoering kunt u zich in verbinding stellen met **Philips Nederland B.V., Afdeling Consumentenbelangen, Antwoordnummer 500, 5600 VB EINDHOVEN** (postzegel niet nodig), of ☎ 040-78 11 78.

GARANTIE FÜR DIE SCHWEIZ

Philips-Geräte sind aus einwandfreiem Material und mit großer Sorgfalt hergestellt worden. Dieses Gerät wird Ihnen gute Dienste leisten, sofern es sachgemäß bedient und unterhalten wird.

Trotz aller Sorgfalt ist das Auftreten von Fehlern nicht ganz auszuschließen. Im Falle eines Defektes wenden Sie sich bitte unter Vorlage des Einkaufsbeleges und des Gerätepasses an das Fachgeschäft, in welchem Sie das Gerät erworben haben.

GARANTIE POUR LA SUISSE

Les appareils Philips ont été fabriqués au moyen de matériaux de toute première qualité et avec beaucoup de soins. Cet appareil vous donnera encore plus de satisfaction si l'utilisation et l'entretien sont suivis selon le mode d'emploi. Malgré tous les soins apportés, l'apparition de défauts n'est pas exclue. Dans ce cas, nous vous serions reconnaissants de bien vouloir vous adresser directement chez votre vendeur muni du passeport de l'appareil ainsi que de la facture s'y reportant.

GARANZIA PER LA SVIZZERA

Gli apparecchi Philips sono prodotti con materiali di prima qualità e assemblati con la massima cura. Essi Vi offriranno un ottimo servizio, in cambio di un accurato uso e manutenzione.

Malgrado tutti i nostri sforzi, non è escluso che possano avvenire dei guasti. In caso di difetto Vi preghiamo di rivolgerVi al Vostro fornitore specializzato, portando con Voi il passaporto assieme ai documenti d'acquisto.

GARANTI OG SERVICE FOR DANMARK

De er nu ejer af et apparat, hvis konstruktion er baseret på erfaring og lang tids forskning. Philips garanterer for kvaliteten, og hvert led i fabrikationen er underkastet stadig kontrol. Alle henvendelser om fejl under garantien skal rettes til den forhandler, der har udleveret og underskrevet garanti/beviset, hvorpå de gældende garanti/bestemmelser tillige er anført. Garantien er kun gældende i købslandet.

GARANZIA E ASSISTENZA VALIDE PER L'ITALIA

Questo apparecchio è stato realizzato con materiali di prima qualità e costruito con la massima cura. La Philips comunque fornisce all'acquirente una Garanzia di buon funzionamento secondo le condizioni stabilite dall'**ANIE**. Tale Garanzia decorre dalla data di acquisto ed ha la durata di **6 mesi**. Per aver diritto alla Garanzia è necessario che questo certificato riporti i dati di Modello e Matricola dell'apparecchio, la data di acquisto ed il timbro del rivenditore, inoltre per tutti gli apparecchi per i quali è prevista la "ricevuta fiscale" (o altro documento di consegna) il documento stesso dovrà essere conservato con questo certificato a certificazione della data d'acquisto.

In caso di necessità il prodotto dovrà essere fatto pervenire al Centro di Assistenza più vicino il cui recapito è pubblicato sugli elenchi telefonici della zona di residenza alla voce Philips.

Per questo apparecchio Philips offre un Abbonamento all'Assistenza Tecnica. Per informazioni rivolgersi ai Centri di Assistenza o al servizio Consumatori Philips.

Philips S.p.A., Viale le Fulvie Testi 327, 20162 MILANO, ☎ 1678-20026

CONDIÇÕES VÁLIDAS PARA PORTUGAL

A Philips Portuguesa, SA, assegura ao comprador deste aparelho garantia contra qualquer defeito de material ou fabrico, pelo prazo de 6 meses, contado a partir da data de aquisição. As agulhas de fonocaptores não têm qualquer garantia.

A Philips Portuguesa, SA, anula a garantia ao aparelho desde que se verifique ser a deficiência motivada por acidente, utilização incorrecta, causas externas, ou nos casos em que apresente vestígios de ter sido violado, ajustado ou reparado por entidade não autorizada. Também será considerada nula a garantia se este certificado apresentar rasuras ou alterações.

A Philips Portuguesa, SA, obriga-se a prestar a garantia referida somente nos seus Serviços Técnicos ou nos Concessionários de Serviço autorizados. As despesas e riscos de transporte de e para as oficinas serão sempre da responsabilidade do comprador.

Nota: Para que o aparelho seja assistido ao abrigo da garantia, é indispensável que seja apresentado este certificado, devidamente preenchido e autenticado, por vendedor autorizado, aquando da sua aquisição.

Se sobre esta garantia necessitar algum esclarecimento que o vendedor não lhe possa dar, deve dirigir-se a:

Philips Portuguesa, SA,

— **Outurela - Carnaxide - 2795 LINDA A VELHA - ☎ 418 00 71/9**

— **R. Eng. Ezequiel de Campos, 182 - 4100 PORTO - ☎ 67 26 13**

PHILIPS IBÉRICA, S.A.E.

Garantiza este aparato durante 6 meses, a partir de la fecha de adquisición, de la forma siguiente:

1. Cubriendo cualquier defecto de fabricación o vicio de origen, así como la totalidad de sus componentes, incluyendo la mano de obra necesaria para el reemplazo de las piezas defectuosas, por nuestros talleres autorizados.
2. Esta garantía no cubrirá la avería, si es consecuencia de incorrecta instalación del aparato, manifiesto mal trato o uso inadecuado del mismo. La calificación de las averías corresponderá únicamente a los servicios técnicos de los talleres autorizados Philips.
3. Las reparaciones que pudieran producirse durante el período de vigencia de la presente garantía se efectuarán, bien en el domicilio del usuario, bien en los talleres autorizados Philips, a libre elección y criterio de ésta última.
4. Transcurrido un mes desde la fecha de adquisición del aparato, todos los gastos de desplazamiento del personal técnico para proceder al examen y/o reparación del aparato correrán por cuenta del usuario de acuerdo con las tarifas establecidas para este concepto.
5. En todas las reparaciones se deberá acompañar al aparato factura de compra y la presente garantía debidamente cumplimentada, con la indicación exacta de la fecha de venta del aparato.
6. En todo caso, el titular de la garantía tiene los derechos mínimos reconocidos por la Ley

Titular (Comprador)

Domicilio

GARANTÍA PARA MÉXICO

Este aparato está fabricado con materiales de alta calidad y ha sido cuidadosamente verificado. Philips, por lo tanto, da a usted una garantía de 12 meses a partir de su fecha de compra.

La garantía ampara la reposición de las piezas defectuosas debidas a fallas en su montaje o en los materiales, incluyendo la mano de obra necesaria para su remplazo en nuestras Sucursales o talleres autorizados.

En caso de fallas en su aparato le rogamos se sirva poner en contacto con su distribuidor.

Esta garantía no cubrirá las averías que resulten como consecuencia de una instalación incorrecta del aparato, manifiesto maltrato o uso inadecuado del mismo.

Philips se obliga a reparar y devolver a usted su aparato en un plazo no mayor de 30 días hábiles contados a partir de la fecha de haber ingresado su aparato a uno de nuestros talleres.

Para que esta garantía sea válida, es necesario que el certificado que figura en la parte posterior de este instructivo haya sido debidamente llenado en el momento de la compra del aparato.

En caso de extravío del certificado con la presentación de la factura o remisión de su aparato podrá hacer efectiva la garantía correspondiente.

Si usted tiene alguna duda o pregunta que no le pueda solucionar su distribuidor, por favor ponerse en contacto con:
**Oficinas Centrales de Servicio, Av. Coyoacán No. 1051, Col. del Valle,
03100 MÉXICO, D.F. - ☎ 5-75-20-22 o 5-75-01-00**

COM

GARANTI I NORGE

De er nå eier av et apparat som er basert på lang tids forskning og erfaring.

Philips garanterer for kvaliteten, men hvis en feil skulle oppstå bes De ta kontakt med den forhandler som har utlevert og underskrevet garantibeviset.

Garantien gjelder kun i kjøpslandet hvor de gjeldende garantibestemmelser må følges.

Hvis De trenger ytterligere opplysninger utover de forhandleren kan gi Dem, kan De henvende Dem til:

Norsk A/S Philips, Avd. Audio/Video, Sandstuveien 70, OSLO 6 - ☎ 02 - 68 02 00

TAKUO JA HUOLTO

Tämän tuotteen rakenne on pitkäaikaisen, kokemuksella tehdyn tutkimustien tulos. Jatkuvan eri tuotantovaiheissa tehtävän laatuarkkailun vuoksi Philips takaa tuotteensa laadun.

Tarkemmat tiedot takuuehdoista saat Philips-myyjältä tai alla olevasta osoitteesta.

Oy Philips AB, Sinikalliontie 3, 02630 ESPOO - ☎ (358-0)-50261

☎ Oy Philips AB, P.O. Box 75, 02631 ESPOO

ΠΛΗΡΟΦΟΡΙΕΣ ΓΙΑ SERVICE ΚΑΙ ΕΓΓΥΗΣΗ ΣΤΗΝ ΕΛΛΑΔΑ

Η συσκευή έχει ελεγχθεί σχολαστικά, η λειτουργία της είναι άριστη και λόγος αντικαταστάσεώς της δεν πρόκειται σε καμιά περίπτωση να προκύψει. Αν όμως, παρ'όλα αυτά, κάποιο εξάρτημα δεν λειτουργήσει, το εξάρτημα αυτό και η εργασία επισκευής παρέχονται από την Εταιρία δωρεάν. Η προσκομιζόμενη για επισκευή συσκευή πρέπει να συνοδεύεται απαραίτητα από το ΔΕΛΤΙΟ ΛΙΑΝΙΚΗΣ ΠΩΛΗΣΕΩΣ, η φωτοτυπία του, και το παρόν έντυπο συμπληρωμένο και σφραγισμένο από το κατάστημα αγοράς του.

Η εγγύηση ισχύει για ΕΝΑ έτος, από την ημερομηνία αγοράς.

Η εγγύηση δεν ισχύει στις παρακάτω περιπτώσεις:

- Για ανωμαλία όχι από βλάβη της συσκευής, αλλά από φθορά ή βλάβη, που προκλήθηκε από τρίτους ή από μεταβολή της τάσεως του ηλεκτρικού ρεύματος.
- Για ανωμαλία λόγω ελαττωματικής εγκαταστάσεως της συσκευής.
- Όταν ο αριθμός κατασκευτής της συσκευής έχει αλλοιωθεί.
- Για κεφαλές pick-up και μικρόφωνα.

Η εργασία επισκευής γίνεται στα Εργαστήρια της Εταιρίας, όπου ο πελάτης πρέπει να μεταφέρει τη συσκευή με δική του δαπάνη.

Κανένας αντιπρόσωπος δεν έχει το δικαίωμα αλλαγής των όρων εγγυήσεως. Μετά τη λήξη του χρόνου εγγυήσεως, για κάθε πρόβλημα συντηρήσεως, επισκευής ή συμβουλής, σας συνιστούμε να αποτινείσθε στα κατά τόπους Service της Εταιρίας.

Διεύθυνση Κεντρικών SERVICE PHILIPS:

25ης Μαρτίου 15, 177 78 Ταύρος - ☎ 4894.911

Τημική 62, 546 93 Θεσσαλονίκη - ☎ 260 - 621

the 1990s, the number of people in the world who are illiterate has increased from 1.2 billion to 1.5 billion (UNESCO 2003).

There are a number of reasons for this increase. One of the main reasons is that the population of the world is growing rapidly. In 1990, the world population was 5.3 billion. In 2003, it was 6.1 billion (UNESCO 2003).

Another reason is that the number of people who are illiterate is increasing in many developing countries. In 1990, the number of illiterate people in developing countries was 1.1 billion. In 2003, it was 1.4 billion (UNESCO 2003).

There are a number of reasons for this increase. One of the main reasons is that the population of these countries is growing rapidly. In 1990, the population of developing countries was 4.5 billion. In 2003, it was 5.3 billion (UNESCO 2003).

Another reason is that the number of people who are illiterate is increasing in many of these countries. In 1990, the number of illiterate people in developing countries was 1.1 billion. In 2003, it was 1.4 billion (UNESCO 2003).

There are a number of reasons for this increase. One of the main reasons is that the population of these countries is growing rapidly. In 1990, the population of developing countries was 4.5 billion. In 2003, it was 5.3 billion (UNESCO 2003).

Another reason is that the number of people who are illiterate is increasing in many of these countries. In 1990, the number of illiterate people in developing countries was 1.1 billion. In 2003, it was 1.4 billion (UNESCO 2003).

There are a number of reasons for this increase. One of the main reasons is that the population of these countries is growing rapidly. In 1990, the population of developing countries was 4.5 billion. In 2003, it was 5.3 billion (UNESCO 2003).

Another reason is that the number of people who are illiterate is increasing in many of these countries. In 1990, the number of illiterate people in developing countries was 1.1 billion. In 2003, it was 1.4 billion (UNESCO 2003).

There are a number of reasons for this increase. One of the main reasons is that the population of these countries is growing rapidly. In 1990, the population of developing countries was 4.5 billion. In 2003, it was 5.3 billion (UNESCO 2003).

Another reason is that the number of people who are illiterate is increasing in many of these countries. In 1990, the number of illiterate people in developing countries was 1.1 billion. In 2003, it was 1.4 billion (UNESCO 2003).

There are a number of reasons for this increase. One of the main reasons is that the population of these countries is growing rapidly. In 1990, the population of developing countries was 4.5 billion. In 2003, it was 5.3 billion (UNESCO 2003).

 
Another reason is that the number of people who are illiterate is increasing in many of these countries. In 1990, the number of illiterate people in developing countries was 1.1 billion. In 2003, it was 1.4 billion (UNESCO 2003).

There are a number of reasons for this increase. One of the main reasons is that the population of these countries is growing rapidly. In 1990, the population of developing countries was 4.5 billion. In 2003, it was 5.3 billion (UNESCO 2003).

Another reason is that the number of people who are illiterate is increasing in many of these countries. In 1990, the number of illiterate people in developing countries was 1.1 billion. In 2003, it was 1.4 billion (UNESCO 2003).

There are a number of reasons for this increase. One of the main reasons is that the population of these countries is growing rapidly. In 1990, the population of developing countries was 4.5 billion. In 2003, it was 5.3 billion (UNESCO 2003).

Another reason is that the number of people who are illiterate is increasing in many of these countries. In 1990, the number of illiterate people in developing countries was 1.1 billion. In 2003, it was 1.4 billion (UNESCO 2003).

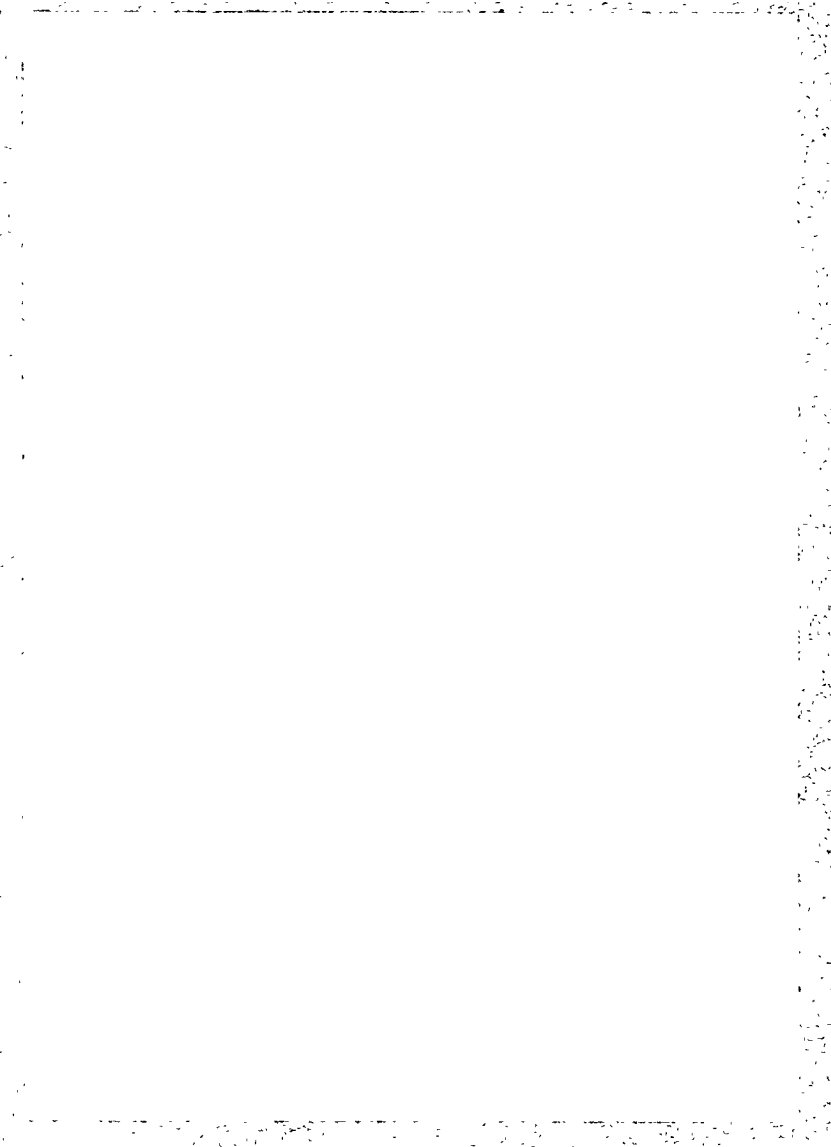

**Guarantee certificate
Identificatiekaart
Certificado de garantia**

**Certificat de garantie
Certificato di garanzia
Takuutodistus**

**Garantieschein
Garantibeviset
Εγγύηση**

Type Plate

Date of purchase – Date d'achat – Kaufdatum – Koopdatum - Fecha de compra
Data da compra – Data di acquisto Købsdato - Kjøpedato – Inköpsdato – Ostopäivä
Ημερομηνία αγοράς _____ **19**

Dealer's name, address and signature
Nom, adresse et signature du revendeur
Name, Anschrift und Unterschrift des Händlers
Naam, adres en handtekening van de handelaar
Nombre, dirección y firma del distribuidor
Nome, indirizzo e firma del fornitore
Nome, morada e assinatura do vendedor
Forhandlerens navn, adresse og underskrift
Återförsäljarens namn, adress och namnteckning
Myyjän nimi, osoite ja allekirjoitus
Όνομα/Επώνυμο αντιπροσώπου

