 


# PHILIPS **MAGNAVOX**

AZ 7275 Portable Compact Disc Player

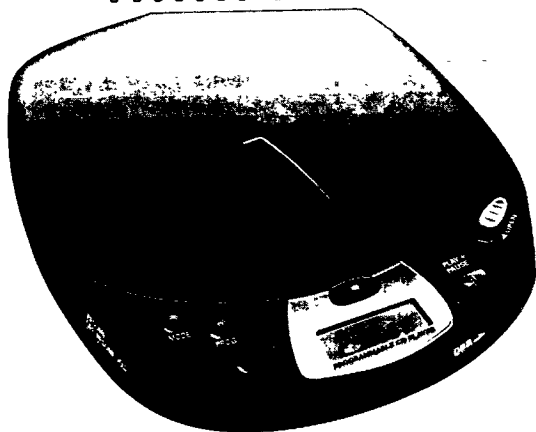

Owner's Manual  
Mode d'emploi  
Instructivo de manejo

**Toll Free Help Line**  
Ligne d'assistance en service libre  
Línea de ayuda telefónica sin cargo

**800-531-0039**



**Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.**

- Once your Philips Magnavox purchase is registered, you're eligible to receive all the privileges of owning a Philips Magnavox product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

### Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips Magnavox warranty.

 
### Owner Confirmation


Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.


### Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these *safety* symbols

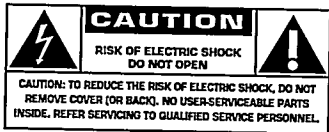

 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

#### For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.



Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

  MAC5097

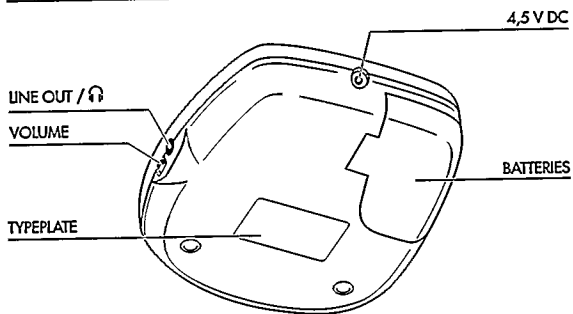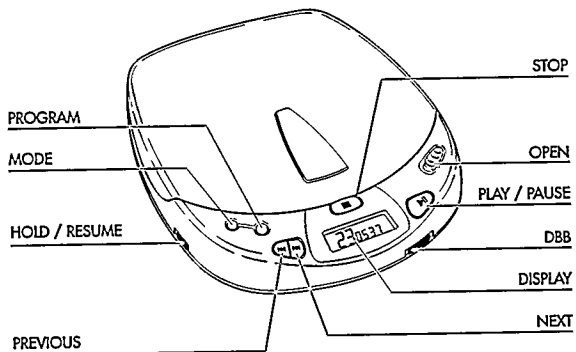

## Canada



**English:** This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

**Français:** Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

## Mexico

NOM

Es necesario que lea cuidadosamente su instructivo de manejo.

|  |  |   |
|--|--|---|
|   | <b>PRECAUCIÓN - ADVERTENCIA</b><br>No abrir, riesgo de choque eléctrico                      |  |
|  | <b>ATENCIÓN</b><br>Verifique que el voltaje de alimentación sea el requerido para su aparato |   |
| Para evitar el riesgo de choque eléctrico, no quite la tapa.<br>En caso de requerir servicio, dirijase al personal calificado. |  |   |

|                |                    |       |                           |       |
|----------------|--------------------|-------|---------------------------|-------|
| <b>English</b> | Controls .....     | 8     | Operation .....           | 12-16 |
|                | Accessories .....  | 9     | General information ..... | 17    |
|                | Power Supply ..... | 9     | Troubleshooting .....     | 18-19 |
|                | Connections .....  | 10-11 |                           |       |

**English**

|                 |                    |       |                      |       |
|-----------------|--------------------|-------|----------------------|-------|
| <b>Français</b> | Commandes .....    | 24    | Fonctionnement ..... | 28-32 |
|                 | Accessoires .....  | 25    | Généralités .....    | 33    |
|                 | Alimentation.....  | 25    | Recherche des        |       |
|                 | Branchements ..... | 26-27 | pannes .....         | 34-35 |

**Français**

|                |                   |       |                          |       |
|----------------|-------------------|-------|--------------------------|-------|
| <b>Español</b> | Mandos .....      | 40    | Funcionamiento.....      | 44-48 |
|                | Accesorios.....   | 41    | Información general..... | 49    |
|                | Alimentación..... | 41    | Detección de             |       |
|                | Conexiones.....   | 42-43 | anomalías.....           | 50-51 |

**Español**

|                        |       |
|------------------------|-------|
| Limited Warranty ..... | 20-21 |
| Garantie Limitée.....  | 36-37 |
| Garantía Limitada..... | 52-53 |

# PHILIPS MAGNAVOX



## ***Congratulations on your purchase, and welcome to the "family!"***

Dear Philips Magnavox product owner:

Thank you for your confidence in Philips Magnavox. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the Philips Magnavox "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a Philips Magnavox product.


Sincerely,

Robert Minkhorst  
President and Chief Executive Officer

**P.S. Remember, to get the most from your Philips Magnavox product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!**

## SAFETY INSTRUCTIONS – Read before operating equipment

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

- 1. Read Instructions** – All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions** – The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow Instructions** – All operating and use instructions should be followed.
- 5. Water and Moisture** – The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
- 6. Carts and Stands** – The appliance should be used only with a cart or stand that is recommended by the manufacturer.
  - 6A.**  An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 7. Wall or Ceiling Mounting** – The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 8. Ventilation** – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 9. Heat** – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 10. Power Sources** – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 11. Power-Cord Protection** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
- 12. Cleaning** – The appliance should be cleaned only as recommended by the manufacturer.
- 13. Power Lines** – An outdoor antenna should be located away from power lines.
- 14. Nonuse Periods** – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- 15. Object and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- 16. Damage Requiring Service** – The appliance should be serviced by qualified service personnel when:
  - A.** The power-supply cord or the plug has been damaged; or
  - B.** Objects have fallen, or liquid has spilled into the appliance; or
  - C.** The appliance has been exposed to rain; or
  - D.** The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E.** The appliance has been dropped, or the enclosure damaged.
- 17. Servicing** – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

# CONTROLS

please refer to the illustration on page 3

English

- DISPLAY**.....Window for showing the different playing modes, tracks and times
- ▶▶.....Button for selecting the next music track or, if held down, for searching forward for a particular passage on the CD
- ◀◀.....Button for selecting the previous music track or, if held down, for searching-backward for a particular passage on the CD
- VOLUME**.....Control for adjusting the volume at the headphone output
- RESUME/HOLD**.....Switch for activating the RESUME function (resuming CD play) and/or HOLD (blocking all buttons) function
- MODE** ○.....Button for selecting the different playing modes:  
SHUFFLE→SHUFFLE REPEAT ALL→REPEAT 1→REPEAT ALL  
→SCAN→off
- PROG P**.....Button for storing tracks in a program and for reviewing the program
- DBB**.....**Dynamic Bass Boost:** Switch for boosting the bass response
- STOP** ■.....Button for stopping CD play, deleting various settings, switching off the CD player.
- OPEN**.....Slide control for opening the lid of the CD player
- ▶||.....Button for starting and pausing CD play
- LINE OUT** / ⚡.....Headphone socket (3.5 mm)
- 4.5 V DC**.....Socket for external power supply (4.5 V/400 mA Direct current, plus-pole to the center pin)
- Battery compartment** for inserting batteries

## CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.

*The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10.*

*Operation is subject to the following two conditions:*

- 1. This device may not cause harmful interference, and*
- 2. This device must accept any interference received, including interference that may cause undesired operation.*



**Accessories**

*(supplied or optionally available from your dealer or your Service Center)*

*Note: Please ask your dealer for detailed information since not all accessories may be available in your country.*

**Accessories for power supply**

AY 3160 power adapter 4.5 V/400 mA Direct current, plus-pole to the center pin

*Note: Use only the AY 3160 adapter, other products may damage the set.*

**Car accessories**

AY 3545 - car voltage converter (4.5 V/600 mA, Direct Current, plus-pole to the center pin)

AY 3501 - car adapter cassette

 
**Batteries, type LR6, UM3 or AA (supplied or optionally available)**

- Open the battery compartment and insert 2 alkaline batteries.


Typical playing times under normal conditions:

Alkaline batteries: 6 hours

- Remove the batteries if they are dead or the CD player is not to be used for a long time.

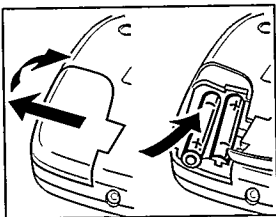

*Note:*

*-Dead batteries:  -symbol lights up. Replace or recharge the batteries or connect the power adapter.*

***Batteries contain chemical substances, therefore they should be disposed of properly.***

# CONNECTIONS

 
## Recharging of Philips Magnavox battery pack on board (supplied or optionally available)

The battery pack (NiCad) will be recharged if the power adapter is connected.  
Approximate charging time: 14 hours


### Notes:

- When using rechargeable batteries, we advise the use of the Philips Magnavox battery pack only, as conventional separate Nickel-Cadmium batteries cannot be recharged on board.
- Disconnect the power adapter or remove the battery pack after recharging it.

## Connecting headphones (supplied)

- Connect the supplied headphones (16 ohms/ 3.5mm jack plug) to the LINE OUT /  jack.

 *Note : Use this jack also for connecting your HiFi system (signal lead) or your car radio (adapter cassette or signal lead). In both cases, the volume of the CD player has to be set to position 6-8.*

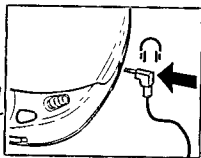

### Use your head when using headphones

 
**Hearing safety:** Do not play your headphones at a high volume. Hearing experts advise that continuous use at high volume can permanently damage hearing.


**Traffic safety:** Do not use headphones while driving a vehicle. It may create a hazard and it is illegal in many countries. Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you cannot hear what is going on around you.

# CONNECTIONS


## Connections for in-car use (supplied or optionally available)

- 1 Find a safe place for the CD player on a horizontal, vibration-free, stable surface where there is no danger to or in the way of the driver or passengers.
- 2 Connect the DC plug of the voltage converter to the DC socket of your CD player

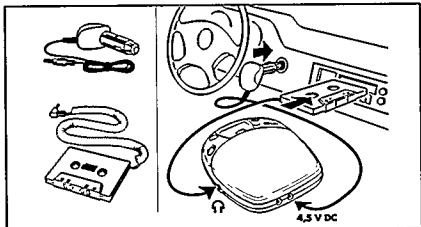

- (only for a 12 V car battery, negative grounding).**
- 3 Plug the voltage converter into the cigarette lighter socket. If necessary, clean the cigarette lighter socket to obtain a good electrical contact.
  - 4 Turn down the volume and **switch off the auto-reverse function (if present) of your car radio's cassette player.**
  - 5 Connect the adapter cassette plug to the LINE OUT /  socket of the CD player.
  - 6 Slide the adapter cassette carefully into the car radio's cassette compartment.
  - 7 Make sure that the cord does not hinder your driving.
  - 8 Start the CD player, set its volume to position 6-8 and adjust the sound with the car radio controls.
- To remove the adapter cassette press the eject button of the car radio.
  - Always remove the voltage converter from the cigarette lighter socket when the CD player is not in use.


### Notes on In-car Use:

 - Avoid excessive heat from the car heater or from direct sunlight (e.g., in a parked car in the summer).
- If your car radio has a LINE IN jack, it is best to use it for the car radio connection instead of the adapter cassette. Connect the signal lead to this LINE IN jack and to the LINE OUT /  jack of the CD player.

# OPERATION


## Inserting the CD

- Push gently on the CD center so that it fits onto the hub.

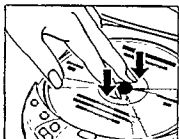

## Removing the CD

 
- Hold the CD by its edge and press the hub gently.

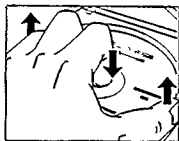

## Playing a CD

- 1 Open the lid by pushing the OPEN slide control to the side.

 
- 2 Insert an audio CD, printed side up. Close the lid by pushing down on the right-hand side.

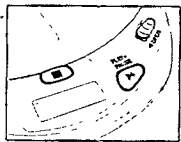

- 3 Press the ►|| button to start CD play.

→ Display indication of: (example)

 4 = current track / 2:56 = elapsed time of current track



- 4 Adjust the sound using the controls VOLUME and DBB.


- 5 You can interrupt CD play by pressing the ►|| button. Continue CD play by pressing the ►|| button again.

→ Display indication of: time of the current position (flashing).

- 6 Press the STOP ■ button to stop CD play.

→ Display indication of: (example)

 17 = total number of tracks / 51:06 = total playing time




- If you press the STOP ■ button again, you will switch off the set.

*Note: If no button is pressed for 90 seconds, the set will switch off automatically.*



## Selecting another track

 - Briefly press the **⏮** or **⏭** button once/several times to skip to the beginning of the current/previous or next track(s).
  - Display indication of: selected track number.
  - During play: CD play continues automatically with the selected track.
  - In stop position: press the **▶||** button to start CD play.

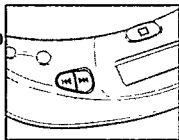

## Searching for a passage during CD play

 
- 1 Hold down the **⏮** or **⏭** button to find a particular passage in forward or reverse direction.
  - After 2 seconds, searching will start at high speed.
- 2 Release the button when you have reached the desired passage.

*Note: Searching is only possible within the particular track when you are in one of these modes: SHUFFLE, REPEAT 1 or PROGRAM. Searching is not possible in the SCAN mode.*

# OPERATION

## MODE ○ – different playing modes

- By pressing the MODE ○ button, you can successively activate the playing modes:

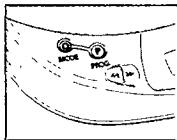

**SHUFFLE:** The tracks are played *in random order* until all of the tracks have been played once.

**SHUFFLE REPEAT ALL:** All tracks are played *repeatedly in random order* until you leave this mode.

**REPEAT 1:** The track is played *repeatedly* until you leave this mode.

**REPEAT ALL:** The CD is played *repeatedly* until you leave this mode.

**SCAN:** Each track is played for 10 seconds until you leave this mode or until all tracks have been played once.

- ➔ The selected playing mode is indicated in the display.
- ➔ During play: CD play continues automatically with the selected playing mode.
- ➔ In stop position: press the ►|| button to start CD play.


### Notes:

 - You can choose from 12 different playing modes when you combine all the above-mentioned modes with PROGRAM.
- Deactivate all modes with the MODE ○ button.

## PROG – programming of tracks (max. 15 tracks)


- 1 Select the desired track with PREV ◀◀ or NEXT ▶▶.
- 2 As soon as the desired track is displayed, press the PROG button to store the track in the memory.

→ Display indication of: track number  
/ P / total number of stored tracks, e.g.



### Notes:

 - When you try to store more than 15 tracks, the display indicates *FULL*.
- When you press PROG and there is no track selected, the display indicates *SELECT*.



### Playing the program:

- If you have selected the tracks in STOP mode, press the PLAY/PAUSE ▶|| button.
- If you have selected the tracks during CD play, first press STOP ■ and then the PLAY/PAUSE ▶|| button.
  - Display indication: PROGRAM.
  - Your program will be played in the selected playing mode (e.g. shuffle).

### Reviewing the settings:

- Press the PROG button for more than 2 seconds.
  - Display indication: each stored track successively flashes briefly.

### Erasing the program in STOP mode:

 
- Press the STOP ■ button to erase the program.
  - PROGRAM disappears on the display and your program is erased.
  - *CLERR* lights up briefly on the display.

*Note: Interrupting the power supply or opening the lid will also erase the program.*

# OPERATION

## DBB


- Activate DBB by sliding the DBB switch to the right.

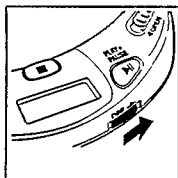

## RESUME / HOLD

### RESUME – playing from where you have stopped

 - Activate the RESUME feature by sliding the RESUME/HOLD switch to the middle.
- If you stop CD play by pressing the STOP ■ button, the last played position will be stored.
- Press ►|| to resume CD play from the position where it was stopped.

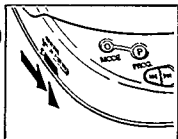

### HOLD – deactivating all buttons

- Activate the HOLD feature by sliding the RESUME/HOLD switch to the far right.
  - ➔ Now all buttons are deactivated and will not function until you switch the feature off again. If you press a button (except OPEN), the display will indicate HOLD.

### Notes:

-In the hold position, the resume function is automatically activated.

 
 
-Do not open the lid as this erases the information about the last position played.



# GENERAL INFORMATION

## Maintenance

- The lens (X) of the CD player should never be touched!
- Do not expose the CD player, batteries or CDs to rain, dampness, sand, dust, excessive heat caused by heating equipment, or direct sunlight.
- The lens may cloud over when the set is suddenly moved from cold to warm surroundings. Playing a CD is not possible then. Leave the CD player in a warm environment until the moisture evaporates.
- You can clean the CD player with a soft and slightly dampened chamois leather. Do not use any cleaning agents as they may have a corrosive effect.
- Always pick up the CD by the edge and put it back in its box after use.
- To clean the CD, wipe it in a straight line from the center toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc!
- When a new CD does not stay on the hub, this is caused by small burrs around the center hole of the CD. Remove the burrs by rubbing the edge of the center hole with a pen or similar instrument.

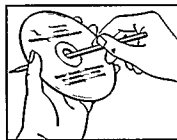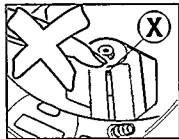


## Environmental information

Please observe the local regulations regarding the disposal of packing materials, exhausted batteries and obsolete equipment.

- All redundant packaging material has been omitted. We have tried to make the packaging easy to separate into three mono-materials: cardboard (box), expandable polystyrene (buffer), and polyethylene (bags, protective foam sheet).
- Your set consists of materials which can be recycled if disassembled by a specialized company.
- Do not dispose of exhausted batteries with your household waste.

# TROUBLESHOOTING

- If a fault occurs, please check the points listed below before taking your set for repair.
- If you are not able to remedy a problem by following these hints, consult your dealer or service facility.

| <b>PROBLEM</b>   | <b>POSSIBLE CAUSE</b>  | <b>SOLUTION</b>  |
|--|--|--|
| <b>No power or no CD play start</b>  | <b>Batteries</b>   |  |
|  | Batteries incorrectly inserted                                 | Insert the batteries correctly                                 |
| <b>Display: no indication</b>  | Use of new batteries   | Press ►►   |
|  | Batteries are empty  | Change/recharge the batteries                                  |
|  | Contact pins are dirty   | Clean them with a cloth  |
|  | <b>Power adapter</b>   |  |
|  | Loose connection   | Connect the adapter securely                                   |
| <b>In car use</b>  |  |  |
|  | Cigarette lighter is not powered when ignition is switched off | Switch on ignition or insert batteries                         |
|  <b>CD play does not start or interrupts</b> | <b><i>HOLD feature is activated</i></b>                        | <b><i>Switch off the HOLD feature</i></b>                      |
|  | CD lid is not closed securely                                  | Close the lid securely   |
|  | Moisture condensation  | Leave the player in a warm place until the moisture evaporates |
| <b>Display: no indication</b><br><i>or no disc</i>   | CD is not or incorrectly inserted                              | Insert a CD, label facing up                                   |
|  | CD is badly scratched  | Use another CD   |
|  | CD is dirty  | Clean the CD   |
| <b>Battery-recharging on board does not work, no CHARGE-indication</b>   | Use of wrong batteries   | Only a battery pack can be recharged on board                  |
|  | Contacts are dirty   | Clean them with a cloth  |
| <b>Play does not start from the first track</b>  | RESUME or SHUFFLE or PROGRAM is activated                      | Switch off RESUME, SHUFFLE or PROGRAM                          |

# TROUBLESHOOTING

Under no circumstances should you try to repair the unit yourself, as this will invalidate the warranty.

| <b>PROBLEM</b>   | <b>POSSIBLE CAUSE</b>                                   | <b>SOLUTION</b>   |  |
|--|---|---|--|
| <b>No sound or bad sound quality</b>   | PAUSE is activated                                      | Press ►   |  |
|  | Loose or wrong connections                              | Check connections   |  |
|  | Volume is not turned up                                 | Adjust the volume   |  |
|  | Headphones worn the wrong way                           | Pay attention to the <b>L</b> (left) and <b>R</b> (right) indications |  |
|  | Headphone plug is dirty                                 | Clean the headphone plug  |  |
|  | Strong magnetic fields near the CD player               | Change the player's position or connections                           |  |
|  | Electrostatic discharge from the user via the CD player | Press ◀◀ or ▶▶ once or press ►   twice                                |  |
|  | <b>In car use</b>                                       |   |  |
|  | Strong vibrations                                       | Find another place for the set  |  |
|  | Adapter cassette is incorrectly inserted                | Insert the adapter cassette correctly                                 |  |
| Temperature inside car is too high/low   | Let the CD player adjust to the temperature             |   |  |
| Cigarette lighter/socket is too dirty  | Clean the cigarette lighter/socket                      |   |  |
| Wrong playback direction of the autoreverse feature of the car cassette player | Change the autoreverse direction                        |   |  |
| <b>Hum or noise in car</b>   | Unfit car radio input socket                            | Use the adapter cassette  |  |

## LIMITED WARRANTY

### PHILIPS MAGNAVOX PORTABLE COMPACT DISC

One Year Free Exchange

This product must be carried in for an exchange.

English

#### **WHO IS COVERED?**

You must have proof of purchase to exchange the product. A sales receipt or other document showing that you purchased the product is considered proof of purchase. Attach it to this owner's manual and keep both nearby.

#### **WHAT IS COVERED?**

Warranty coverage begins the day you buy your product. For one year thereafter, a defective or inoperative product will be replaced with a new, renewed or comparable product at no charge to you. A replacement product is covered only for the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

#### **WHAT IS EXCLUDED?**

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product that is used for commercial or institutional purposes.

#### **WHERE IS EXCHANGE AVAILABLE?**

You may exchange the product in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide a replacement product (although there may be a delay if the appropriate product is not readily available).

#### **BEFORE REQUESTING EXCHANGE...**

Please check your owner's manual before requesting an exchange. Adjustments of the controls discussed there may save you a trip.

---

Philips Service Company, P.O. Box 555,  
Jefferson City, Tennessee 37760, (423) 475-8869

**EXCHANGING A PRODUCT IN U.S.A.,  
PUERTO RICO OR U.S.VIRGIN ISLANDS...**

Contact your dealer to arrange an exchange. Or, ship the product, insured and freight prepaid, and with proof of purchase enclosed, to the address listed below.

Small Product Service Center  
Philips Service Company  
907 Snapps Ferry Road, Plant 2, Building 6  
Greeneville, TN 37743

(In U.S.A., Puerto Rico and U.S.Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

**EXCHANGING A PRODUCT IN CANADA...**

Please contact Philips at:

1-800-661-6162 (French Speaking)  
1-800-363-7278 (English Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

**TO GET OUT-OF-WARRANTY EXCHANGE...**

In U.S.A., Puerto Rico or U.S.Virgin Islands, contact Philips Service Company at (800) 851-8885 to obtain the cost of out-of-warranty exchange. Then carefully pack the product and ship it to the Small Product Service Center (address listed above). In Canada, call the phone number listed above under "Exchanging a Product in Canada" to obtain the cost of out-of-warranty exchange.

**REMEMBER...**

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # \_\_\_\_\_

SERIAL # \_\_\_\_\_

*This warranty gives you specific legal rights. You may have other rights  
which vary from state/province to state/province.*

---

# **PHILIPS CONSUMER ELECTRONICS COMPANY**

A Division of Philips Electronics North America Corporation  
Knoxville, Tennessee 37914-1810, U.S.A.



**CLASS 1  
LASER PRODUCT**