


3 Update software

Before you update the software of this player, check the current software version:

- Press **▲**, and then select [Setup] > [Advanced] > [Version information], and press OK .

Update software via USB

- 1 Check the latest software version on www.philips.com/support.
 - Search for your model and click on "Software and drivers".
- 2 Download the software into a USB storage device.
 - a Unzip the download, and make sure that the unzipped folder is named "UPG".
 - b Put the "UPG" folder in the root directory.

- 3 Connect the USB storage device to the  (USB) connector on this player.
- 4 Press **▲**, and select [Setup].
- 5 Select [Advanced] > [Software update] > [USB].
 - » If an upgrade media is detected, you are prompted to start the update.
- 6 Follow the instructions on the TV screen to update the software.
 - » When the update is complete, this player automatically turns off and on again.

Caution

- Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage this player.