

IMPORTANT NOTE for BDP2200/12 BDP2205/05/12 BDP2285/05/12/51/55/79/94/96/98/F8 X/77 X/78

Before upgrading the firmware to the latest version

- Check the current firmware version of your device first.
- Follow the below instructions step by step. Otherwise firmware upgrade would fail and the device may be permanently damaged.


If the current firmware version is below v1.52:

1. Upgrade the device to v1.52 through USB first:
 - i) Unzip the download file and there are 2 zip files inside.
 - ii) Choose the zip file v1.52 and unzip it in USB. Do not rename the UPG folder. Follow the upgrade procedure mentioned in later pages.
 - iii) Double check that firmware version is now v1.52.
2. **After** upgrading to v1.52, upgrade the set to the **latest firmware version** through USB:
 - i) Unzip the download file and there are 2 zip files inside.
 - ii) Choose the zip file with **the latest firmware version** and unzip it in USB. Do not rename the UPG folder. Follow the upgrade procedure mentioned in later pages.
 - iii) Double check that firmware version is now **the latest one**.


If the current firmware version is v1.52 or later:

1. Upgrade the set to **the latest firmware version** through USB.
 - i) Unzip the download file and there are 2 zip files inside.
 - ii) Choose the zip file with **the latest firmware version** and unzip it in USB. Do not rename the UPG folder. Follow the upgrade procedure mentioned in later pages.
 - iii) Double check that firmware version is now **the latest one**.

3 Update software


Before you update the software of this player, check the current software version: • Press , and then select [Setup] > [Advanced] > [Version information], and press OK .

Update software via the Internet

- 1 Connect the player to the Internet (see "Set up a network").
- 2 Press , and select [Setup].
- 3 Select [Advanced] > [Software update]> [Network] .
 - » If an upgrade media is detected, you are prompted to start the update.
- 4 Follow the instructions on the TV screen to update the software.
 - » When the update is complete, this player automatically turns off and on again.

Update software via USB

- 1 Check the latest software version on www.philips.com/support.
 - Search for your model and click on "Software and drivers".

- 2 Download the software into a USB storage device.
 - a Unzip the download, and make sure that the unzipped folder is named "UPG".
 - b Put the "UPG" folder in the root directory.
- 3 Connect the USB storage device to the (USB) connector on this player.
- 4 Press , and select [Setup].
- 5 Select [Advanced] > [Software update]> [USB].
 - » If an upgrade media is detected, you are prompted to start the update.
- 6 Follow the instructions on the TV screen to update the software.
 - » When the update is complete, this player automatically turns off and on again.



Caution

• Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage this player.