


## Updating the Software in your Blu-Ray player.

This software is for the BDP7502/F7 and BDP7502/F8.


The version after updating will be 1.15.01

## Checking Your Software version

Eject the disc if one is in the unit. The following menu will appear.

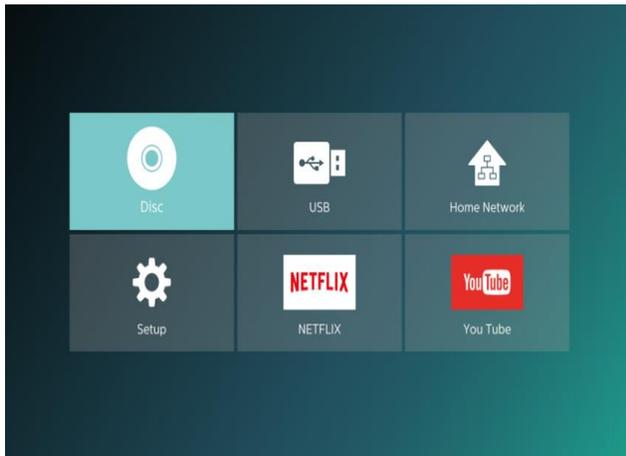

Cursor down to Setup and press the OK button on your remote.

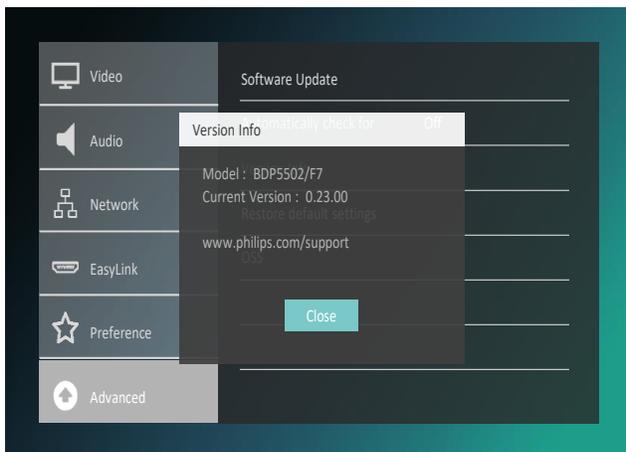

Select Advanced – Version Info, then press OK on your remote.

If your version is 1.15.01 or greater, you do not need to upgrade. The version shown is for reference only.

## Updating software

There are three ways to update software in this unit.

1. You can download the software and load it to a USB drive.
2. You can download the software and burn it to a CD.
3. You can update from the internet.

## Using a USB drive or CD

To use a USB drive or CD, download the software, then unzip the file to extract the \*.bin file.

### Loading the USB drive

1. The USB drive you use for the upgrade needs to meet the following criteria:
  - a. USB drive size should be 256 MB or larger, but no larger than 4GB.
  - b. USB drive should be clean formatted for FAT32 before you start the process.
  - c. Drives with U3 software are not supported. The U3 uninstall tool can be found here. <http://u3.sandisk.com/launchpadremoval.htm>
2. Most modern computers (operating systems) usually have Zip File extraction tools built-in, but in case yours does not, you can download and install 7-Zip or any other extraction tool to extract the Firmware Upgrade Package. 7-Zip can be found here: <http://7-zip.org/download.html>
3. Copy the \*.bin file to the root directory of the USB drive. An example of the root directory would be e:\.

### Creating a CD


To create a CD, you will need a CD burner drive on your computer. Load the \*.bin file to the root directory of the CD. Finalizing the CD is required for the player to recognize the disc.

The detailed instructions for loading are on the following page.


# FIRMWARE RENEWAL MODE

## Disc/USB Memory Stick Update

1. Turn the power on.
2. Insert the disc or USB Memory Stick for software update.
3. When inserted a disc, the following screen will be displayed.

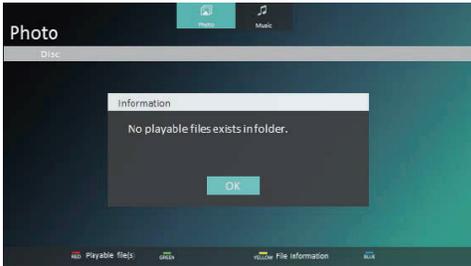


4. Press [HOME] button on the remote control unit.
5. Select Setup and press "OK".
6. Select - Advanced - Software update - Disc or USB.
7. Press "OK". The following screen will be displayed.

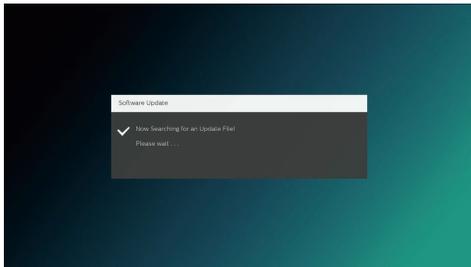

Search whether there's a proper Firmware. In the case of the Disc, it may take a few minutes. If the proper Firmware is found, to start the Update process.

8. The software update starts.

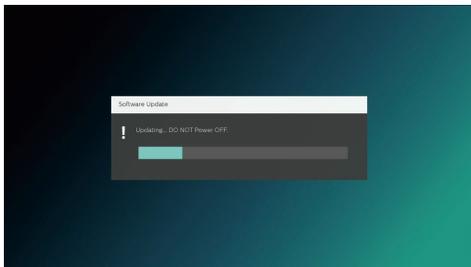


9. After the update, the power turns off and then turns back on automatically and "Power-On" LED lights. (In the case of Disc, after reading the Disc, will appear Media selection screen.) Remove the disc or USB Memory Stick from the unit.

### Notes:


- The setup setting configured before the update will be kept.
- Please not do any of the following during the software update.
  - Turn the power off.
  - Unplug the AC cord.
  - Remove the USB memory.
  - Remove the disc.

## NETWORK Update

1. Select Setup and press "OK".
2. Select - Advanced - Software update - Network.
3. Press "OK". The following screen will be displayed.

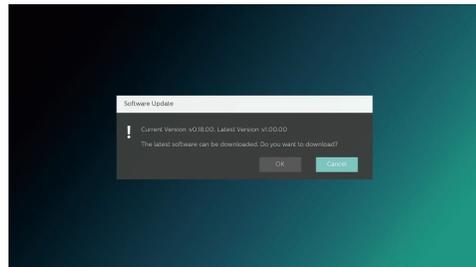

4. Press "OK". The software download starts.
5. When the download is complete, the software update will start.

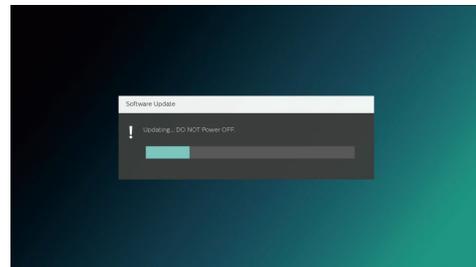

6. After the update, the power turns off and then turns back on automatically and "Power-On" LED lights.

### Notes:

- The setup setting configured before the update will be kept.
- Please not do any of the following during the software update.
  - Turn the power off.
  - Unplug the AC cord.
  - Disconnect the LAN cable, to disconnect the Network.

## Software History

Version	Date	Problem
1.15.01	03/01/18	> Dolby Vision activation added