

Firmware upgrade instructions for BM60

Step (A): Prepare the two folders for upgrading MCU and Wi-Fi firmware respectively

1. Download the firmware.
2. Unzip the downloaded file and unzip the 2 folders inside. There are 2 folders:
 - Upgrade_BM60_MCU V77
 - Upgrade_BM60_WiFi0204

Step (B): Upgrade the firmware for MCU:

1. Inside the folder “Upgrade_BM60_MCU V77” There are 2 files:
 - Philips_Izzy_BM60_MCU.bin
 - Philips_Izzy_Upgrade.txtSave all these files to the root directory of an empty USB stick.
2. Power on the device.
3. Select **USB** source.
4. Plug the USB stick into the USB socket (on the left side of the device).

Note:

DO NOT press any button, or unplug the USB stick, or interfere with the power supply until the upgrade is completed. Otherwise, the device would be damaged.

5. The device starts reading the USB stick. It displays “READING”. When it finishes reading, upgrade begins. “UPGRADE” would be displayed.
6. DO NOT remove the USB stick. Wait for a few minutes. At completion of firmware upgrade, ‘SUCCESS’ would be displayed.
7. Disconnect the AC power of the speaker.
8. Unplug the USB stick.
9. Connect AC power again and turn on the speaker.

Step (C): Upgrade the firmware for Wi-Fi:

1. Delete the files in (B) from the USB stick.
2. Inside the folder “Upgrade_BM60_WiFi0204” There are 2 files:
 - Philips_Izzy_WiFi.bin
 - Philips_Izzy_Upgrade.txtSave all these files to the root directory of the empty USB stick.
3. Repeat steps 2 to 9 in (B).

Step (D): Check the firmware versions of the device:

1. Power on the device.
2. Select **AUDIO IN** source.
3. Short press "Next" button.
4. Long press (Press and hold) "Play" button.
5. The display will show MCU version, the Wi-Fi FW version and finally the CD FW version.
6. Power off the device.